



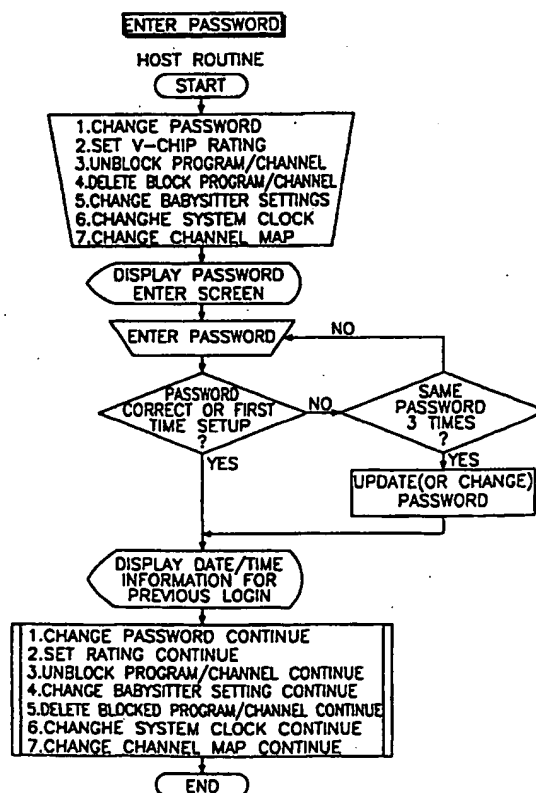
INTERNATIONAL APPLICATION PUBLISHED UNDER THE PATENT COOPERATION TREATY (PCT)

(51) International Patent Classification ⁶ : H04N 7/10		A1	(11) International Publication Number: WO 99/44361
			(43) International Publication Date: 2 September 1999 (02.09.99)
(21) International Application Number: PCT/US99/04133		(81) Designated States: AL, AM, AT, AU, AZ, BA, BB, BG, BR, BY, CA, CH, CN, CU, CZ, DE, DK, EE, ES, FI, GB, GD, GE, GH, GM, HR, HU, ID, IL, IN, IS, JP, KE, KG, KP, KR, KZ, LC, LK, LR, LS, LT, LU, LV, MD, MG, MK, MN, MW, MX, NO, NZ, PL, PT, RO, RU, SD, SE, SG, SI, SK, SL, TJ, TM, TR, TT, UA, UG, US, UZ, VN, YU, ZW, ARIPO patent (GH, GM, KE, LS, MW, SD, SL, SZ, UG, ZW), Eurasian patent (AM, AZ, BY, KG, KZ, MD, RU, TJ, TM), European patent (AT, BE, CH, CY, DE, DK, ES, FI, FR, GB, GR, IE, IT, LU, MC, NL, PT, SE), OAPI patent (BF, BJ, CF, CG, CI, CM, GA, GN, GW, ML, MR, NE, SN, TD, TG).	
(22) International Filing Date: 25 February 1999 (25.02.99)			
(30) Priority Data: 60/076,290 27 February 1998 (27.02.98) US 60/100,575 16 September 1998 (16.09.98) US 09/190,031 11 November 1998 (11.11.98) US 60/111,342 7 December 1998 (07.12.98) US 09/221,615 28 December 1998 (28.12.98) US			
(71) Applicant (for all designated States except US): GEMSTAR DEVELOPMENT CORPORATION [US/US]; 135 North Los Robles Avenue, Pasadena, CA 91101 (US).		Published With international search report.	
(72) Inventors; and (75) Inventors/Applicants (for US only): LEUNG, Wing, P. [US/US]; 1856 Oakwood Avenue, Arcadia, CA 91006 (US). YUEN, Henry, C. [US/US]; P.O. Box 438, Pasadena, CA 91102-0438 (US).			
(74) Agent: RAHN, LeRoy, T.; Christie, Parker & Hale, LLP, P.O. Box 7068, Pasadena, CA 91109-7068 (US).			

(54) Title: APPARATUS AND METHOD FOR PARENTAL CONTROL USING V-CHIP PLUS+ AND MASTER PASSWORD

(57) Abstract

A method and apparatus for exercising access control over television programs using a parental control interface that has different functions are provided. The method requires a password to enter into a master mode for obtaining unlimited access to all the functions of the parental control interface. Once in the master mode, the user may enter a criterion for blocking a television program from being viewed or recorded or the user can override an already blocked television program. Once a master password is entered, the system is in a Master Password mode until the TV is turned off, the user exits the VChip Plus+ mode, or a certain time delay expires. If a user, not in the master mode, attempts to watch or record a program that meets the blocking criterion and the program does not meet the overriding criterion, a prompt is provided to the user to enter the password. Upon entering a correct password, the program is unblocked.



FOR THE PURPOSES OF INFORMATION ONLY

Codes used to identify States party to the PCT on the front pages of pamphlets publishing international applications under the PCT.

AL	Albania	ES	Spain	LS	Lesotho	SI	Slovenia
AM	Armenia	FI	Finland	LT	Lithuania	SK	Slovakia
AT	Austria	FR	France	LU	Luxembourg	SN	Senegal
AU	Australia	GA	Gabon	LV	Latvia	SZ	Swaziland
AZ	Azerbaijan	GB	United Kingdom	MC	Monaco	TD	Chad
BA	Bosnia and Herzegovina	GE	Georgia	MD	Republic of Moldova	TG	Togo
BB	Barbados	GH	Ghana	MG	Madagascar	TJ	Tajikistan
BE	Belgium	GN	Guinea	MK	The former Yugoslav Republic of Macedonia	TM	Turkmenistan
BF	Burkina Faso	GR	Greece			TR	Turkey
BG	Bulgaria	HU	Hungary	ML	Mali	TT	Trinidad and Tobago
BJ	Benin	IE	Ireland	MN	Mongolia	UA	Ukraine
BR	Brazil	IL	Israel	MR	Mauritania	UG	Uganda
BY	Belarus	IS	Iceland	MW	Malawi	US	United States of America
CA	Canada	IT	Italy	MX	Mexico	UZ	Uzbekistan
CF	Central African Republic	JP	Japan	NE	Niger	VN	Viet Nam
CG	Congo	KE	Kenya	NL	Netherlands	YU	Yugoslavia
CH	Switzerland	KG	Kyrgyzstan	NO	Norway	ZW	Zimbabwe
CI	Côte d'Ivoire	KP	Democratic People's Republic of Korea	NZ	New Zealand		
CM	Cameroon			PL	Poland		
CN	China	KR	Republic of Korea	PT	Portugal		
CU	Cuba	KZ	Kazakstan	RO	Romania		
CZ	Czech Republic	LC	Saint Lucia	RU	Russian Federation		
DE	Germany	LI	Liechtenstein	SD	Sudan		
DK	Denmark	LK	Sri Lanka	SE	Sweden		
EE	Estonia	LR	Liberia	SG	Singapore		

1 APPARATUS AND METHOD FOR PARENTAL CONTROL USING V-CHIP PLUS+
AND MASTER PASSWORD

5 FIELD OF THE INVENTION

The present invention relates generally to television systems, and more particularly, to parental control of television receivers using a master password to effectuate a variety of access control functions.

10 BACKGROUND OF THE INVENTION

A system has been proposed in the United States and endorsed by the U.S. Congress commonly known as the V-Chip System. The system involves using the vertical blanking interval ("VBI") of a standard television signal to include a code which indicates one or more rating factors for the program then being aired. These rating factors can include ratings similar to those promulgated by the Motion Picture Association of America (e.g. G, PG, PG-13, R, NC-17) and numerical ratings of individual categories of program nature such as violence, language, nudity and sexual content. A consumer V-Chip television system would allow a consumer to program his or her television system to exclude programs according to their preferred levels of one or more of these rating criteria or alternatively could be programmed to permit only programs having certain levels of content according to these rating categories.

20 A problem with the V-Chip system, as recognized in an article by T. Atherton, entitled "Living With the V-Chip," The Ottawa Citizen, Entertainment, Section F, pp. F1- F2 (Saturday, March 9, 1996), is that the perceived utility of the V-Chip system to a consumer depends on whether the consumer agrees with the subjective ratings contained in the VBI for most, if not all, programs. The author of this article, who purportedly has been involved in a "Beta-test" of the V-Chip system in Canada, gives two illustrative examples in his article. First, "trash-talk" shows are rated at the lowest possible level for violence and the next lowest level for language and sex categories, even though these shows often contain verbal violence, physical confrontations and graphic verbal sexual discussions. Second, utilizing the overall rating system to exclude this type of program, such as excluding all programs with a rating above PG, results in the blocking out of many programs which the author considers appropriate for viewing and does not wish blocked out, such as the movie Forrest Gump.

30 Although some people may disagree with the author's judgment of the relative harm and worth of particular television programs, the article illustrates, at least, that regardless of how much the ratings providers will be able to adjust and fine tune their ratings system, based upon

35

1 the majority of consumers' wishes, there will remain a significant portion of the consumer public who will disagree with the rating systems and think that whatever exclusion programming they do will block out desirable programs while not blocking out undesirable programs.

5 Another problem with the existing parental control systems is that the users (parents) have to re-enter a password every time they block/unblock a program or invoke a related function. This is time consuming and will quickly become annoying as well. Yet Another problem with the parental control systems using passwords is that the users (parents) forget the password. This may lead to service calls to equipment manufacturer, adding to the cost of support. Accordingly, an improvement on the V-Chip system access control is needed.

10

SUMMARY OF THE INVENTION

The present invention is directed to an apparatus and method that satisfies this need. There is, therefore provided, according to a preferred embodiment, an apparatus for parental control of a television receiver. A memory provides storage of information relating to television programming. A microprocessor generates a blocking command as a function of the information stored in memory including a master password. A blocking circuit, which passes a baseband television video signal to a television display, provides blocking of the video signal in response to the blocking command. The blocking can be overridden by a user-provided list in the memory.

15

20 It is understood that other embodiments of the present invention will become readily apparent to those skilled in the art from the following detailed description, wherein it is shown and described only embodiments of the invention by way of illustration of the best modes contemplated for carrying out the invention. As will be realized, the invention is capable of other and different embodiments and its several details are capable of modification in various other respects, all without departing from the spirit and scope of the present invention. Accordingly, the drawings and detailed description are to be regarded as illustrative in nature and not as restrictive.

25

DESCRIPTION OF THE DRAWINGS

30 These and other features, aspects, and advantages of the present invention will become better understood with regard to the following description, appended claims, and accompanying drawings where:

FIG. 1 is a flow diagram of the parental control apparatus used with the V-Chip system in accordance with a preferred embodiment of the present invention;

35

1 FIG. 2 is an electrical block diagram of the parental control apparatus in accordance with a preferred embodiment of the present invention;

5 FIG. 3 is an electrical block diagram of the parental control apparatus used in a cable system in accordance with a preferred embodiment of the present invention;

10 FIG. 4 is an electrical block diagram of a parental control apparatus in combination with a V-Chip system employing VCR Plus+ and automated channel mapping in accordance with a preferred embodiment of the present invention;

15 FIG. 5 is an electrical block diagram of a parental control apparatus in combination with VCR Plus+ integrated circuit retrofitted into an existing V-Chip system;

20 FIG. 6 is a top plan view of a remote controller for operating the system of FIG. 4 in accordance with a preferred embodiment of the present invention;

25 FIG. 7 is a television screen displaying a Channel Surf Menu formatted in accordance with a TV mode of the present invention;

30 FIG. 8 is a television screen displaying a Channel Surf Menu with sub-menu prompts formatted in accordance with a TV mode of the present invention;

35 FIG. 9 is a television screen displaying a Channel Surf Menu with sub-menu prompts formatted in accordance with a TV mode of the present invention;

40 FIG. 10 is a television screen displaying a Channel Surf Menu with sub-menu prompts formatted in accordance with a TV mode of the present invention;

45 FIG. 11 is a television screen displaying a VCR/V-Chip Plus+ Review List formatted in accordance with a TV mode of the present invention;

50 FIG. 12 is a television screen displaying a Channel Surf Menu with sub-menu prompts formatted in accordance with a TV mode of the present invention;

55 FIG. 13 is a television screen displaying a V-Chip Plus+ Setup Screen formatted in accordance with a TV mode of the present invention;

60 FIG. 14 is a television screen displaying a V-Chip Plus+ Setup Screen formatted in accordance with a TV mode of the present invention;

65 FIG. 15 is a television screen displaying a V-Chip Plus+ Setup Screen formatted in accordance with a TV mode of the present invention;

70 FIG. 16 is a television screen displaying a VCR/V-Chip Plus+ Main Screen formatted in accordance with a TV mode of the present invention;

75 FIG. 17 is a television screen displaying a VCR/V-Chip Plus+ Main Screen formatted in accordance with a TV mode of the present invention;

1 FIG. 18 is a television screen displaying a Confirmation Screen formatted in accordance with a TV mode of the present invention;

5 FIG. 19 is a television screen displaying a VCR/V-Chip Plus+ Setup Screen formatted in accordance with a TV mode of the present invention;

 FIG. 20 is a television screen displaying a VCR/V-Chip Plus+ Setup Screen formatted in accordance with a TV mode of the present invention;

 FIG. 21 is a block diagram of a user interface screen map in accordance with an embodiment of the present invention;

10 FIG. 22 is a television screen displaying a V-Chip Plus+ Features Screen formatted in accordance with a TV mode of the present invention;

 FIG. 23 is a television screen displaying a V-Chip Set-Up Screen with the V-Chip function disabled formatted in accordance with a TV mode of the present invention;

 FIG. 24 is a television screen displaying the V-Chip Set-Up Screen with the V-Chip function enabled formatted in accordance with a TV mode of the present invention;

15 FIG. 25 is a television screen displaying a V-Chip Plus+ Screen for selecting television programs formatted in accordance with a TV mode of the present invention;

 FIG. 26 is a television screen displaying a V-Chip Plus+ Screen for programming the frequency of the selected television program formatted in accordance with a TV mode of the present invention;

20 FIG. 27 is a television screen displaying a V-Chip Plus+ Selections Review List for blocked television programs formatted in accordance with a TV mode of the present invention;

 FIG. 28 is a television screen displaying a Record/Watch Screen for selecting television programs formatted in accordance with a TV mode of the present invention;

25 FIG. 29 is a television screen displaying a Record/Watch Screen for programming the frequency of the selected television programs to be recorded formatted in accordance with a TV mode of the present invention;

 FIG. 30 is a television screen displaying a Record/Watch SCREEN for programming the frequency of the selected television programs to be watch formatted in accordance with a TV mode of the present invention;

30 FIG. 31 is a television screen displaying a V-Chip Plus+ Selections Review List for recorded television programs formatted in accordance with a TV mode of the present invention;

 FIG. 32 is a television screen displaying a V-Chip Plus+ Selections Review List for watched television programs formatted in accordance with a TV mode of the present invention;

1 FIG. 33 is a television screen displaying a Babysitting Screen formatted in accordance with a TV mode of the present invention;

5 FIG. 34 is a television screen displaying a Babysitter Program Review Screen formatted in accordance with a TV mode of the present invention;

FIG. 35 is a television screen displaying a Channel Surf Screen set for Babysitter selection formatted in accordance with a TV mode of the present invention;

FIG. 36 is a television screen displaying a Channel Surf Screen set for blocking the tuned channel formatted in accordance with a TV mode of the present invention;

10 FIG. 37 is a television screen displaying a Channel Surf Screen set for unblocking the tuned channel formatted in accordance with a TV mode of the present invention;

FIG. 38 is a television screen displaying a Channel Surf Screen set for reviewing the V-Chip Plus+ selections formatted in accordance with a TV mode of the present invention;

FIG. 39 is a flow diagram for a preferred embodiment of the password operation;

15 FIGS. 40-65 depict the operation of the VChip Plus+ and Parental Control, including selection and deletion for blocking and unblocking television programs based on different criteria in a GUIDE mode (GUIDE Plus+);

FIG. 66 is a display screen displaying the Password Dialog Box; and

FIGS. 67-72 are display screens displaying the Password Setup process.

20 DETAILED DESCRIPTION

A preferred embodiment of the present invention is a combination of the V-Chip system and a parental control system more oriented around programming by a user for blocking and enabling particular television programs. Such a parental control system is described in U.S. Patent
25 No. 5,382,983, which is hereby incorporated by reference as if set forth in full herein. The preferred embodiment adds functionality which allows the two systems to work together to form a system which is an improvement over either system. In the preferred embodiment, the user is allowed to override the operation of the V-Chip system for particular programs contained in user programmable enable override lists and blocking override lists. The parental control functions are
30 accessed and selected in two different modes based on the preference of the user. In the TV mode, a variety of interactive television screens display functions and user choices using text and graphics. In the GUIDE mode, the function and choices are made available to the user through menus in a program guide context.

Turning to FIG. 1, a flow chart of the operation of this override system is shown. In block
35 1, the V-Chip system operates as originally designed: a program is tuned, resulting in an output

1 indicating that either the program should be blocked or should not be blocked, according to the
user's programming of the V-Chip system. If, according to the V-Chip system, the program
should be blocked, the Yes Path from block 1 is followed to block 2. In block 2, the program
5 being tuned is checked against a list of programs which have been specifically enabled by the user
called the enable override list. If the program being tuned does not appear on the enable override
list, the No Path out of block 2 is followed to block 3 in which the program being tuned is
blocked. If, on the other hand, it is found in block 2 that the program being tuned is contained
in the enable override list, then the Yes Path out of block 2 is followed to block 4 which enables
10 the program to be tuned.

If the V-Chip system outputs a signal that the program is not to be blocked pursuant to
the user's programming of the V-Chip system, the No Path out of block 1 is followed to block 5.
In block 5, the program to be tuned is compared against a override list to block particular
programs (the "blocking override list") in a similar manner as is performed in block 2 for the
15 enable override list. If the program to be tuned is found to be contained in the blocking override
list, the Yes Path out of block 5 is followed to block 6 and the program being tuned is blocked.
If the program being tuned is not contained in the blocking override list in block 5, then the No
Path from block 5 is followed to block 4, in which case the program is allowed to be tuned.

The blocking override list and enable override list may be defined in a number of ways.
20 One way would be to define programs by channel, date, start time and length (or ending time).
Thus, a clock and a link to the tuner would be employed to determine whether the program being
tuned falls within any of the sets of channel, date, time and length information contained in either
of the override lists.

Alternatively, the lists could consist of compressed codes such as those described in U.S.
25 Patent No. 5,335,079. A particular implementation of this type of compressed codes are
PlusCode™ numbers used by Gemstar Development Corporation's VCRPlus+® systems that
presently appear in television calendars and may be used to enter the selected programs, rather
than using the more laborious and time consuming approach of inputting the uncompressed
channel, date, time and length of the program that is selected.

30 Alternatively, the lists could be composed of the titles of television programs desired to
be on the override lists. These titles could be compared against title information broadcast in the
VBI with each program as part of the V-Chip coding information, using the XDS system or other
similar system. Alternatively, the titles could be compared to a database which relates the
channel, date, time, length to program titles, such as that contained in many electronic television
35 guides.

1 A problem that arises in implementing the system described in FIG. 1 is that the blocking
override list and the enable override list can be, and in most cases will be, very cumbersome to
create. One solution to this problem is using a system similar to that described in co-pending U.S.
5 application 08/031,246, filed March 12, 1993, which is hereby incorporated by reference as if fully
set forth herein. With this system, a user would call a representative on the telephone and relate
various selection criteria that are important to the user to the representative. These selection
criteria may include television channels, times of day, program titles, program subject matter
categories, and actors and actresses appearing in the programs. The representative would have
10 access to an extensive centralized computerized database which would include all of this type of
data for each television program scheduled to be broadcast. In addition, this extensive database
could include a variety of additional rating systems other than those provided by the broadcasters
in conjunction with the V-Chip system. Any of a variety of third parties might provide such
ratings such as religious organizations, newspapers and rating services targeted to particular
15 segments of the user public. Based upon the selection criteria provided by the user, the
representative's computer downloads the data to program the user's system, by telephone, VBI,
or other available data path.

In another alternative embodiment, a database similar to the extensive centralized database
described above, and containing the same types of ratings information, including third party
20 ratings, may be stored locally in the user's system. One of the ways this embodiment would
become feasible is if the system is combined with a locally stored electronic program guide which
already stores the channel, date, time, length, title, category and descriptions of a large number
of future scheduled television programs.

In yet another alternative embodiment, in addition to ratings prepared by the Motion
Picture Association of America and the television broadcasters, the ratings of third parties are
25 included within the V-Chip data along with an identification of the third party ratings providers,
allowing the user to choose the rating provider which most closely matches their own values.

A preferred embodiment of an override system for use with the V-Chip system described
above is shown in FIG. 2. A multichannel radio frequency (RF) television signal from a cable feed
30 is connected to the input of a cable box 10, which has a channel changing control. The output of
cable box 10, which is a single channel RF television signal at the frequency of the user selected
channel, is coupled to television drive circuitry 12. The output of the television drive circuitry 12
is connected by a transmission blocking circuit 14 to a television display 16. Blocking circuit 14
could be a conventional analog signal transmission gate, or any other similar device known in the
35 art.

1 For the purpose of describing the operation of the override system, it is assumed that the television signal of each channel carried by the cable feed contains supplemental data, including channel identification, such as HBO, CNN, or NBC. Preferably, the channel identification is embedded in the VBI of the signal of each channel in an XDS format.

5 The output of the television drive circuitry 12 is also connected to the input of a VBI decoder 18, which strips the XDS signal from the baseband television signal. The output of VBI decoder 18, which includes a data signal representative of the channel identification of the channel to which the cable box 10 is tuned, is coupled to a microprocessor 20, the output of which controls the blocking circuit 14. The microprocessor 20 is coupled to a RAM 22.

10 The programs to be selectively blocked are stored in RAM 22. For each program the date, time, channel and program length are stored in RAM 22 in a stack arrangement as described in U.S. Patent No. 5,382,983 ("the '983 patent") and co-pending U.S. application 08/684,678, the disclosures of which are hereby incorporated by reference as if set forth in full herein. The program blocking data base stored in RAM can be generated in a number of different ways. One way is to transmit groups of program data consisting of date, time, channel, and length content according to a customized rating service, as composed for example by a religious group, newspaper, or political association, and to download such data to RAM 22 from the VBI of the television signal or a telephone line. (See for example the above referenced '983 patent.) The viewer can call up an on-screen menu of choices of customized rating services that are transmitted in the VBI or telephone line, key in the selected service, and command the microprocessor 20 to download the group of program data corresponding to the selected service. Another way is to key in the data of the individual programs through a remote controller. A third way is to select the programs with a cursor from an on screen electronic program guide ("EPG"), in which the EPG data base is used both to determine the programs to be blocked and the programs to be viewed or recorded. In any case, the microprocessor 20 continuously monitors the output of a real time clock in the microprocessor 20, and the channel identification of the channel to which cable box 10 is tuned, which is recovered by VBI decoder 18 or by monitoring the tuner and using a channel map. These monitored attributes are compared with the data of the program blocking database. Preferably, this is accomplished by arranging the data base in a stack in RAM 22 as described in the '983 patent such that the top of the stack is the next program telecast to be blocked. When a match is found, the microprocessor 20 actuates the blocking circuit 14, thereby preventing the TV display 16 from showing the program.

35 When the override system is used in conjunction with the V-Chip system, a code is also included in the VBI which indicates one or more rating factors for the program then being aired.

1 In this embodiment, the user programs the television system to exclude programs according to one or more of these rating criteria. The user selections are stored in RAM 22, and compared with the code transmitted in the VBI. In the event an excluded program is detected by the
5 microprocessor 20, via the VBI decoder 18, an enable override list stored in RAM 22 is consulted. The blocking circuit 14, under microprocessor control, prevents the excluded program from being presented to the TV display 16 if the program is not contained in the enable override list. Conversely, if the program currently being aired is not excluded under the rating criteria established by the user, a blocking override list stored in RAM 22 is checked by the
10 microprocessor 20. The blocking circuit 14, under microprocessor control, allows the program to pass to the TV display 16 if the program is not contained in the blocking override list.

In the described embodiment where the television programs comprising the blocking override list and the enable override list are defined by channel, date, start time and length (or ending time), or through the use of compressed codes such as those described in U.S. Patent
15 No. 5,335,079, an alternative arrangement is necessary to accommodate the addition of a cable box or video cassette recorder ("VCR").

With conventional cable box or VCR hook-ups, a cable box or VCR is connected to the front end of the television receiver. The cable box, or VCR, has a tunable bandpass filter for tuning the desired channel. The television signal from the tuned channel is modulated onto a fixed
20 carrier frequency, by way of example channel 3, and coupled to the television receiver. The television receiver is tuned to the carrier frequency output of the cable box, or VCR, regardless of the particular channel selected. Since the television receiver is always tuned to the fixed frequency, the microprocessor of FIG. 2 will be unable to ascertain when a blocked or selected television program is selected at the cable box, or VCR.

25 Turning to FIG. 3, a preferred embodiment of the present invention is shown which accommodates a system employing both a cable box and a VCR implemented with a low cost mechanization using a simple switch S1. The VCR tuning issue is resolved by connecting the video input of the VCR 23 to the video output of the TV tuner 24, which is always tuned to a parentally enabled program. There is no reason for the VCR 23 to have broadband input.

30 With respect to cable box tuning, the cable box 26 is used only for tuning scrambled programs. During setup, the user identifies the scrambled (premium) channels in his or her cable lineup. This can be automated or performed manually. In this embodiment, the scrambled program providers will transmit their names (HBO ESPN, etc.) in the VBI of the television signal. Accordingly, when a scrambled channel is selected by the user, the cable box 26 is tuned to the
35

1
respective channel, and the VBI is scanned for the name, via VBI decoder 28. If the name cannot
be identified, the channel is blocked.

5
VCR recording may also be controlled by providing the VCR video input with the same
signal that is provided to the display 30 by the TV tuner 24. This signal has already been
processed to insure that it contains a program that has been authorized. Hence, the user can only
record authorized programs.

10
In operation, when a user requests a non-scrambled channel, the microprocessor 32 checks
to see (from setup table) if the requested channel is designated as a scrambled channel, and also
checks to see (from PlusCode table) if this channel is unblocked for the particular time slot. If the
television channel is unblocked and non-scrambled, switch S1 is set to position 2 and the TV tuner
24 is tuned to the requested channel. If the requested channel is to be blocked, S1 is set to
position 4, so the TV tuner 24 has no input. The user may also record the displayed program (but
no other program since the VCR video input comes from the TV tuner output).

15
If the user requests a scrambled channel, the microprocessor 32 checks to see if the
requested channel is designated as a scrambled channel, and also checks to see (from PlusCode
table) if this channel is unblocked for the particular time slot. If the television channel is
unblocked and scrambled, S1 is set to position 3, and the cable box 26 is tuned to the requested
channel. The VBI decoder 28 monitors the cable box output, looking for the channel name in the
20 VBI (broadcast say every minute). If a name is found, it is compared to the channel name in the
channel setup table. If a match is detected, the TV tuner 24 is tuned to channel 3, and the
program is displayed. If no match is detected, S1 is switched to position 4, and the display 30 is
blanked. Thus, if the user tries to manually change the cable box channel, the VBI name check
will fail and S1 will be switched to position 4 to blank the display. The user may also record the
25 displayed program (but no other program since the VCR video input comes from the TV tuner
output).

If the user requests to play a tape in the VCR, S1 is switched to position 1, and the TV
tuner 24 is tuned to channel 3. Note that in position 1, the VCR has no RF/video input. Hence
the user cannot use the VCR tuner.

30
Turning to FIG. 4, a detailed electrical diagram of a preferred embodiment of the present
invention is shown incorporating the V-Chip system with the override system ("V-Chip Plus+
system"). Preferably, the V-Chip Plus+ system is responsive to compressed codes for creating
the override lists, such as those described in U.S. Patent No. 5,335,079, and includes automatic
channel mapping capability. Specifically, a TV tuner 34 is positioned at the front end of the
35 television receiver for passing a selected channel of a multichannel RF television signal. The TV

1 tuner 34, which can be any conventional tuner in the art, should provide amplification,
downconversion to an intermediate frequency ("IF") and demodulation, as well as frequency
tuning. The TV tuner 34 is coupled to television drive circuitry 36 which provides the signal
5 processing required to amplify and downconvert the IF signal to a baseband television video
signal. The output of the television drive circuitry 36 is connected to a blocking circuit 38. The
blocking circuit 38 could be a conventional analog signal transmission gate, or any other similar
device known in the art. The output of the blocking circuit 38 is connected to a TV display 42
10 through a video mixer 40 for selectively displaying the television program currently being
broadcast on the selected channel.

The TV tuner 34 is tuned to the selected channel by a microprocessor 44. A viewer input
device 46, preferably in the form of a remote infrared ("IR") controller, is coupled to the
microprocessor 44 to provide viewer control of the television channels. The viewer input device
46 also allows the viewer to remotely program the V-Chip Plus+ system to exclude programs
15 according to one or more rating factors, as well as compiling or modifying the V-Chip Plus+
override lists. When the viewer wishes to review the particular ratings set in the V-Chip Plus+
system or the V-Chip Plus+ override lists, the microprocessor 44 retrieves the appropriate
information from RAM 48 and couples it to the video processor 50, where the information is
formatted for display. Preferably, the information stored in the video processor 50 is a bit map
20 of what is displayed on the TV display 42. The video processor 50 is connected to the video
mixer 40. The video mixer 40 outputs the information as an overlay on the television program
currently being viewed, although it will be understood by those skilled in the art that the
information from the video mixer 40 could be presented to the TV display 42 as a window in the
television program or as a full screen display instead of the television program.

25 Using the viewer input device 46 in conjunction with the information presented to the TV
display, the viewer programs the V-Chip Plus+ system to exclude programs according to one or
more rating factors. Preferably, the viewer input device 46 allows manipulation of the V-Chip
Plus+ rating system and the V-Chip Plus+ override lists by moving a cursor on the TV display 42
and inputting discrete commands. Cursor control is achieved by coupling the microprocessor 44
30 to the video processor 50 through to a cursor position register 52.

Viewer edits to the V-Chip Plus+ override lists presented to the TV display 42 are
preferably accomplished using compressed codes such as those described in U.S. Patent
No. 5,335,079. A G-code decoder 54 is employed to process the compressed codes. If the
microprocessor 44 determines that a G-code has been received from the viewer input device 46,
35 then the G-code will be sent to the G-code decoder 54 for decoding. The G-code decoder 54

1 converts the G-code into channel, date, time and length ("CDTL") information which is used by
the microprocessor 44 to override the V-Chip Plus+ rating system for individually selected
television programs. Preferably, the V-Chip Plus+ system is integrated with Gemstar
5 Development Corporation's VCRPlus+® system so that the CDTL information can be selectively
used not only to create the V-Chip Plus+ override lists, but to activate a video cassette recorder
("VCR") 55 to record a selected television program corresponding to the CDTL information
stored in RAM 48 as described in detail in U.S. Patent No. 5,335,079 which is hereby
incorporated by reference as if set forth in full herein. The CDTL information is stored in RAM
10 48 in a stack arrangement as described in U.S. patent 5,382,983.

The V-Chip Plus+ system is implemented by decoding the VBI of a television signal. A
VBI decoder 56 connected to the output of the television drive circuitry 36 extracts the XDS
signal from the baseband television signal. The output of the VBI decoder 56, which includes one
or more rating factors for the television program currently broadcast, is coupled to the
15 microprocessor 44. These rating factors extracted from the VBI of the television signal are
compared with the viewer programmed rating factors in RAM 48 by the microprocessor 44. In
the event that the microprocessor 44 determines that the television program currently broadcast
should be blocked based on the programmed rating factors, the enable override list stored in RAM
48 is consulted. The microprocessor 44 will actuate the blocking circuit 38 to block the currently
20 broadcast television program from the TV display 42 if the television program is not contained
in the enable override list. Conversely, if the television program currently broadcast should be
televised based on the programmed rating factors stored in RAM 48, the blocking override list
stored in RAM 48 is consulted. The blocking circuit 38, under microprocessor 44 control, allows
the television program to pass to the TV display 42 if the television program is not contained in
25 the blocking override list. The V-Chip Plus+ override lists are consulted by the microprocessor
44 by comparing the CDTL information stored in RAM 48 with the tuner channel set by
microprocessor 44 and an internal clock (not shown) in the microprocessor. Alternatively, the
channel information can be striped from the XDS data by the VBI decoder 56, if available there.

In order for the compressed codes to be useful in compiling the V-Chip Plus+ override
30 lists, the microprocessor 44 must be able to determine the channel on which the television
program corresponding to the compressed code is transmitted on. Because the channel
allocations vary depending on the particular television service (i.e., satellite transmission, cable
service, over-the-air broadcasts) used by the viewer and the specific geographic area of service,
a method of establishing a channel map is required. Such a method is described in co-pending
35 U.S. application 08/694,864, which is hereby incorporated by reference as if set forth in full

1 herein. A channel map relates the television stations (i.e., KABC, KCET) to their respective
channel frequency allocations for any particular television service.

5 Briefly, the particular type of television service is automatically detected in an
embodiment of the present invention by monitoring the channel allocations of the television
stations. This accomplished by sweeping the TV tuner 34 across its RF band with the
microprocessor 44. A detector 57, coupled to the TV tuner 34, detects whether a television
station has been allocated to each of the channels as the TV tuner 34 is swept across the RF band
by monitoring the stability of the horizontal sync pulses. The microprocessor 44 can then
10 determine the type of television service based on the channel allocation for a given geographic
area. This scheme requires only that the viewer key in his or her zip code using the viewer input
device 46. Alternatively, the automatic detection of the particular television service used by the
viewer can be eliminated in favor of having the viewer key in directly the information pertaining
to the model and brand of the VCR and cable box using the viewer input device 46.

15 Once the particular type of television service used by the viewer is ascertained, the
appropriate channel map can be extracted by the VBI decoder 56 from the television signal based
on the geographic location of the viewer. The microprocessor 44 again sweeps the TV tuner 34
to locate a channel having channel map information transmitted in the VBI portion of the
television signal. The microprocessor 44 then extracts the channel map marked with an
20 identification code corresponding to the geographic location entered by the viewer and stores the
extracted channel map in channel map memory 58.

The described embodiment of the V-Chip Plus+ system illustrated in FIG. 4 is directed to
a fully integrated system utilizing a single microprocessor. However, those skilled in the art will
readily appreciate that numerous applications may arise where it would be desirable to retrofit the
25 V-Chip Plus+ system into a television receiver with an existing V-Chip system. As a result of
Congressional endorsement of the V-Chip system, it is envisioned that many television
manufacturers will develop a V-Chip IC ("IC") for user programing according to a standardized
rating system, and include the V-Chip capability as a standard feature. In these systems, it would
be advantageous to incorporate a V-Chip Plus+ upgrade into a single IC which could be easily
30 integrated into an existing V-Chip system. An exemplary embodiment of such a V-Chip Plus+
system is shown in FIG. 5.

Referring to FIG. 5, the V-Chip system includes the basic television processing and drive
circuitry described with reference to FIG. 4. Specifically, a TV tuner 35 is positioned at the front
end of the television receiver for passing a selected channel of a multichannel RF television signal
35 to television drive circuitry 37. The output of the television drive circuitry 37 is connected to a

1 blocking circuit 39. The output of the blocking circuit 39 is connected to a TV display 43 through
a video mixer 41 for selectively displaying the television program currently being broadcast on the
selected channel.

5 A V-Chip 57, connected to the output of the television drive circuitry 37, extracts the
XDS signal from the baseband television signal. The rating factors for the television program
currently broadcast are stripped from the XDS data and are compared with the viewer
programmed rating factors stored in internal memory of the V-Chip 57. In the event that the V-
Chip 57 determines that the television program currently broadcast should be blocked based on
10 the programmed rating factors, the blocking circuit 37 is actuated by the V-Chip 57 to block the
currently broadcast television program from the TV display 43. Conversely, if the television
program currently broadcast should be televised based on the programmed rating factors stored
in memory, the blocking circuit 39 is deactivated by the V-Chip 57 and the television program is
allowed to pass to the TV display 43.

15 The V-Chip system provides viewer's editing of the rating factors by using an Editor.
Specifically, when the viewer wishes to review the particular ratings set in the V-Chip system, the
V-Chip 57, under control of the viewer input device, retrieves the appropriate information from
memory and couples it to the video processor 51, where the information is formatted for display.
The video processor 51 is connected to the video mixer 41. The video mixer 41 outputs the
20 information as an overlay on the television program currently being viewed, although it will be
understood by those skilled in the art that the information from the video mixer 41 could be
presented to the TV display 43 as a window in the television program or as a full screen display
instead of the television program. Using the viewer input device in conjunction with the
information presented to the TV display 43, the viewer programs the V-Chip system to exclude
25 programs according to one or more rating factors.

Customization of the blocking function of the V-Chip 57 is achieved with an external V-
Chip Plus+ IC 47. The implementation of the V-Chip Plus+ circuitry into an IC is an economical
approach, however, it will be understood by those skilled in the art that the V-Chip Plus+ function
could be implemented using discrete components. Preferably, the V-Chip Plus+ IC 47 is
30 designed for easy retrofit into an existing television receiver with V-Chip capability already
installed. The V-Chip Plus+ IC 47 is inserted in line between the V-Chip 57 and the blocking
circuit 39. This requires disconnecting the V-Chip 57 from the blocking by removing wire 59.

In operation, when the V-Chip 57 determines that the television program currently
broadcast should be blocked based on the programmed rating factors, the blocking signal is
35 coupled to the V-Chip Plus+ IC 47. In response to the blocking signal, the microprocessor 45 in

1 the V-Chip Plus+ IC 47 consults an enable override list stored in RAM 49. The microprocessor
45 will actuate the blocking circuit 39 to block the currently broadcast television program from
the TV display 43 if the television program is not contained in the enable override list.
5 Conversely, if the V-Chip 57 determines that the television program currently broadcast should
be televised based on the programmed rating factors, the unblocking signal is coupled to the V-
Chip Plus+ IC 47. In response to the unblocking signal, a blocking override list stored in RAM
49 is consulted. The blocking circuit 39, under microprocessor 45 control, allows the television
program to pass to the TV display 43 if the television program is not contained in the blocking
10 override list.

The V-Chip Plus+ IC 47 is also connected to the video processor 51 for viewer edits to
the V-Chip Plus+ override lists. In this configuration, the viewer can program the V-Chip system
to exclude programs according to one or more rating factors, as well as compiling or modifying
the V-Chip Plus+ override lists. When the viewer wishes to review or edit the V-Chip Plus+
15 override lists, the microprocessor 45 retrieves the appropriate information from RAM 49 and
couples it to the video processor 51, where the information is formatted for display. The video
processor 51 outputs the information, via the video mixer 41, preferably as an overlay on the
television program currently being viewed. Edits to the V-Chip Plus+ override lists are
accomplished using, by way of example, compressed codes. A G-code decoder 55 is employed
20 to process the compressed codes in the same manner as described above with reference to the
embodiment illustrated in FIG. 4.

The viewer input device 46 preferably takes the form of a hand-held remote IR transmitter
which communicates with an IR receiver connected to the microprocessor 44. As shown in FIG.
6, the IR transmitter has a housing 60 on which a number of control keys are mounted. A
25 CHANNEL SURF key 62, a V-CHIP PLUS+ key 64, a REVIEW key 69, a BABYSITTER key
71, a MENU key 63, an ENTER key 65, and a CHANGE key 67 are all provided on the housing
60. Located below the REVIEW key 69 and the BABYSITTER key 71 are up, down, left and
right arrow keys 66, 68, 70 and 72, respectively. A numerical keypad 73 is positioned below the
ENTER key 65 and CHANGE key 67. The blocking and unblocking functions are set and
30 selected in two different modes, a TV mode and a GUIDE mode.

TV Mode

Preferably, the user interface is fully menu driven. On-screen options are presented to the
TV display for programming the V-Chip Plus+ system, and editing the V-Chip Plus+ override
35 lists. In a TV mode, these on-screen options can be accessed from the normal television picture

1 viewing mode by selecting either the CHANNEL SURF key 62, the V-CHIP PLUS+ key 64, or the MENU key 63 on the viewer input device.

5 Upon activation of the CHANNEL SURF key, a channel selection list 74 is retrieved by the microprocessor from the channel map memory and presented to the TV display by the video processor as an overlay on the television picture via the video mixer as shown in FIG. 7. This display format is called the Channel Surf Menu. The channel selection list 74 consists of a column for television station names or call letters 76, and a corresponding column identifying the allocated channel for each television station 78, with the channel currently tuned by the TV tuner highlighted by a first cursor 80. In this mode, the viewer can tune any channel on the channel selection list 74 by moving the first cursor 80 vertically with the up and down arrow keys on the viewer input device. As the first cursor 80 moves from one channel to another, the microprocessor causes the TV tuner to tune the highlighted channel for display on the TV display. The viewer may exit the Channel Surf Menu at any time and return to the normal television picture viewing mode by depressing the CHANNEL SURF key on the viewer input device.

15 Preferably, the microprocessor has individual channel block capability. That is, selected channels can be blocked in their entirety regardless of the rating factors established by the viewer in the V-Chip Plus+ system or the override lists created by the viewer in the V-Chip Plus+ system. Channel block indication is shown in the channel selection list 74 of the Channel Surf Menu by replacing the channel allocation for the blocked television station with an "X". In FIG. 7, both FOX and KMEX have been blocked.

20 Three sub-menus can be accessed from the Channel Surf Menu by depressing the right arrow key on the viewer input device from any highlighted channel. In response, three on-screen sub-menu prompts are presented to the TV display as shown in FIG. 8. These on-screen sub-menu prompts are displayed horizontally next to the highlighted channel, and may be accessed by moving a second cursor 82 with the right and left arrow keys on the viewer input device. A description of the on-screen sub-menu prompt selected by the viewer with the second cursor 82 is displayed immediately below. The viewer may remove the on-screen sub-menu prompts from the Channel Surf Menu at any time by depressing the CHANNEL SURF key on the viewer input device.

25 30 In FIG. 8, KABC is highlighted by the first cursor 80, and an icon which allows the viewer to toggle KABC between a channel block mode and a channel unblock mode is highlighted by the second cursor 82. A message, "Block this channel," describing the operation of the icon is displayed below the on-screen sub-menu prompts. With this set up, KABC can be blocked with a single touch of the ENTER key on the viewer input device. The channel block command from

1 the viewer input device is stored in RAM by the microprocessor for controlling the blocking
circuit when the viewer subsequently attempts to tune KABC on the television receiver. The
microprocessor then causes the video processor to overlay, via the video mixer, the Channel Surf
Menu shown in FIG. 9 on the television picture. The replacement of the channel allocation "7"
5 for KABC with an "X" confirms that the command for blocking this channel has successfully been
loaded into RAM. The on-screen sub-menu icon prompt has also been changed to indicate that
KABC may be unblocked, as indicated by the message below the on-screen sub-menu prompts,
again with a single stroke of the ENTER key on the viewer input device.

10 The V-Chip Plus+ override lists can be accessed by the viewer from the Channel Surf
Menu by highlighting the "Review" on-screen sub-menu prompt with the second cursor 82 as
shown in FIG. 10. The message below the on-screen sub-menu prompts reads "VCR/V-Chip
Plus+ Review List." In a preferred embodiment, the enable override list and the blocking override
list are combined into a single list on the VCR/V-Chip Plus+ Review List. Preferably, the
15 VCR/V-Chip Plus+ Review List also allows viewer editing of the television programs selected for
VCR Plus+ applications, a system developed by Gemstar Development Corporation which allows
a timer preprogramming feature on a VCR to be programmed using compressed codes.

By depressing the ENTER key on the viewer input device while the "Review" on-screen
sub-menu prompt is highlighted by the second cursor 82, the microprocessor retrieves the
20 designated television programs for the VCR Plus+ system and the V-Chip Plus+ override feature
from memory and causes the video processor to overlay a VCR/V-Chip Plus+ Review List onto
the normal television picture on the TV display, via the video mixer, as shown in FIG. 11. It will
be appreciated by those skilled in the art that VCR/V-Chip Plus+ Review List can be divided into
two separate screens, one for the VCR Plus+ system and the other for the V-Chip Plus+ override
25 list, and accessed by providing separate keys on the viewer input device.

The VCR/V-Chip Plus+ Review List shown in FIG. 11 comprises a list of television
programs designated under either the VCR Plus+ system or the V-Chip Plus+ override feature.
Each television program is displayed on the VCR/V-Chip Plus+ Review List by its respective
CDTL information. It will be appreciated by those skilled in the art that the titles of the television
30 programs could be alternately, or additionally displayed with the CDTL information by accessing
an EPG data base in memory with the microprocessor as described in co-pending U.S. application
08/744,399, the contents of which is hereby incorporated by reference as if set forth in full herein.

To the left of each television program defined by the CDTL information is an icon
35 indicating the function to be performed by the microprocessor. By way of example, the icon 84

1 to the left of the television program beginning on Saturday, January 10, at 11:15 P.M. on channel
7 indicates that this television program is to be recorded by the VCR under control of the VCR
Plus+ program in the microprocessor. The icon 86 to the left of the television program beginning
5 Wednesday, January 21, at 2:00 P.M. on channel 35 indicates that the television receiver will be
automatically turned on and tuned to this television program under the VCR Plus+ program in the
microprocessor. The icon 88 to the left of the television program televised weekly on Saturdays
at 11:00 A.M. on channel 28 indicates that the television program is to be blocked by the blocking
circuit even though the rating factors embedded in the VBI portion of the television signal meet
10 the rating criteria established by the viewer in the V-Chip Plus+ system. The icon 90 to the left
on the television program beginning Sunday, January 18, at 10:00 P.M. on channel 2 indicates that
the television program will be shown despite having rating factors embedded in the VBI of the
television signal that would otherwise cause the television program to be blocked by the V-Chip
Plus+ system.

15 The lower portion of the VCR/V-Chip Plus+ Review List 92 contains instructions to assist
the viewer in editing the television programs with the viewer input device. Arrow indicators 94,
with accompanying text "MOVE," inform the viewer that the individual television programs can
be selected by vertically moving the cursor 96 with the up and down arrow keys on the viewer
input device. Once the desired television program is selected by the viewer, the viewer can then
20 either delete the television program from the VCR/V-Chip Plus+ Review List, or alter the length
of the designated function indicated by the icon to the left of the television program. As indicated
in the lower portion of the VCR/V-Chip Plus+ Review List 92, the selected television program
highlighted by the cursor 96 can be deleted by depressing the ENTER key on the viewer input
device. Alternatively, the length of the designated function programmed in the VCR/V-Chip
25 Plus+ system can be altered by first depressing the CHANGE key on the viewer input device, and
then incrementing or decrementing the length with the right and left arrow keys, respectively, on
the viewer input device. The viewer may exit the VCR/V-Chip Plus+ Review List and return to
the Channel Surf Menu of FIG. 34 at any time by depressing the V-CHIP PLUS+ key on the
viewer input device.

30 From the Channel Surf Menu of FIG. 10, the viewer can access the V-Chip Plus+ Setup
Screen by highlighting the "V-Chip Plus+" on-screen sub-menu prompt with the second cursor
82 as shown in FIG. 12. A message "Go to V-Chip Plus+ Setup Screen" is displayed immediately
below the on-screen prompts. By depressing the ENTER key on the viewer input device while
the "V-Chip Plus+" on-screen sub-menu prompt is highlighted by the second cursor 82, the
35 microprocessor retrieves the V-Chip Plus+ rating factors from memory and causes the video

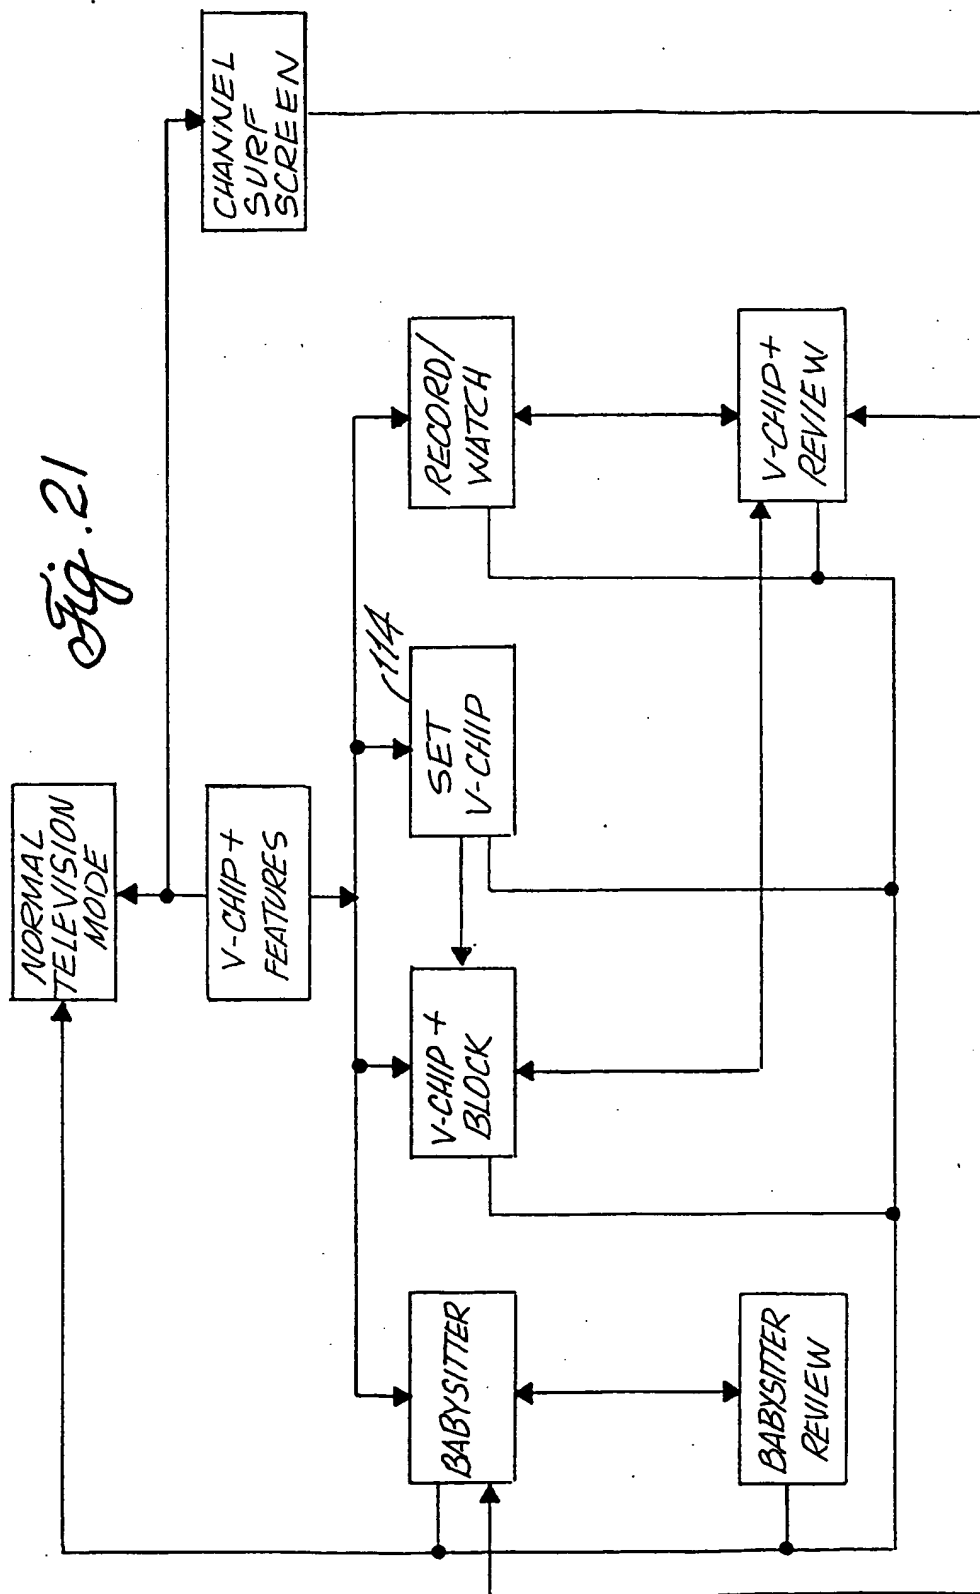
1 processor to overlay the V-Chip Plus+ Setup Screen onto the normal television picture on the TV display, via the video mixer, as shown in FIG. 13.

5 The V-Chip Plus+ Setup Screen indicates the V-Chip Plus+ system rating set by the viewer under the heading "Highest Acceptable Rating." In FIG. 13, the current V-Chip Plus+ system rating programmed into RAM is "TV-PG Parental Guidance." The individual default rating factors (i.e., violent content, sexual content, language, dialogue) for "TV-PG Parental Guidance" are listed below. In a preferred embodiment, independent control of the default rating factors by the viewer is provided. For example, the default rating factors for the V-Chip Plus+ system rating "TV-PG Parental Guidance" are moderate violence, intense sexual content, coarse language, and suggestive dialogue. However, the viewer may desire to limit viewing access to "TV-PG Parental Guidance" television programs with no violent content. In this case, the viewer would move the cursor 94 vertically using the up and down arrow keys on the viewer input device from the V-Chip Plus+ system rating to the violent content indicator immediately to the left of the descriptive text "Moderate Violence." The violent content of television programs accessible to the viewer can now be altered by first depressing the CHANGE key on the viewer input device to enable a change in the rating factor, and then using the left and right arrow keys to adjust the violent content of television programming to the desired level. As shown in FIG. 14, the viewer has successfully limited viewing of television programs to "TV-PG Parental Guidance" without any violent content.

20 Alternatively, the entire V-Chip Plus+ system rating programmed in RAM can be altered by the viewer. This function is performed by positioning the cursor 94 on the V-Chip Plus+ system rating indicator "TV-PG Parental Guidance" by depressing the up and down arrow keys on the viewer input device. Next, the CHANGE key on the viewer input device is depressed to enable a change in the V-Chip Plus+ system rating. Then the desired V-Chip Plus+ rating can be adjusted using the left and right arrow keys on the viewer input device. These operational steps are illustrated at the bottom of the V-Chip Plus+ Setup Screen 95 to facilitate viewer editing. As shown in FIG. 15, the V-Chip Plus+ system rating programmed in RAM, via the microprocessor, has been changed to "TV-MA Mature Audience Only." The default rating factors stored in RAM allow viewing of television programs containing graphic violence, explicit sexual content, crude language and indecent dialogue. These rating factors are compared against corresponding factors transmitted in the VBI portion of the television program currently being broadcast.


30 In a preferred embodiment, other V-Chip Plus+ system ratings include "TV-P14 Parents Cautioned ! ! !" for television programming with moderate violence, intense sexual content, crude language and very suggestive dialogue; "TV-G General Audience" for television programming

21/69



22/69

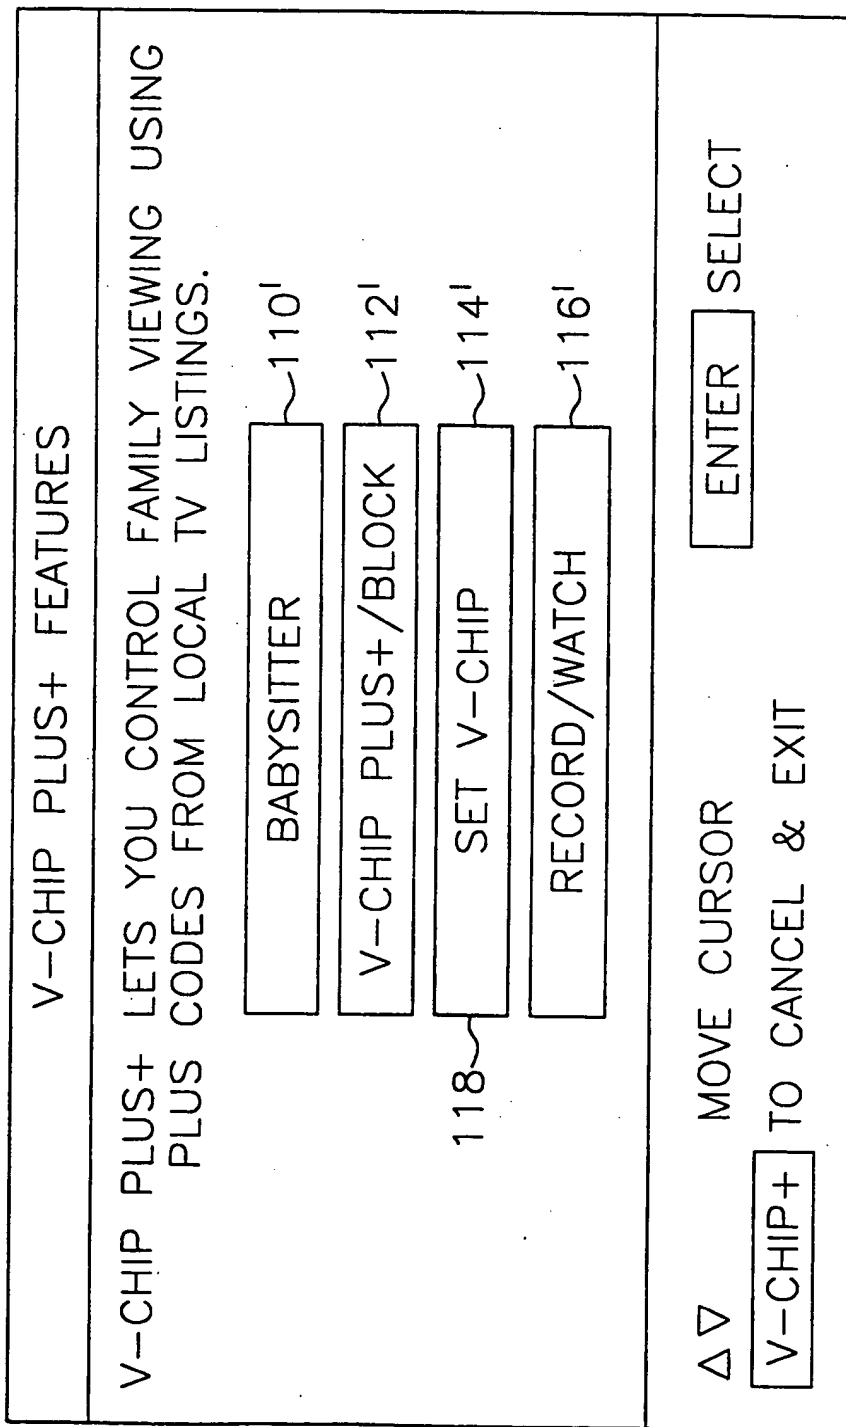FIG. 22



23/69

<p>SET V-CHIP <input type="checkbox"/> ON <input checked="" type="checkbox"/> OFF</p>	
<p>TV RATINGS</p>	<p>MOVIE RATINGS</p>
<p>BLOCKS SHOWS RATED HIGHER THAN:</p>	
<p>THE V-CHIP FEATURE IS DISABLED</p>	
<p>AND BLOCKS:</p>	
<p><input type="checkbox"/> VIOLENCE</p>	<p><input type="checkbox"/> LANGUAGE</p>
<p><input type="checkbox"/> SEXUAL SITUATIONS</p>	<p><input type="checkbox"/> DIALOGUE</p>
<p>TO PERSONALIZE YOUR TV VIEWING, PRESS V-CHIP PLUS+ / BLOCK</p>	
<p>ΔΔ TO MOVE VCHIP+ TO EXIT</p>	<p>◁ ▷ CHANGE / SELECT</p>

Fig. 23

24/69

SET V-CHIP <input type="checkbox"/> ON <input type="checkbox"/> OFF	
<div>TV RATINGS</div>	<div>MOVIE RATINGS</div>
BLOCKS SHOWS RATED HIGHER THAN:	
<div>----- TV-PG PARENTAL GUIDANCE</div>	
AND BLOCKS:	
132 <input type="checkbox"/> VIOLENCE	<input checked="" type="checkbox"/> LANGUAGE
<input checked="" type="checkbox"/> SEXUAL SITUATIONS	<input checked="" type="checkbox"/> DIALOGUE
TO PERSONALIZE YOUR TV VIEWING, PRESS <div>V-CHIP PLUS+/BLOCK</div> 134	
ΔΔ TO MOVE <div>VCHIP+</div> TO EXIT	◁▷ CHANGE/SELECT

Fig. 24

25/69

V-CHIP PLUS +	
ENTER THE PLUS CODE FOR EACH PROGRAM YOU WISH TO BLOCK.	
PLUS CODE	<div style="border: 1px solid black; padding: 5px; display: inline-block;"> 90623 </div> <div style="margin-left: 10px;"> ¹³⁶ 138 </div>
◀▶◀▶ MOVE CURSOR VCHIP+ REVIEW	ENTER SELECT TO EXIT V-CHIP PLUS+ SELECTION

Fig. 25

26/69

V-CHIP PLUS+		
TO BLOCK THE SHOW:		
<div> <div>KWHY 22 7/4 SAT 10:00p-0:00a</div> <div> <div> <div>140</div> <div>ONCE</div> <div>142</div> </div> <div>DAILY</div> <div>WEEKLY</div> </div> </div>		
THIS SHOW WILL BE BLOCKED THANKS FOR USING V-CHIP+		

Fig. 26

27/69

REVIEW V-CHIP PLUS+ SELECTIONS 146 BLOCK 144 RECORD WATCH				
BABYSITTER ON(OFF)				
KNBC	4	SUN	05/17	11:00a-12:15p
KTLA	5	M-F		11:00a-12:15p
KWHY	22	SAT	WKLY	10:00p-11:20p
Δ▽◁▷ MOVE CURSOR VCHIP+ TO EXIT ENTER DELETE				

Fig. 27

RECORD/WATCH	
<p>ENTER THE PLUS CODE TO SELECT PROGRAMS TO RECORD OR WATCH, THE WATCH FEATURE AUTOMATICALLY TUNES TO THE SELECTED SHOW AT THE CORRECT TIME.</p>	
<p>PLUS CODE</p> <div style="border: 1px solid black; width: 100px; height: 40px; margin: 0 auto;"></div> <p style="text-align: right;">152</p>	<p>WATCH</p> <div style="border: 1px solid black; width: 100px; height: 40px; margin: 0 auto;"></div> <p style="text-align: right;">154</p>
<p>148</p> <div style="border: 1px solid black; width: 100px; height: 40px; margin: 0 auto;"></div> <p style="text-align: right;">150</p>	<p>RECORD</p> <div style="border: 1px solid black; width: 100px; height: 40px; margin: 0 auto;"></div>
<p>◀▶ Δ▽ MOVE CURSOR</p> <p>VCHIP+ <div style="border: 1px solid black; width: 100px; height: 20px; display: inline-block;"></div> TO EXIT</p> <p>REVIEW <div style="border: 1px solid black; width: 100px; height: 20px; display: inline-block;"></div> V-CHIP PLUS+ SELECTION</p>	<p>ENTER <div style="border: 1px solid black; width: 100px; height: 20px; display: inline-block;"></div> SELECT</p>

Fig. 28

29/69

RECORD/WATCH	
TO RECORD THE SHOW:	
CH 36	6/21 SUN 2:46a- 2:52a
ONCE	DAILY WEEKLY
THIS SHOW WILL BE RECORDED	

Fig. 29

158

156

158

RECORD/WATCH		
TO WATCH SHOW:		
CH. 36 6/21 SUN 2:46a-2:52a		
ONCE	DAILY	WEEKLY
TV WILL TURN ON WHEN THIS SHOW IS ON		

Fig. 30

31/69

<p>REVIEW V-CHIP PLUS+ SELECTIONS</p> <div> <div>BLOCK</div> <div> <div>RECORD</div> <div>WATCH</div> </div> </div> <p>144 160</p> <p>BABYSITTER ON(OFF)</p>			
KABC	7	SAT	05/16 10:00p-11:00p
KTLA	5	SUN	05/17 08:00p-08:30p
<div> <div> <div>ΔVΔΔ</div> <div>MOVE CURSOR</div> </div> <div> <div>ENTER</div> <div>DELETE</div> </div> </div> <div> <div>VCHIP+</div> <div>TO EXIT</div> </div>			

Fig. 31

<p>REVIEW V-CHIP PLUS+ SELECTIONS</p> <p> <input type="button" value="BLOCK"/> <input type="button" value="RECORD"/> <input type="button" value="WATCH"/> </p> <p>BABYSITTER ON(OFF)</p>				
KCBS	2	SAT	05/16	09:00a-10:00a
KNBC	4	M-F		12:00p-01:00p
<p> <input type="button" value="VCHIP+"/> <input type="button" value="MOVE CURSOR"/> </p> <p>TO EXIT</p>	<p> <input type="button" value="ENTER"/> <input type="button" value="DELETE"/> </p>			

Fig. 32

BABYSITTER

160

ON

162

164

OFF

BABYSITTER SETS YOUR TV TO RECIEVE ONLY THOSE PROGRAMS YOU SELECT. TO IDENTIFY THESE PROGRAMS, ENTER THEIR PLUSCODES BELOW:

PLUS CODE

23452

166

ONCE

WEEKLY

DAILY

ΔΔ ΔΔ

TO MOVE

VCHIP+

TO EXIT

REVIEW

BABYSITTER SELECTIONS

ENTER

TO SELECT

Fig. 33

<p>BABYSITTER PROGRAM REVIEW</p> <p style="margin-top: 20px;"> <input type="checkbox"/> ON <input type="checkbox"/> OFF </p>																			
<p>WHEN ON, YOU WILL ONLY BE ABLE TO WATCH THE PROGRAMS LISTED BELOW:</p> <div style="border: 1px solid black; padding: 5px; margin: 10px 0;"> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 15%;">KCBS</td> <td style="width: 10%;">2</td> <td style="width: 15%;">MON</td> <td style="width: 15%;">05/18</td> <td style="width: 20%;">10:00p - 12:30a</td> <td style="width: 25%;"></td> </tr> <tr> <td>KABC</td> <td>7</td> <td>MON</td> <td>WEEKLY</td> <td>02:00p - 03:30p</td> <td></td> </tr> <tr> <td>CH</td> <td>24</td> <td>THU</td> <td>05/21</td> <td>10:30a - 10:00p</td> <td></td> </tr> </table> </div>		KCBS	2	MON	05/18	10:00p - 12:30a		KABC	7	MON	WEEKLY	02:00p - 03:30p		CH	24	THU	05/21	10:30a - 10:00p	
KCBS	2	MON	05/18	10:00p - 12:30a															
KABC	7	MON	WEEKLY	02:00p - 03:30p															
CH	24	THU	05/21	10:30a - 10:00p															
<div style="display: flex; justify-content: space-between; margin-bottom: 10px;"> Δ▽ TO MOVE <input type="button" value="ENTER"/> DELETE </div> <div style="display: flex; justify-content: space-between;"> <input type="button" value="VCHIP +"/> TO CANCEL & EXIT </div> <div style="display: flex; justify-content: space-between;"> <input type="button" value="BABYSITTER"/> BACK TO ENTRY SCREEN </div>																			

Fig. 34

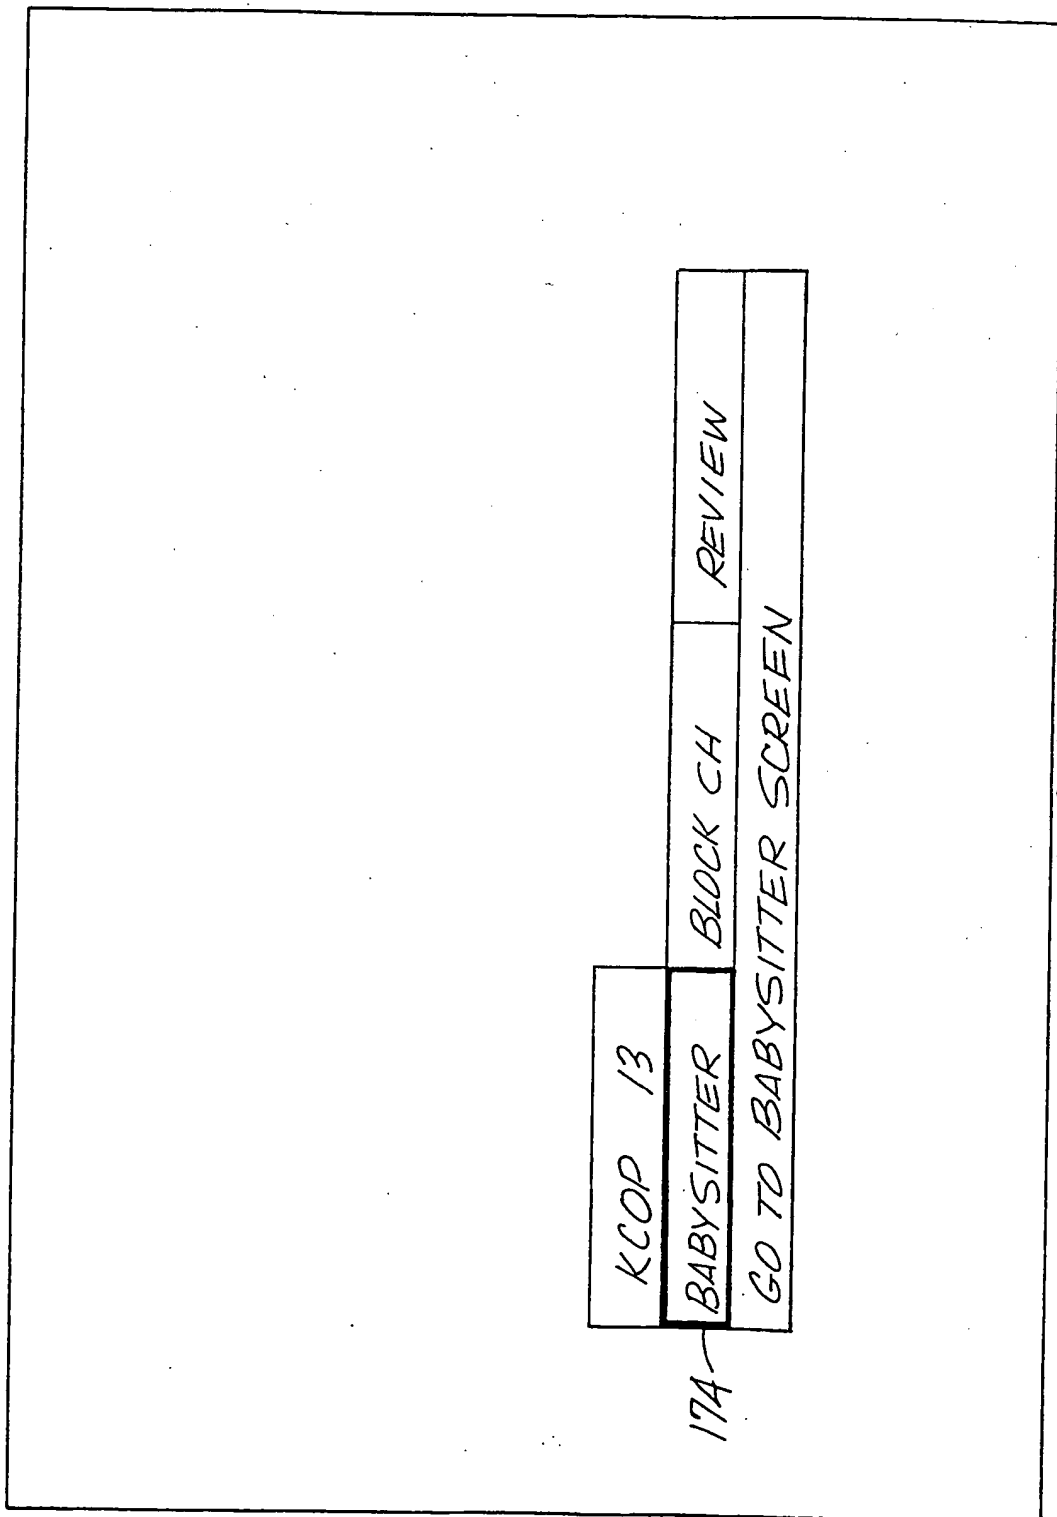


Fig. 35

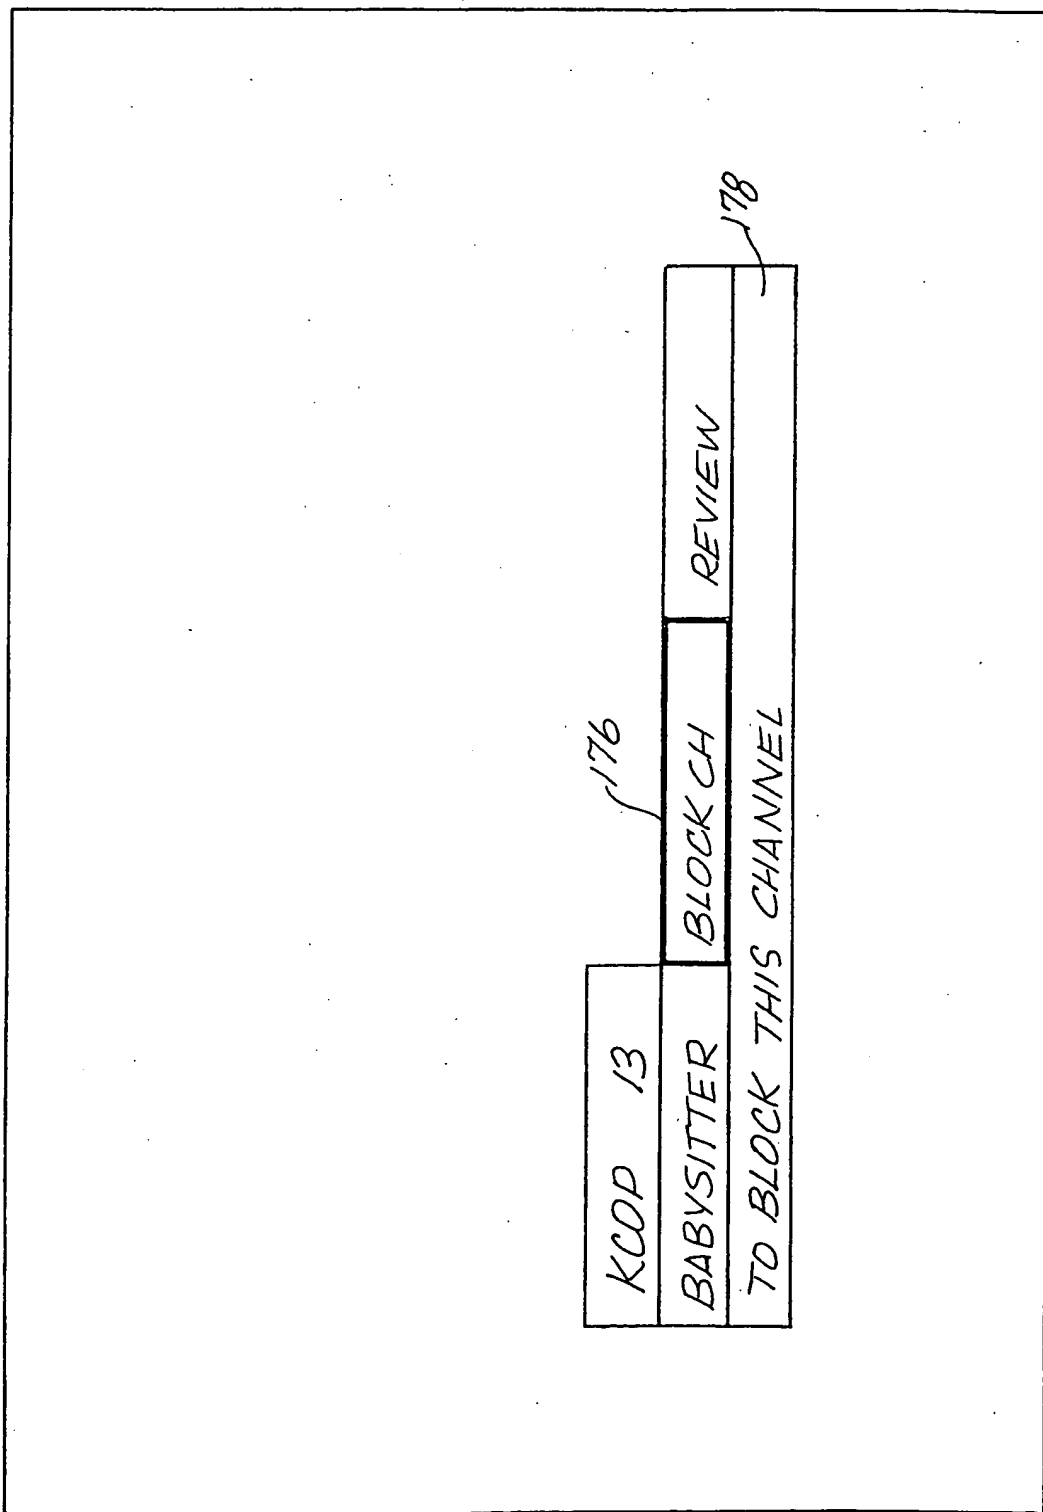


Fig. 36

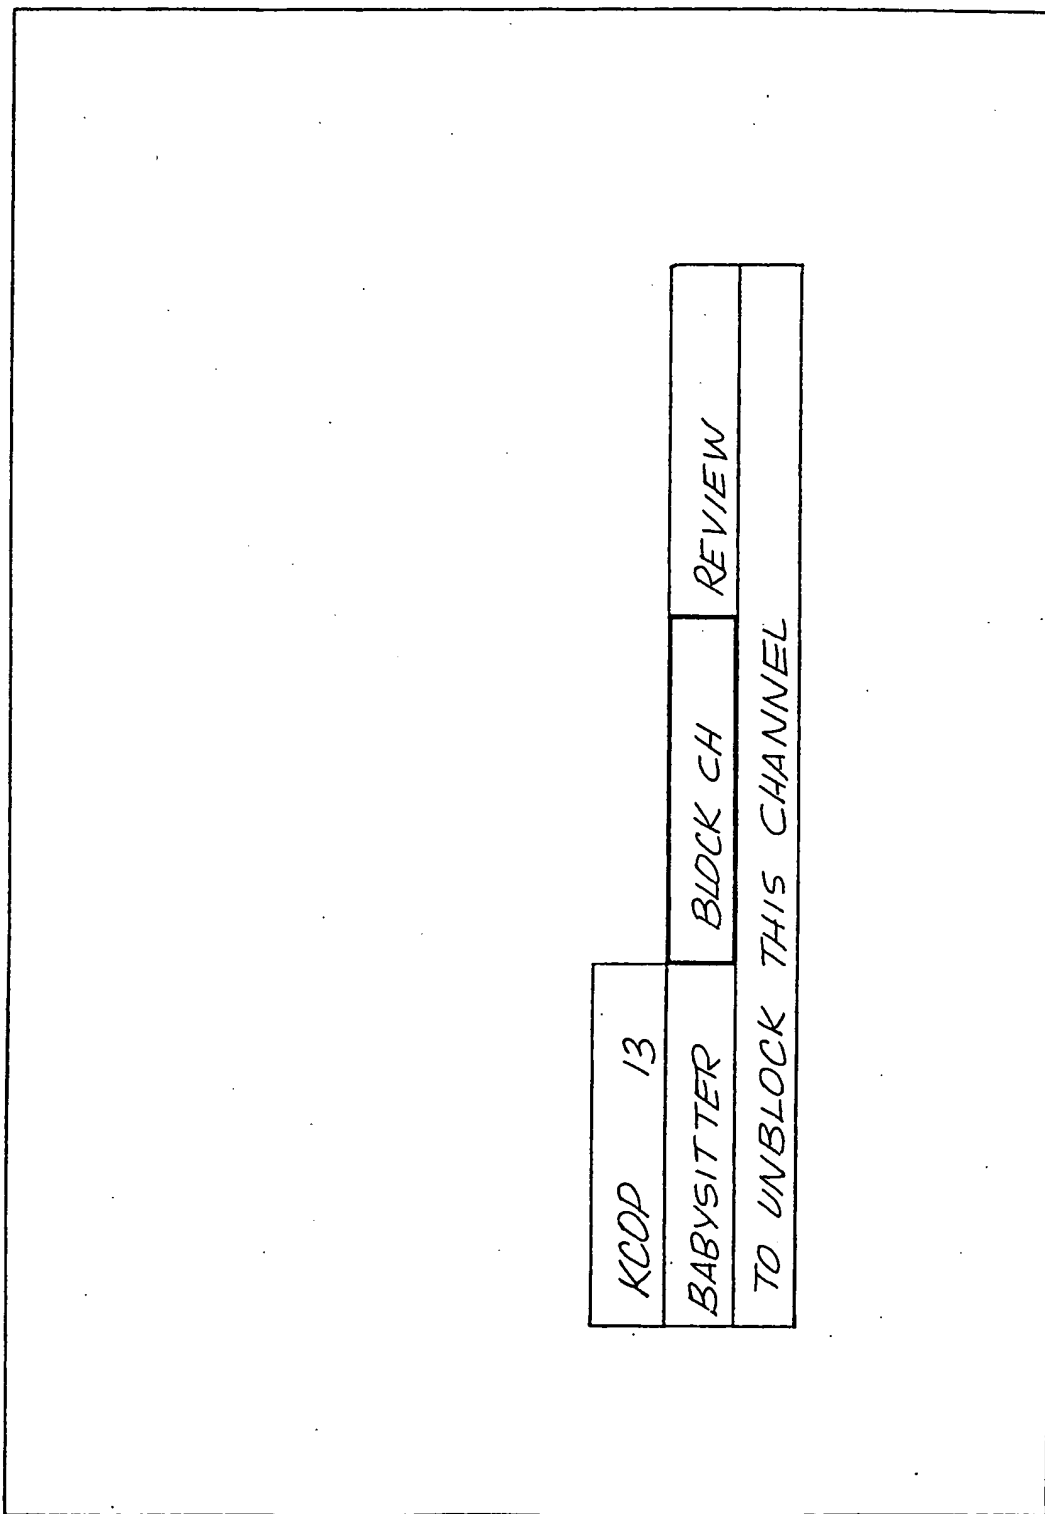


Fig. 37

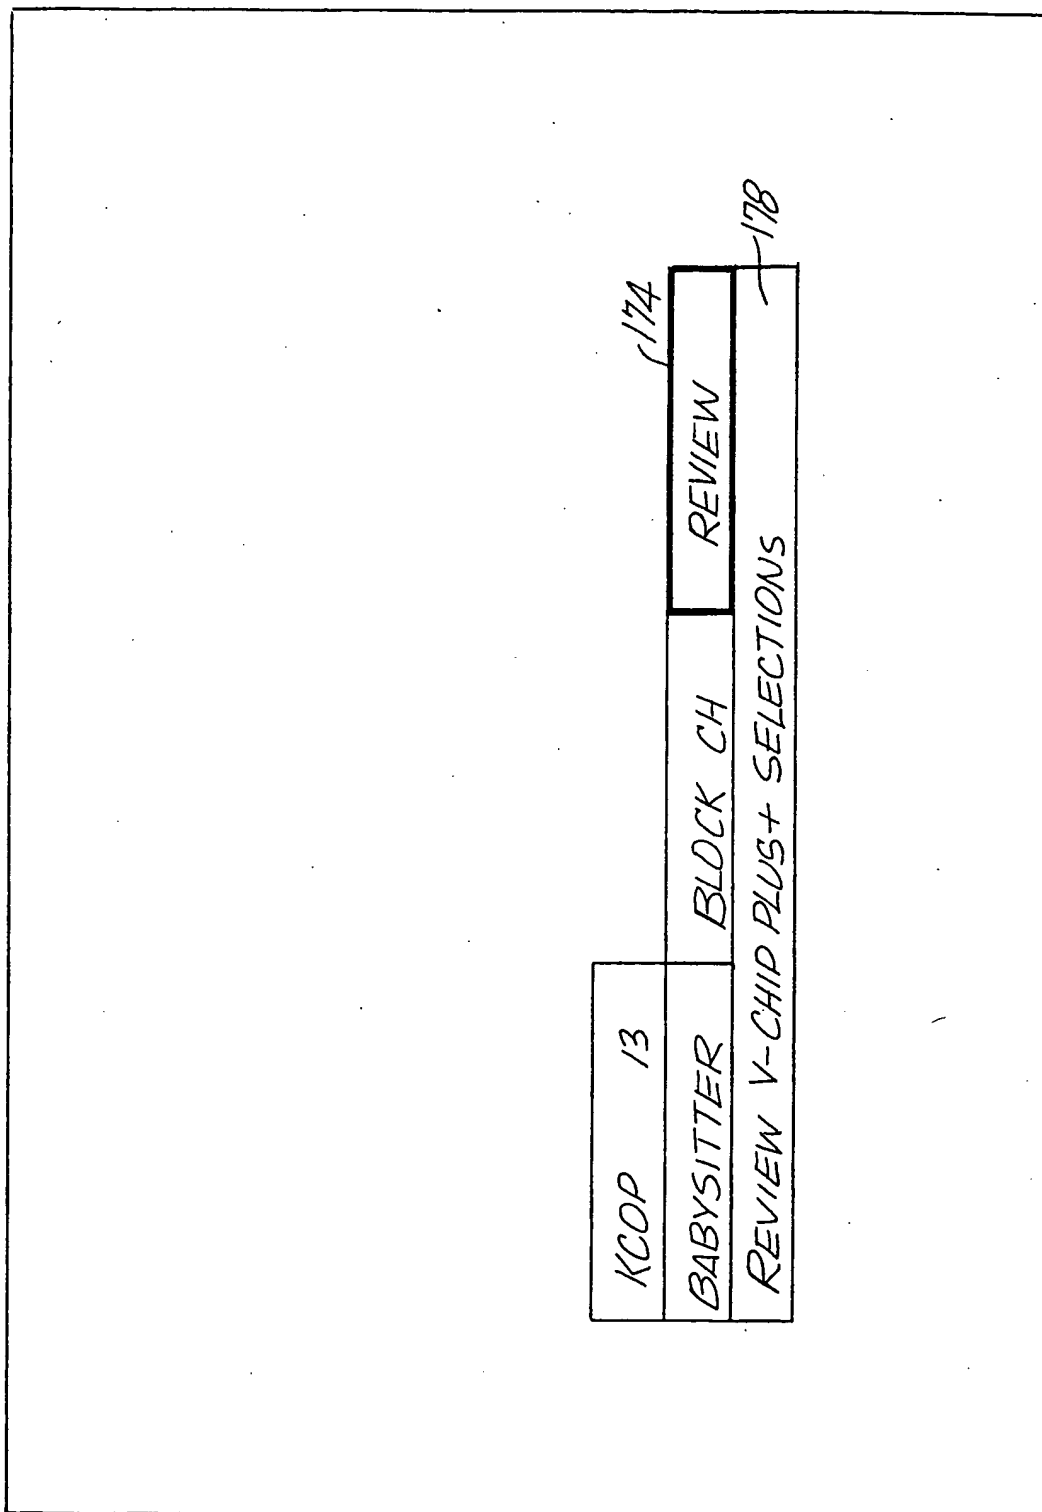


Fig. 38

39/69


FIG. 39

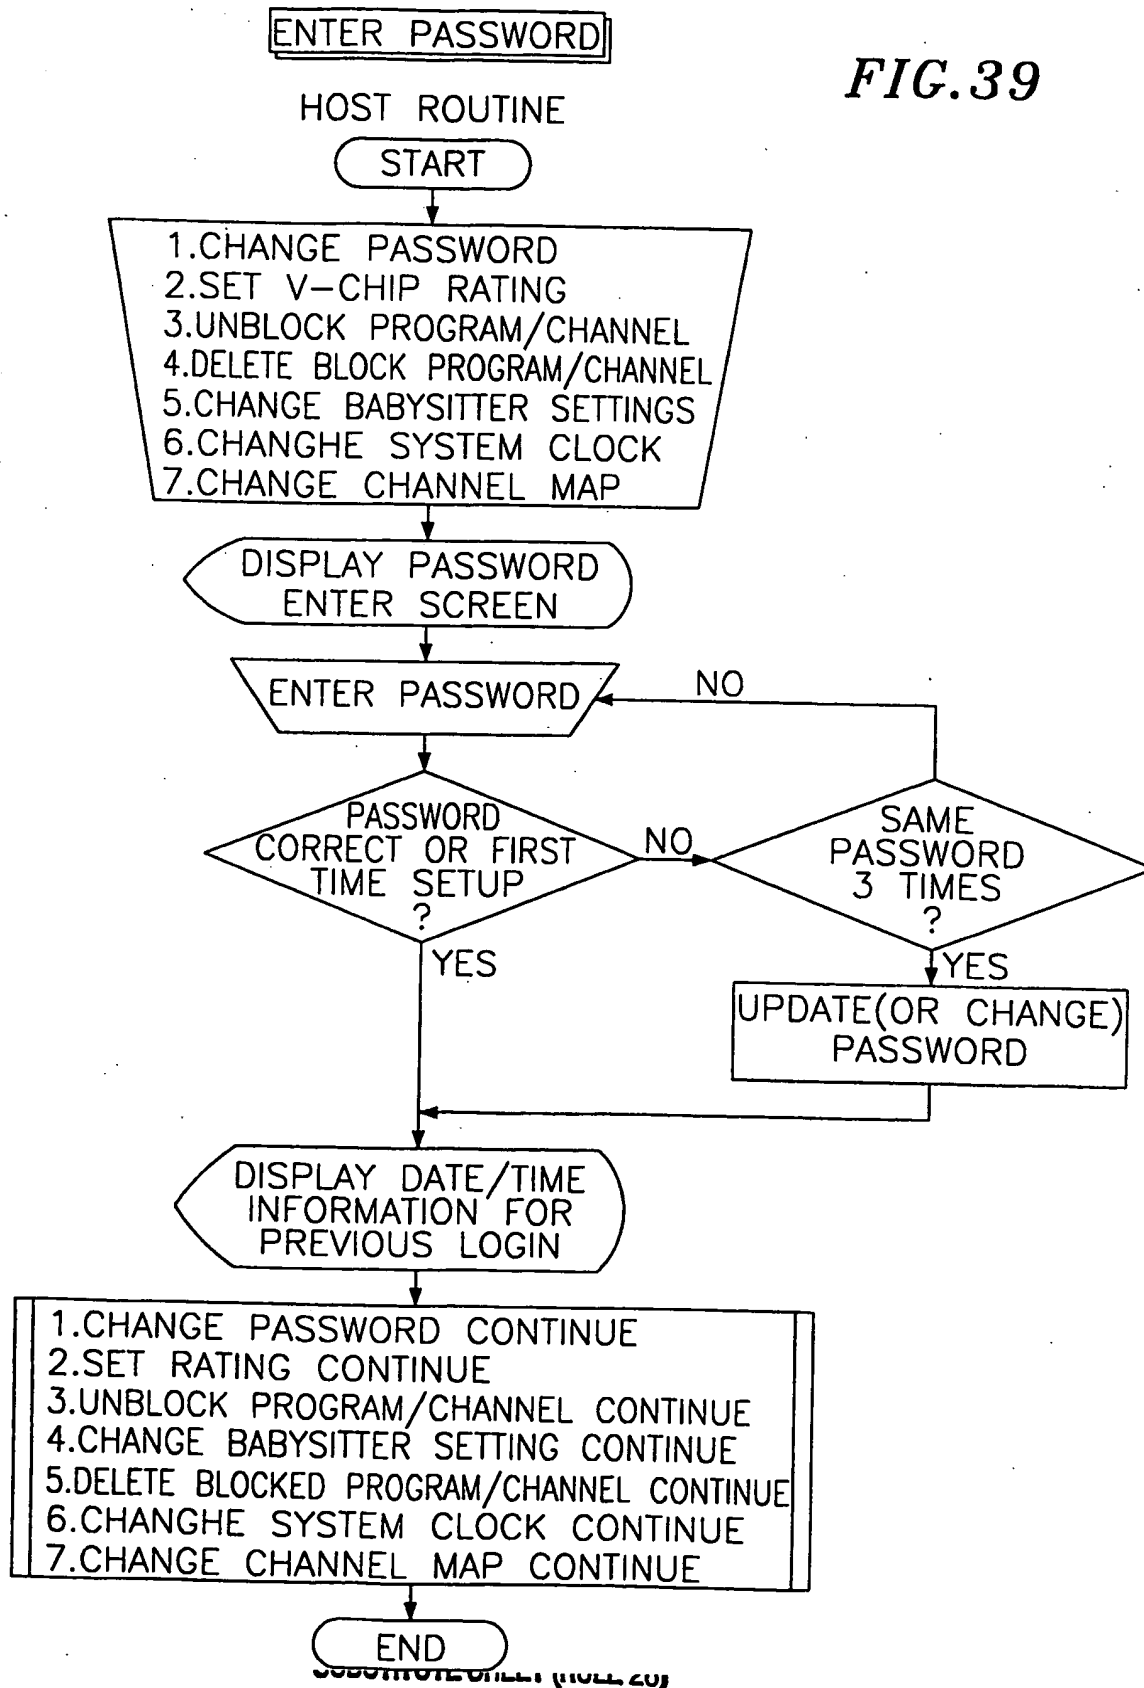FIG. 40

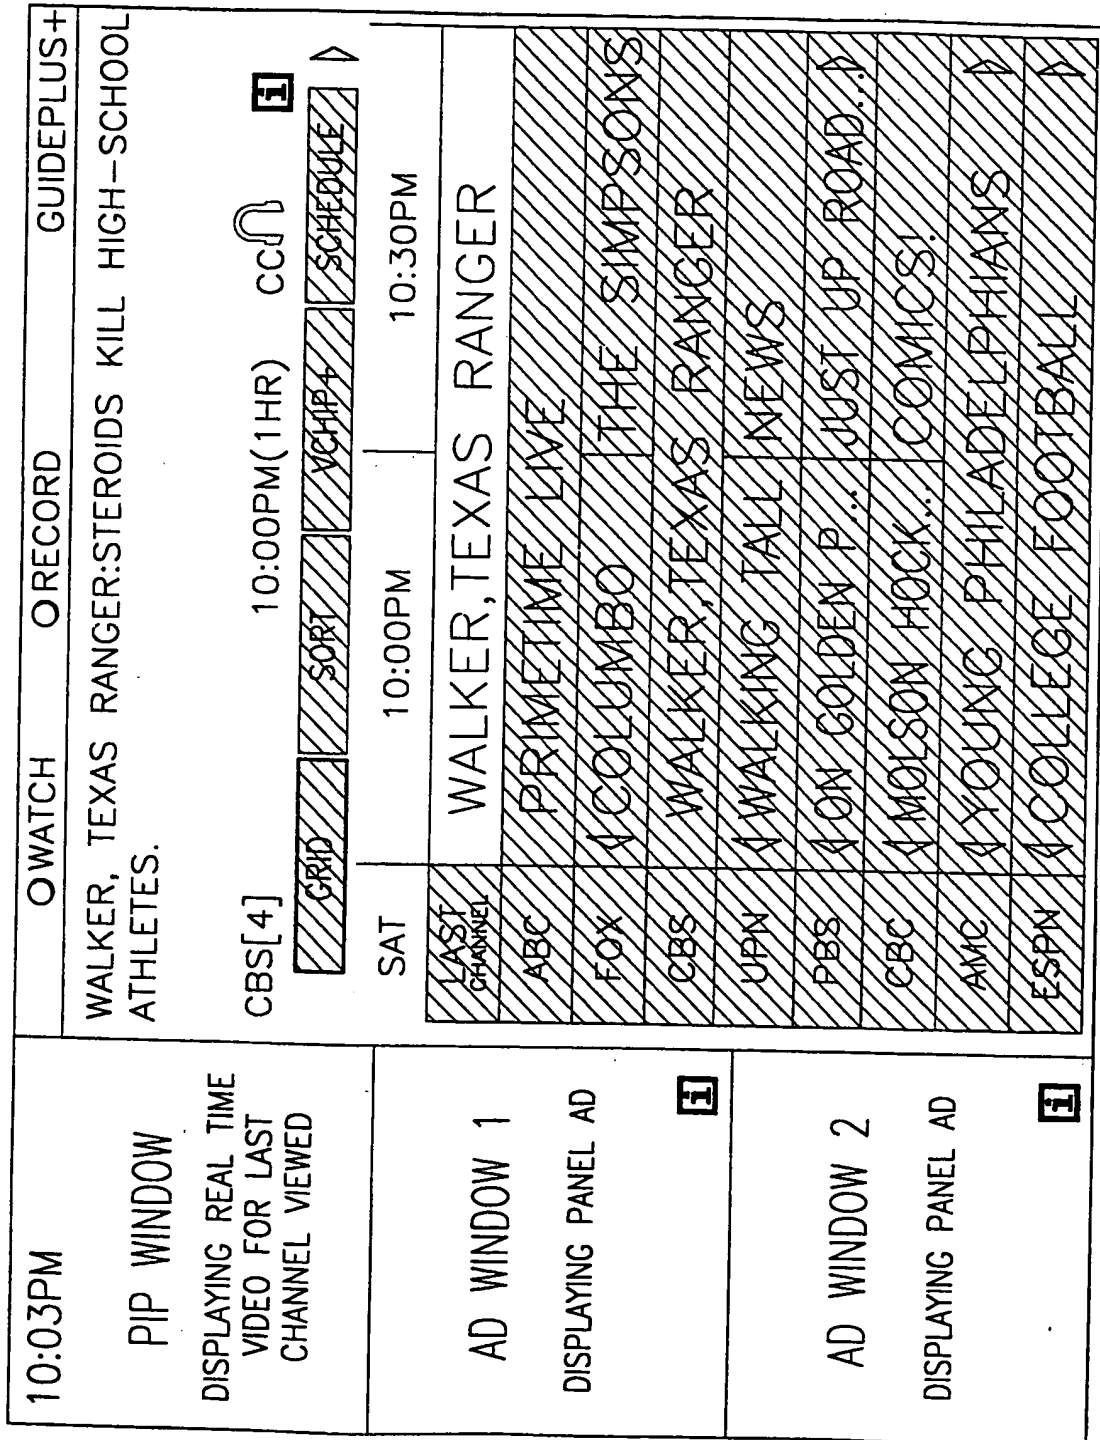


FIG. 41





<div>10:03PM</div> <div>PIP WINDOW</div> <div>DISPLAYING REAL TIME VIDEO FOR LAST CHANNEL VIEWED</div>		<div>O O GUIDEPLUS+</div> <div>GRID DISPLAYS SHOW LISTINGS BY CHANNEL AND TIME SCROLL DOWN TO USE, RIGHT TO VIEW SORT.</div> <div>CBS[4] 10:00PM(1HR) CC </div> <div>GRID SORT VCHIP4 SCHEDULE </div>																			
<div>AD WINDOW 1</div> <div>DISPLAYING PANEL AD</div> <div></div>		<div>SAT 10:00PM 10:30PM</div> <table border="1"><tr><td>LAST CHANNEL</td><td>WALKER, TEXAS RANGER</td></tr><tr><td>ABC</td><td>PRIMETIME LIVE</td></tr><tr><td>FOX</td><td>4 COLUMBO THE SIMPSONS</td></tr><tr><td>CBS</td><td>WALKER, TEXAS RANGER</td></tr><tr><td>UPN</td><td>4 WALKING TALL NEWS</td></tr><tr><td>PBS</td><td>4 ON GOLDEN P... JUST UP ROAD..</td></tr><tr><td>CBC</td><td>4 MOLSON HOCK... COMICS!</td></tr><tr><td>AMC</td><td>4 YOUNG PHILADELPHIANS</td></tr><tr><td>ESPN</td><td>4 COLLEGE FOOTBALL</td></tr></table>		LAST CHANNEL	WALKER, TEXAS RANGER	ABC	PRIMETIME LIVE	FOX	4 COLUMBO THE SIMPSONS	CBS	WALKER, TEXAS RANGER	UPN	4 WALKING TALL NEWS	PBS	4 ON GOLDEN P... JUST UP ROAD..	CBC	4 MOLSON HOCK... COMICS!	AMC	4 YOUNG PHILADELPHIANS	ESPN	4 COLLEGE FOOTBALL
LAST CHANNEL	WALKER, TEXAS RANGER																				
ABC	PRIMETIME LIVE																				
FOX	4 COLUMBO THE SIMPSONS																				
CBS	WALKER, TEXAS RANGER																				
UPN	4 WALKING TALL NEWS																				
PBS	4 ON GOLDEN P... JUST UP ROAD..																				
CBC	4 MOLSON HOCK... COMICS!																				
AMC	4 YOUNG PHILADELPHIANS																				
ESPN	4 COLLEGE FOOTBALL																				
<div>AD WINDOW 2</div> <div>DISPLAYING PANEL AD</div> <div></div>																					

FIG. 42

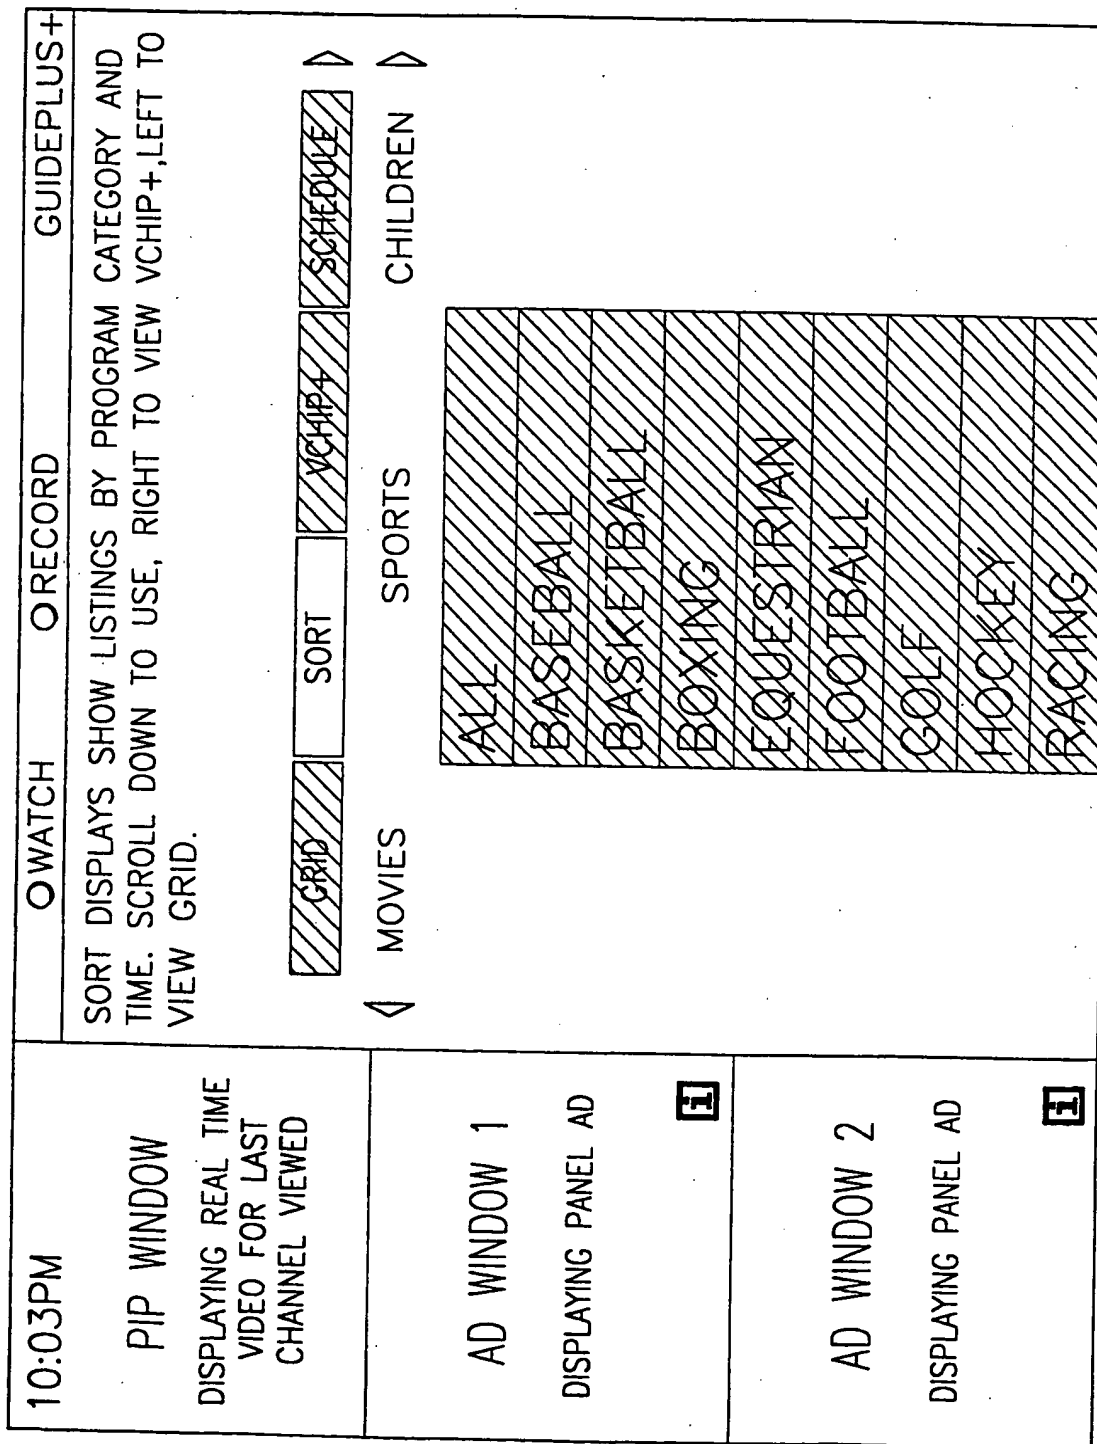


FIG. 43


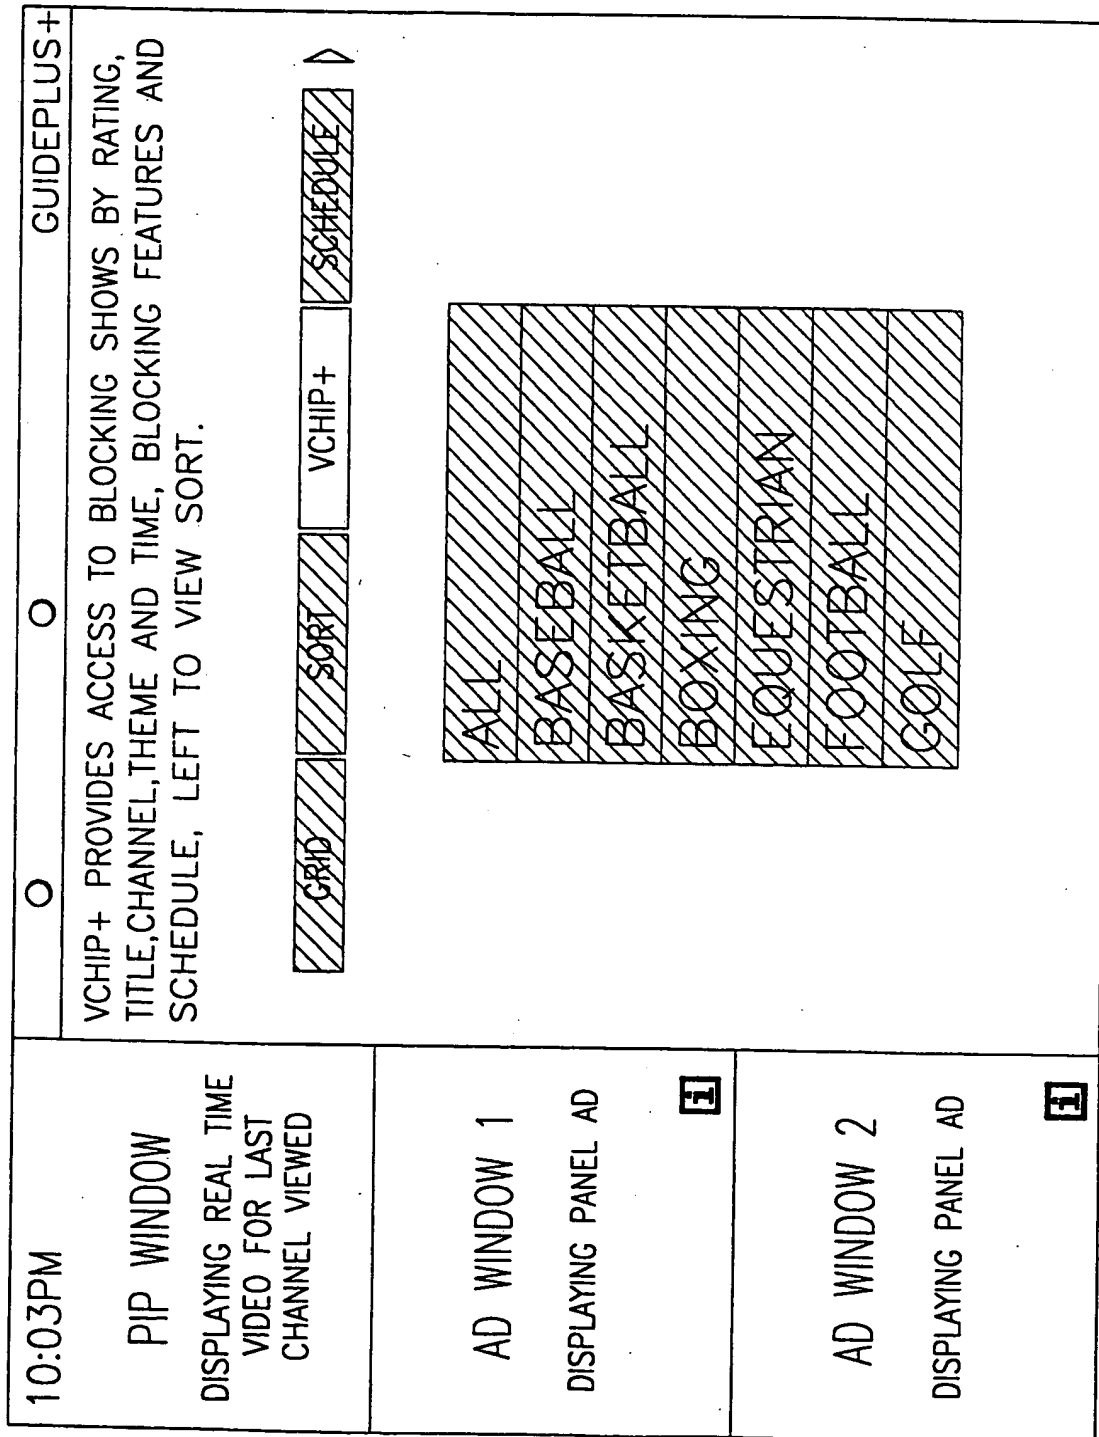
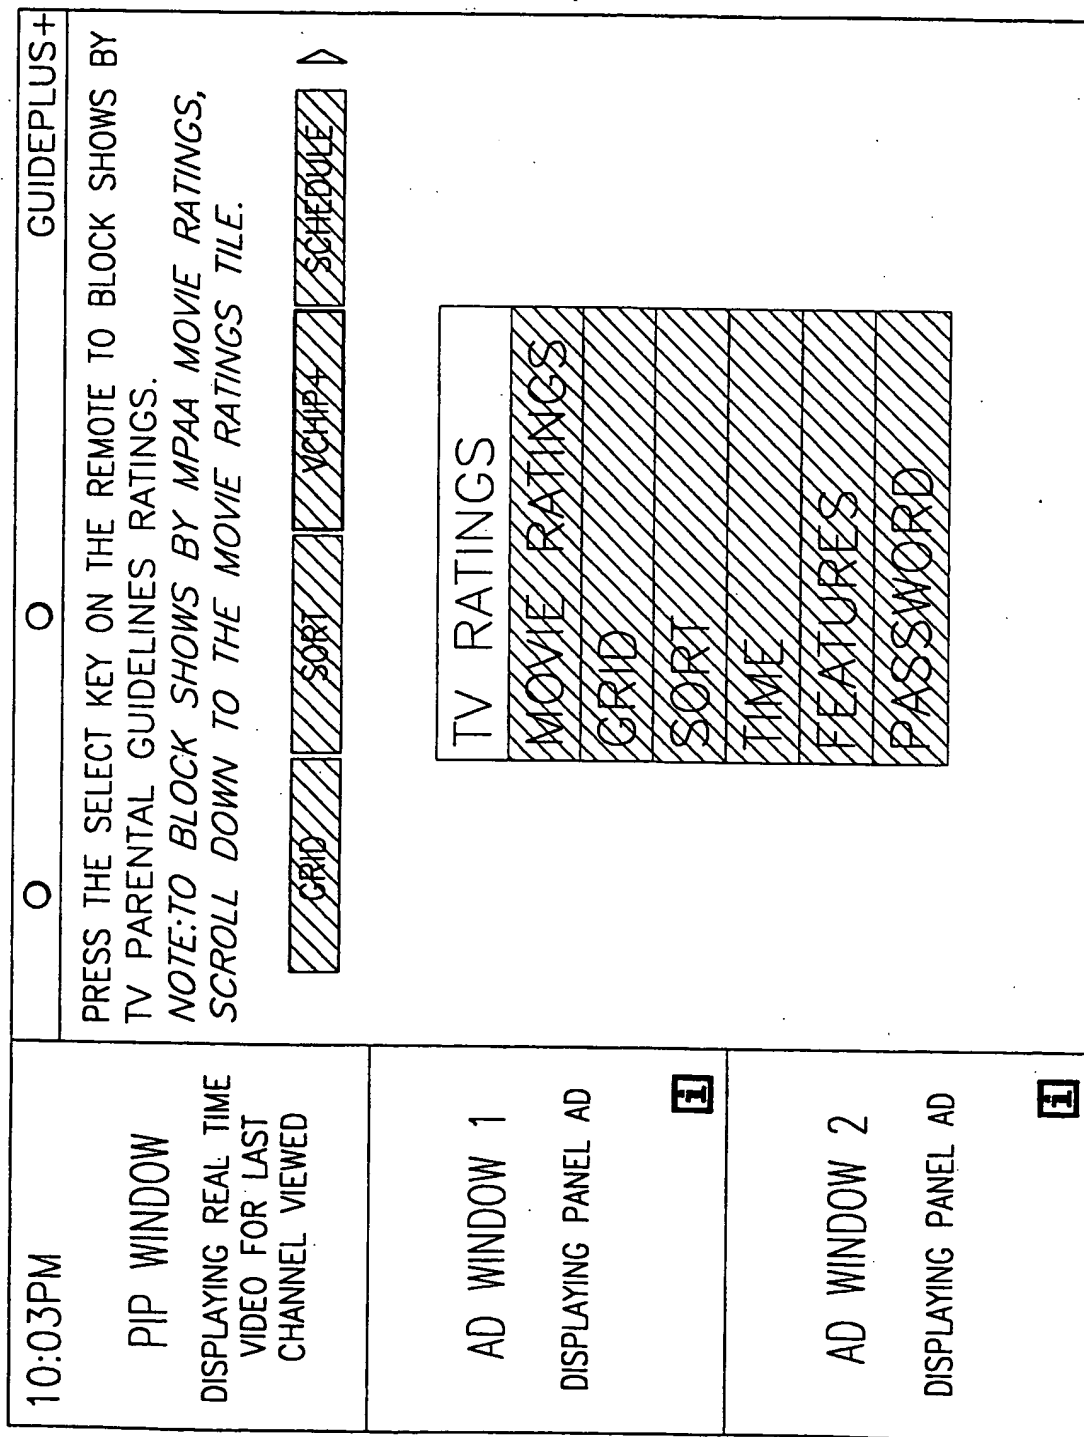








FIG. 44




45/69

FIG. 45

<p>10:03PM</p> <p>PIP WINDOW</p> <p>DISPLAYING REAL TIME VIDEO FOR LAST CHANNEL VIEWED</p>	<p>O OBLOCK GUIDEPLUS+</p> <p> ALL CHILDREN. PROGRAMS WITH THIS RATING ARE DESIGNED TO BE APPROPRIATE FOR ALL CHILDREN</p> <p>PRESS THE GREEN KEY TO BLOCK THIS AND HIGHER RATINGS.</p> <p>   </p>																																										
<p>AD WINDOW 1</p> <p>DISPLAYING PANEL AD</p> <p></p>	<p>TV PARENTAL GUIDELINES RATINGS</p> <p>PROGRAMS DESIGNED SOLELY FOR CHILDREN:</p> <table border="1"> <tr> <td>TV Y</td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>TV Y7</td> <td>TV Y7</td> <td></td> <td></td> <td></td> <td></td> </tr> </table> <p>PROGRAMS DESIGNED FOR THE ENTIRE AUDIENCE:</p> <table border="1"> <tr> <td>TV C</td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>TV PG</td> <td>TV V</td> <td>TV S</td> <td>TV L</td> <td>TV D</td> <td></td> </tr> <tr> <td>TV 14</td> <td>TV V</td> <td>TV S</td> <td>TV L</td> <td>TV D</td> <td></td> </tr> <tr> <td>TV MA</td> <td>TV V</td> <td>TV S</td> <td>TV L</td> <td>TV D</td> <td></td> </tr> </table> <p>PROGRAMS THAT HAVE NOT BEEN RATED:</p> <table border="1"> <tr> <td>UNRATED</td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </table>	TV Y						TV Y7	TV Y7					TV C						TV PG	TV V	TV S	TV L	TV D		TV 14	TV V	TV S	TV L	TV D		TV MA	TV V	TV S	TV L	TV D		UNRATED					
TV Y																																											
TV Y7	TV Y7																																										
TV C																																											
TV PG	TV V	TV S	TV L	TV D																																							
TV 14	TV V	TV S	TV L	TV D																																							
TV MA	TV V	TV S	TV L	TV D																																							
UNRATED																																											
<p>AD WINDOW 2</p> <p>DISPLAYING PANEL AD</p> <p></p>	<p>PROGRAMS THAT HAVE NOT BEEN RATED:</p> <table border="1"> <tr> <td>UNRATED</td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </table>	UNRATED																																									
UNRATED																																											

46/69

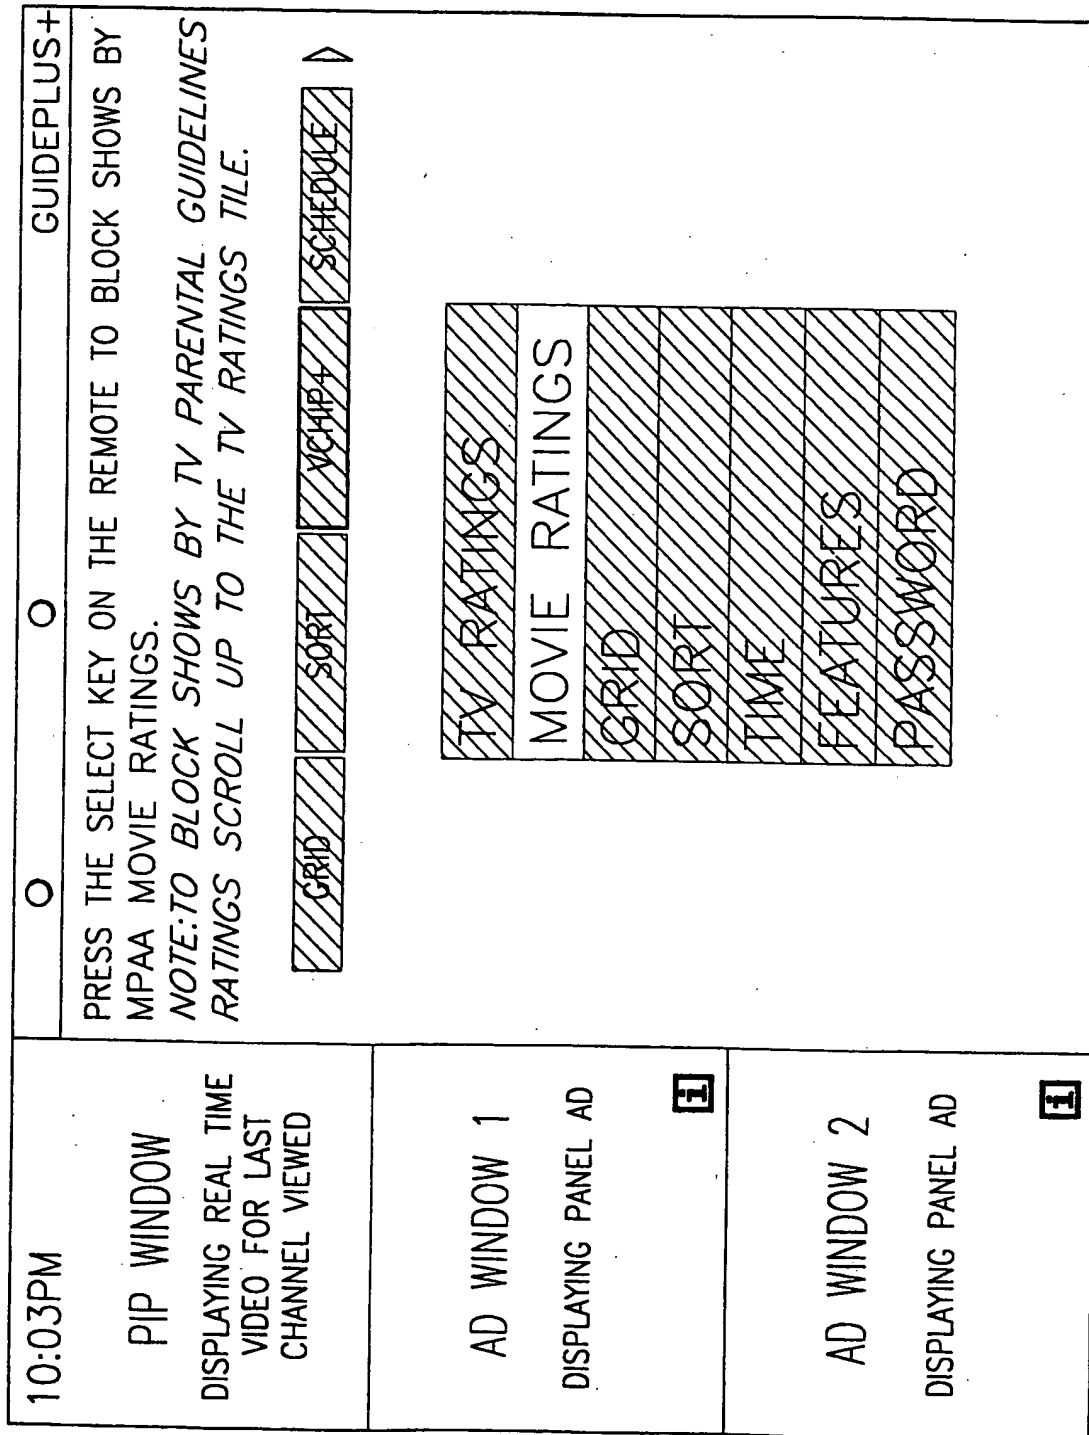FIG. 46



47/69

FIG. 47

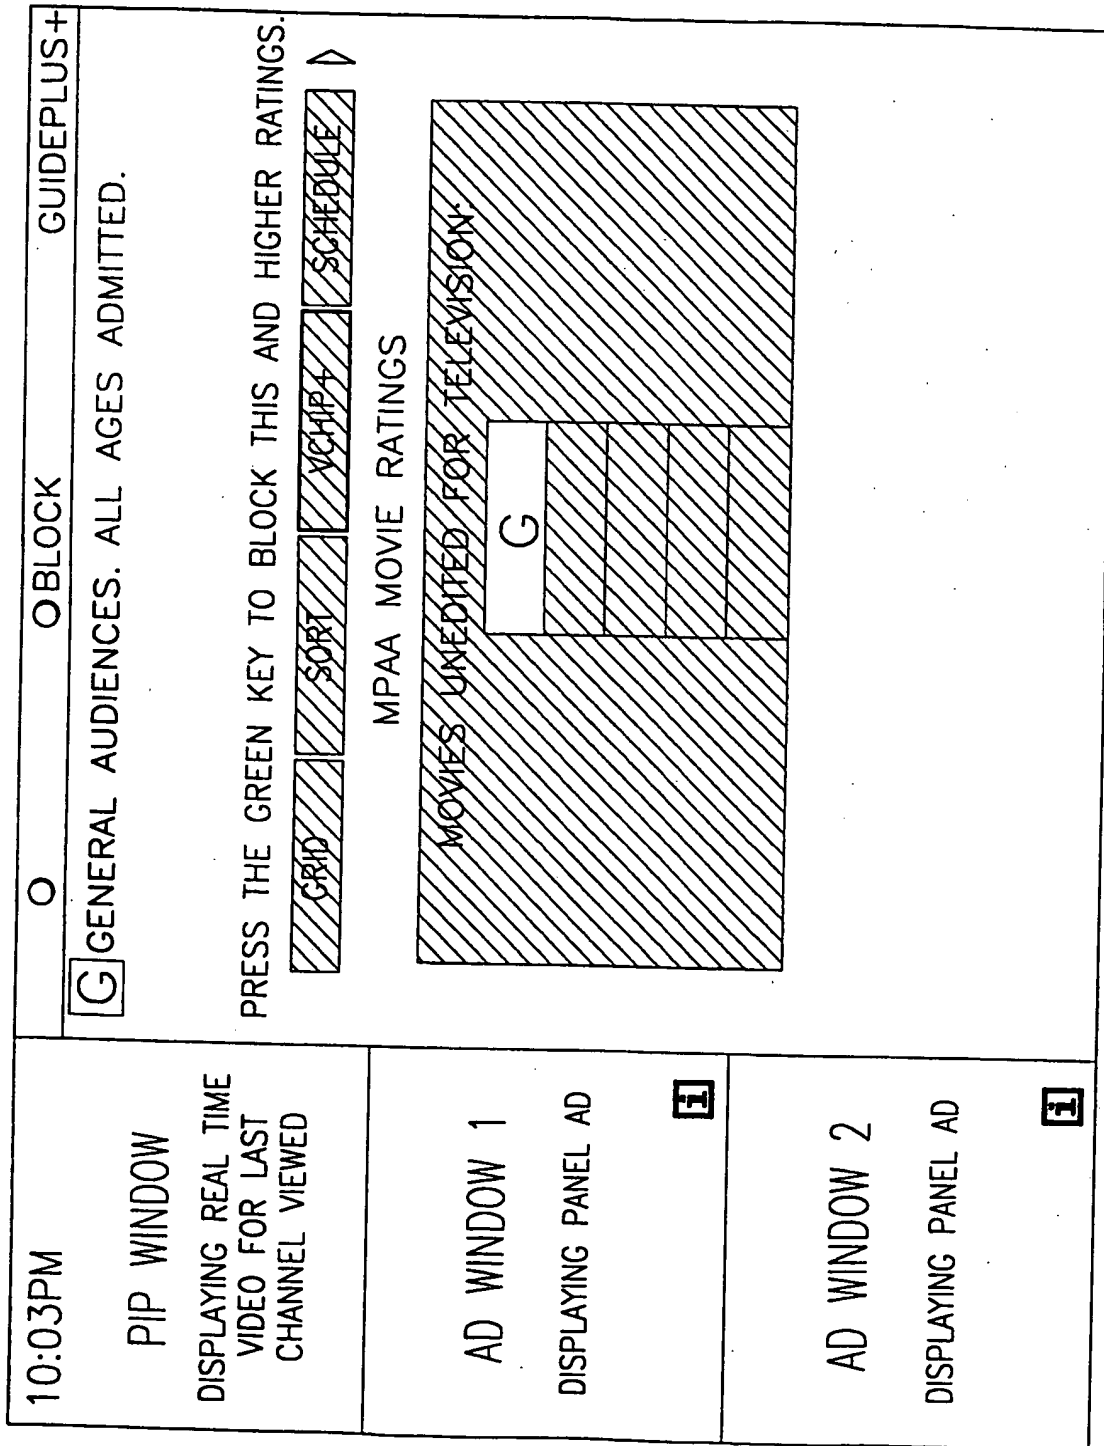


FIG. 48

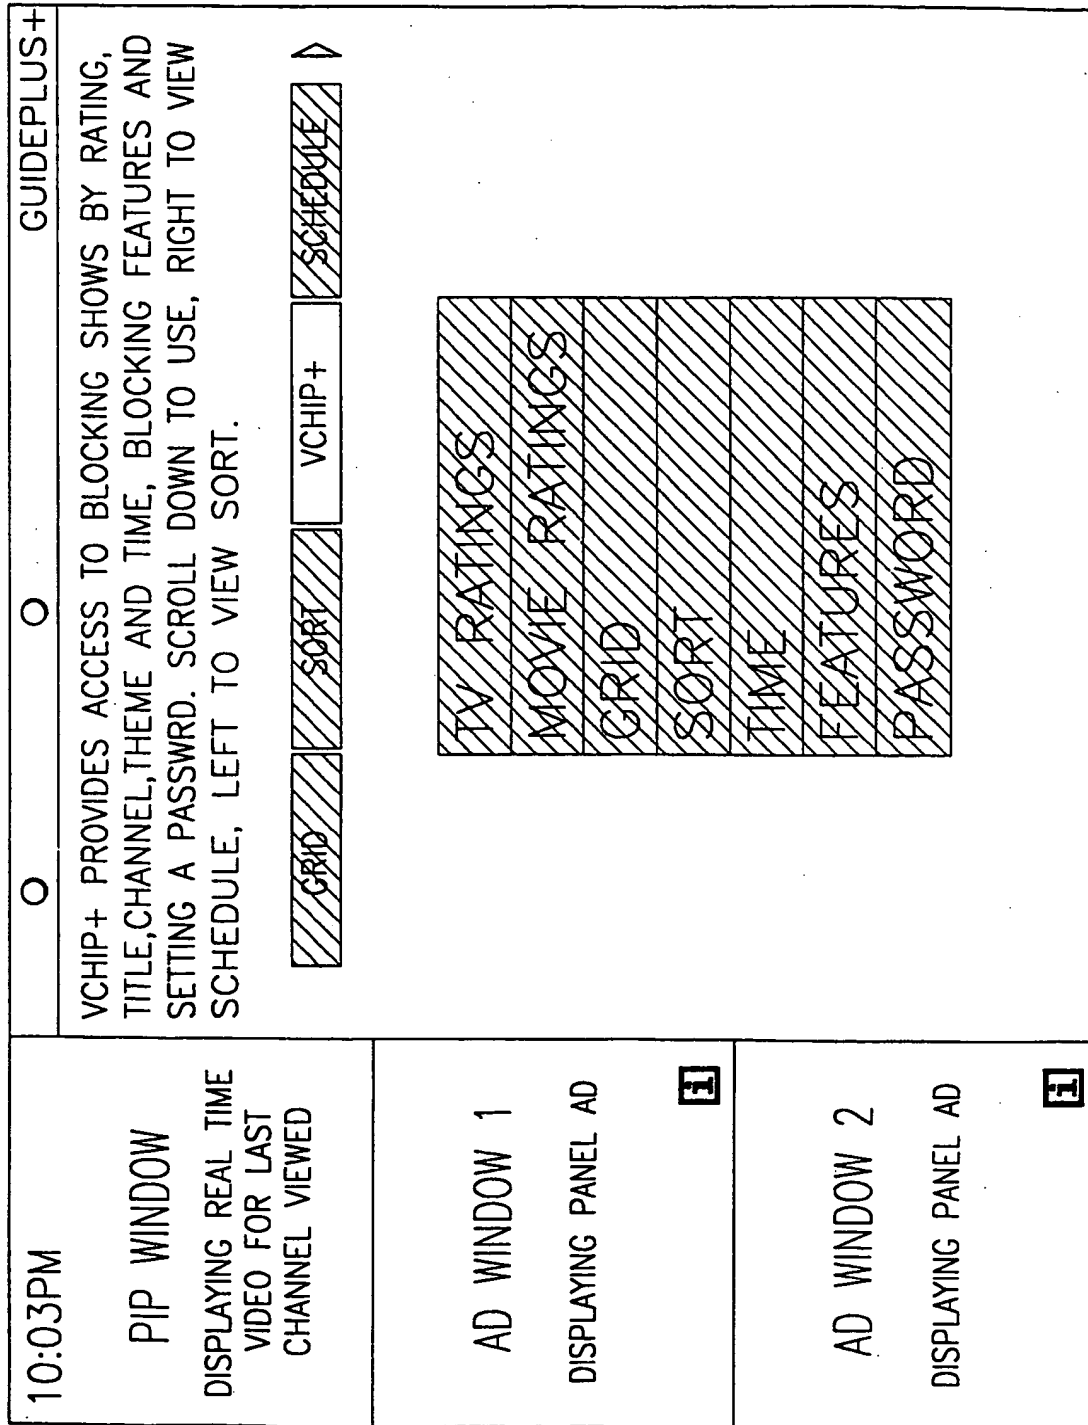


FIG. 49


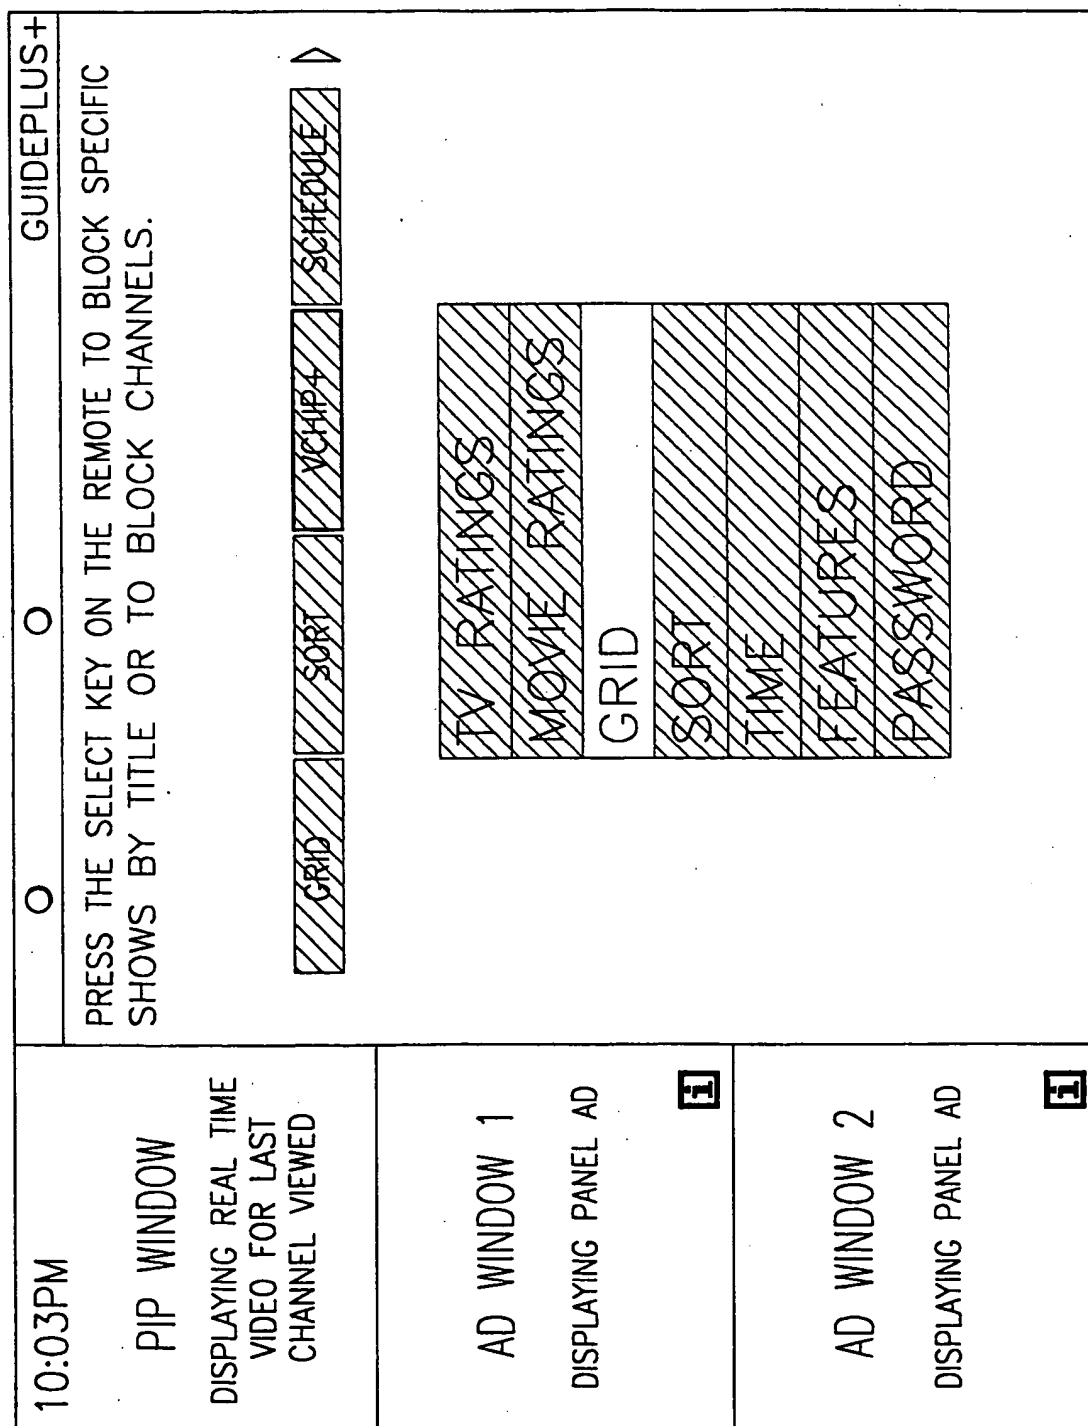


FIG. 50

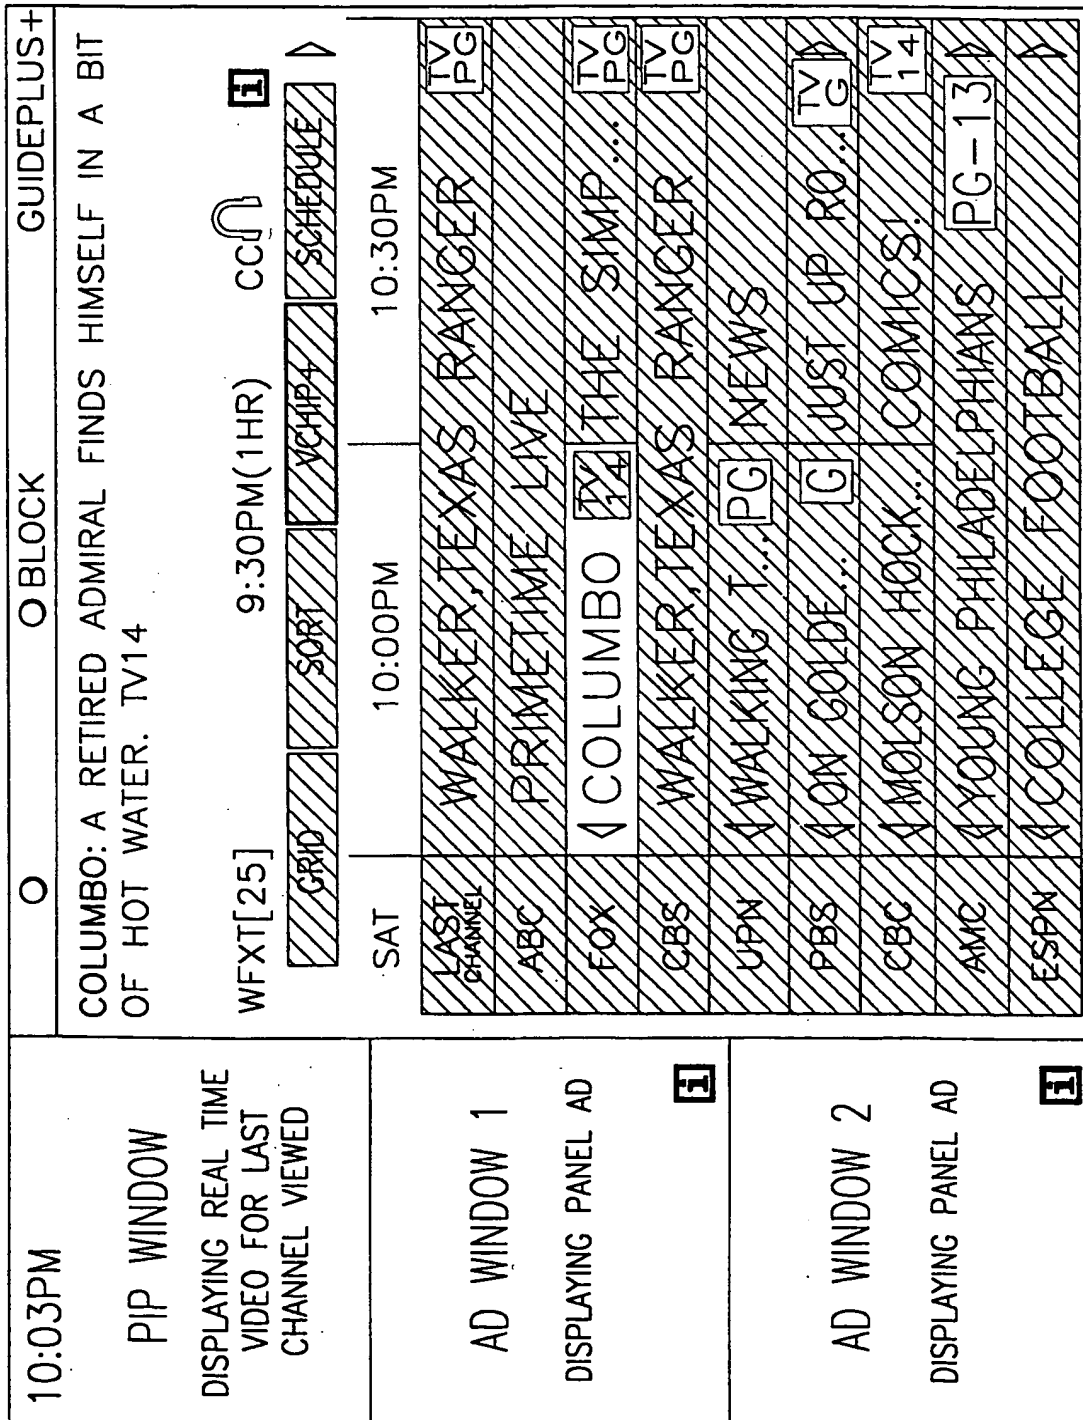

51/69

FIG. 51

<p>10:03PM</p> <p>PIP WINDOW</p> <p>DISPLAYING REAL TIME VIDEO FOR LAST CHANNEL VIEWED</p>	<p>O OBLOCK GUIDEPLUS+</p> <p>FOX WFXT[25]</p> <p>PRESS THE GREEN KEY TO BLOCK THIS CHANNEL.</p> <p>CRIP SORT VCHIP4 SCHEDULE</p>																											
<p>AD WINDOW 1</p> <p>DISPLAYING PANEL AD</p> <p>I</p>	<p>SAT 10:00PM 10:30PM</p> <table border="1"> <tr> <td>LAST CHANNEL</td> <td>WALKER, TEXAS RANGER</td> <td>TV PG</td> </tr> <tr> <td>ABC</td> <td>PRIMETIME LIVE</td> <td></td> </tr> <tr> <td>FOX</td> <td>COLUMBO</td> <td>TV 14 THE SIMP...</td> </tr> <tr> <td>CBS</td> <td>WALKER, TEXAS RANGER</td> <td>TV PG</td> </tr> <tr> <td>UPN</td> <td>WALKING T...</td> <td>PG NEWS</td> </tr> <tr> <td>PBS</td> <td>ON GOLDE...</td> <td>G JUST UP RO... TV G</td> </tr> <tr> <td>CBC</td> <td>MOLSON HOCK...</td> <td>COMICS! TV 14</td> </tr> <tr> <td>AMC</td> <td>YOUNG PHILADELPHIANS</td> <td>PG-13</td> </tr> <tr> <td>ESPN</td> <td>COLLEGE FOOTBALL</td> <td></td> </tr> </table>	LAST CHANNEL	WALKER, TEXAS RANGER	TV PG	ABC	PRIMETIME LIVE		FOX	COLUMBO	TV 14 THE SIMP...	CBS	WALKER, TEXAS RANGER	TV PG	UPN	WALKING T...	PG NEWS	PBS	ON GOLDE...	G JUST UP RO... TV G	CBC	MOLSON HOCK...	COMICS! TV 14	AMC	YOUNG PHILADELPHIANS	PG-13	ESPN	COLLEGE FOOTBALL	
LAST CHANNEL	WALKER, TEXAS RANGER	TV PG																										
ABC	PRIMETIME LIVE																											
FOX	COLUMBO	TV 14 THE SIMP...																										
CBS	WALKER, TEXAS RANGER	TV PG																										
UPN	WALKING T...	PG NEWS																										
PBS	ON GOLDE...	G JUST UP RO... TV G																										
CBC	MOLSON HOCK...	COMICS! TV 14																										
AMC	YOUNG PHILADELPHIANS	PG-13																										
ESPN	COLLEGE FOOTBALL																											
<p>AD WINDOW 2</p> <p>DISPLAYING PANEL AD</p> <p>I</p>																												

FIG. 52

<p>10:03PM</p> <p>PIP WINDOW</p> <p>DISPLAYING REAL TIME VIDEO FOR LAST CHANNEL VIEWED</p>	<p>O UNBLOCK O GUIDEPLUS+</p> <p>FOX WFXT[25]</p> <p>PRESS THE BLUE KEY TO UNBLOCK THIS CHANNEL.</p> <p>CRIP SORT VCHIP4 SCHEDULE</p>																														
<p>AD WINDOW 1</p> <p>DISPLAYING PANEL AD</p> <p>I</p>	<table border="1"> <thead> <tr> <th>SAT</th> <th>10:00PM</th> <th>10:30PM</th> </tr> </thead> <tbody> <tr> <td>LAST CHANNEL</td> <td>WALKER, TEXAS RANGER</td> <td>TV PG</td> </tr> <tr> <td>ABC</td> <td>PRIMETIME LIVE</td> <td></td> </tr> <tr> <td>FOX</td> <td>4 COLUMBO TV 14 THE SIMP...</td> <td>TV PG</td> </tr> <tr> <td>CBS</td> <td>WALKER, TEXAS RANGER</td> <td>TV PG</td> </tr> <tr> <td>UPN</td> <td>1 WALKING T... PG NEWS</td> <td></td> </tr> <tr> <td>PBS</td> <td>1 ON GOLDE... G JUST UP RO... TV G</td> <td></td> </tr> <tr> <td>CBC</td> <td>1 MOLSON HOCK... COMICS!</td> <td>TV 14</td> </tr> <tr> <td>AMC</td> <td>1 YOUNG PHILADELPHANS PG-13</td> <td></td> </tr> <tr> <td>ESPN</td> <td>1 COLLEGE FOOTBALL</td> <td></td> </tr> </tbody> </table>	SAT	10:00PM	10:30PM	LAST CHANNEL	WALKER, TEXAS RANGER	TV PG	ABC	PRIMETIME LIVE		FOX	4 COLUMBO TV 14 THE SIMP...	TV PG	CBS	WALKER, TEXAS RANGER	TV PG	UPN	1 WALKING T... PG NEWS		PBS	1 ON GOLDE... G JUST UP RO... TV G		CBC	1 MOLSON HOCK... COMICS!	TV 14	AMC	1 YOUNG PHILADELPHANS PG-13		ESPN	1 COLLEGE FOOTBALL	
SAT	10:00PM	10:30PM																													
LAST CHANNEL	WALKER, TEXAS RANGER	TV PG																													
ABC	PRIMETIME LIVE																														
FOX	4 COLUMBO TV 14 THE SIMP...	TV PG																													
CBS	WALKER, TEXAS RANGER	TV PG																													
UPN	1 WALKING T... PG NEWS																														
PBS	1 ON GOLDE... G JUST UP RO... TV G																														
CBC	1 MOLSON HOCK... COMICS!	TV 14																													
AMC	1 YOUNG PHILADELPHANS PG-13																														
ESPN	1 COLLEGE FOOTBALL																														
<p>AD WINDOW 2</p> <p>DISPLAYING PANEL AD</p> <p>I</p>																															

FIG. 53

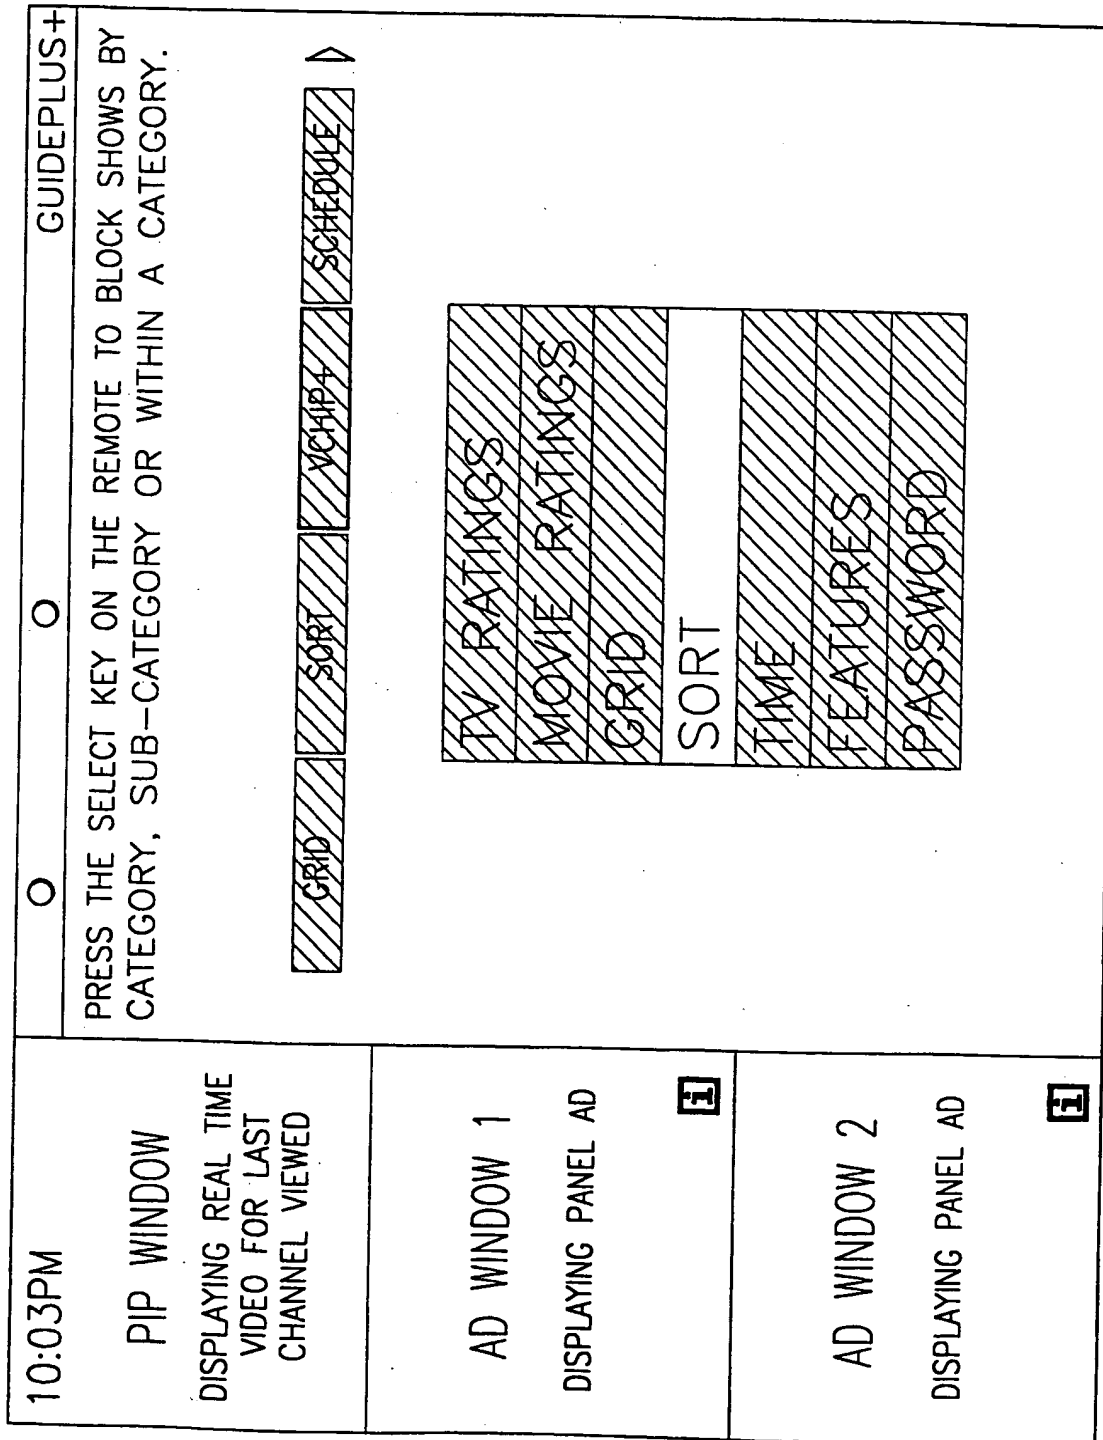


FIG. 54

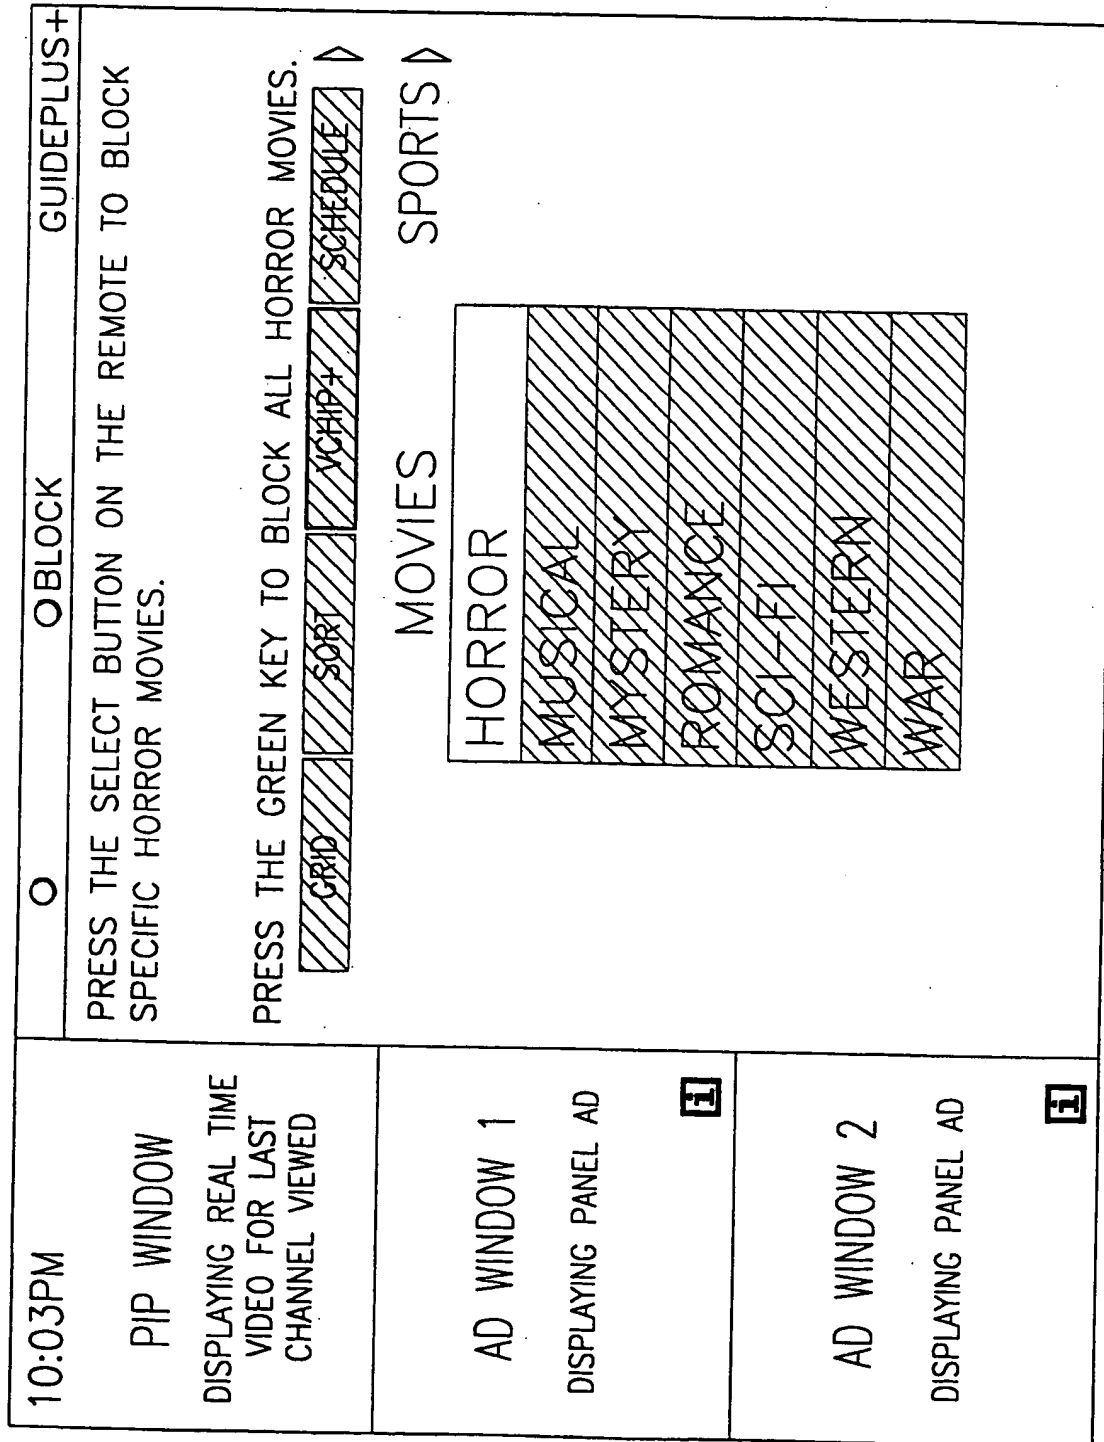


FIG.55

<p>10:03PM</p> <p>PIP WINDOW</p> <p>DISPLAYING REAL TIME VIDEO FOR LAST CHANNEL VIEWED</p>	<table border="1"><tr><td data-bbox="248 512 321 1543"><p>O</p></td><td data-bbox="321 512 613 1543"><p>OBLOCK</p><p>GUIDEPLUS+</p><p>THE SEVENTH SIGN: HORROR 1988 DEMI MORRE, MICHAEL BIEHN,R</p><p>SHOW[29] 8:00PM(2HR) I</p><table border="1"><tr><td>GRID</td><td>SORT</td><td>VC4IP4</td><td>SCHEDULE</td></tr></table><p>MOVIES: HORROR SAT, SEPTEMBER 13</p><table border="1"><tr><td>SHOWTIME</td><td>THE SEVENTH SIGN</td><td>8:00PM</td></tr><tr><td>TNT</td><td>FRIDAY THE 13TH</td><td>PG 8:00PM</td></tr><tr><td>SHOWTIME</td><td>THE SEVENTH SIGN</td><td>R 10:00PM</td></tr><tr><td>TNT</td><td>THE STAND</td><td>PG 11:00PM</td></tr></table></td></tr><tr><td data-bbox="613 1543 971 1950"><p>AD WINDOW 1</p><p>DISPLAYING PANEL AD</p><p>I</p></td><td></td></tr><tr><td data-bbox="971 1543 1354 1950"><p>AD WINDOW 2</p><p>DISPLAYING PANEL AD</p><p>I</p></td><td></td></tr></table>	<p>O</p>	<p>OBLOCK</p> <p>GUIDEPLUS+</p> <p>THE SEVENTH SIGN: HORROR 1988 DEMI MORRE, MICHAEL BIEHN,R</p> <p>SHOW[29] 8:00PM(2HR) I</p> <table border="1"><tr><td>GRID</td><td>SORT</td><td>VC4IP4</td><td>SCHEDULE</td></tr></table> <p>MOVIES: HORROR SAT, SEPTEMBER 13</p> <table border="1"><tr><td>SHOWTIME</td><td>THE SEVENTH SIGN</td><td>8:00PM</td></tr><tr><td>TNT</td><td>FRIDAY THE 13TH</td><td>PG 8:00PM</td></tr><tr><td>SHOWTIME</td><td>THE SEVENTH SIGN</td><td>R 10:00PM</td></tr><tr><td>TNT</td><td>THE STAND</td><td>PG 11:00PM</td></tr></table>	GRID	SORT	VC4IP4	SCHEDULE	SHOWTIME	THE SEVENTH SIGN	8:00PM	TNT	FRIDAY THE 13TH	PG 8:00PM	SHOWTIME	THE SEVENTH SIGN	R 10:00PM	TNT	THE STAND	PG 11:00PM	<p>AD WINDOW 1</p> <p>DISPLAYING PANEL AD</p> <p>I</p>		<p>AD WINDOW 2</p> <p>DISPLAYING PANEL AD</p> <p>I</p>	
<p>O</p>	<p>OBLOCK</p> <p>GUIDEPLUS+</p> <p>THE SEVENTH SIGN: HORROR 1988 DEMI MORRE, MICHAEL BIEHN,R</p> <p>SHOW[29] 8:00PM(2HR) I</p> <table border="1"><tr><td>GRID</td><td>SORT</td><td>VC4IP4</td><td>SCHEDULE</td></tr></table> <p>MOVIES: HORROR SAT, SEPTEMBER 13</p> <table border="1"><tr><td>SHOWTIME</td><td>THE SEVENTH SIGN</td><td>8:00PM</td></tr><tr><td>TNT</td><td>FRIDAY THE 13TH</td><td>PG 8:00PM</td></tr><tr><td>SHOWTIME</td><td>THE SEVENTH SIGN</td><td>R 10:00PM</td></tr><tr><td>TNT</td><td>THE STAND</td><td>PG 11:00PM</td></tr></table>	GRID	SORT	VC4IP4	SCHEDULE	SHOWTIME	THE SEVENTH SIGN	8:00PM	TNT	FRIDAY THE 13TH	PG 8:00PM	SHOWTIME	THE SEVENTH SIGN	R 10:00PM	TNT	THE STAND	PG 11:00PM						
GRID	SORT	VC4IP4	SCHEDULE																				
SHOWTIME	THE SEVENTH SIGN	8:00PM																					
TNT	FRIDAY THE 13TH	PG 8:00PM																					
SHOWTIME	THE SEVENTH SIGN	R 10:00PM																					
TNT	THE STAND	PG 11:00PM																					
<p>AD WINDOW 1</p> <p>DISPLAYING PANEL AD</p> <p>I</p>																							
<p>AD WINDOW 2</p> <p>DISPLAYING PANEL AD</p> <p>I</p>																							

56/69

FIG. 56

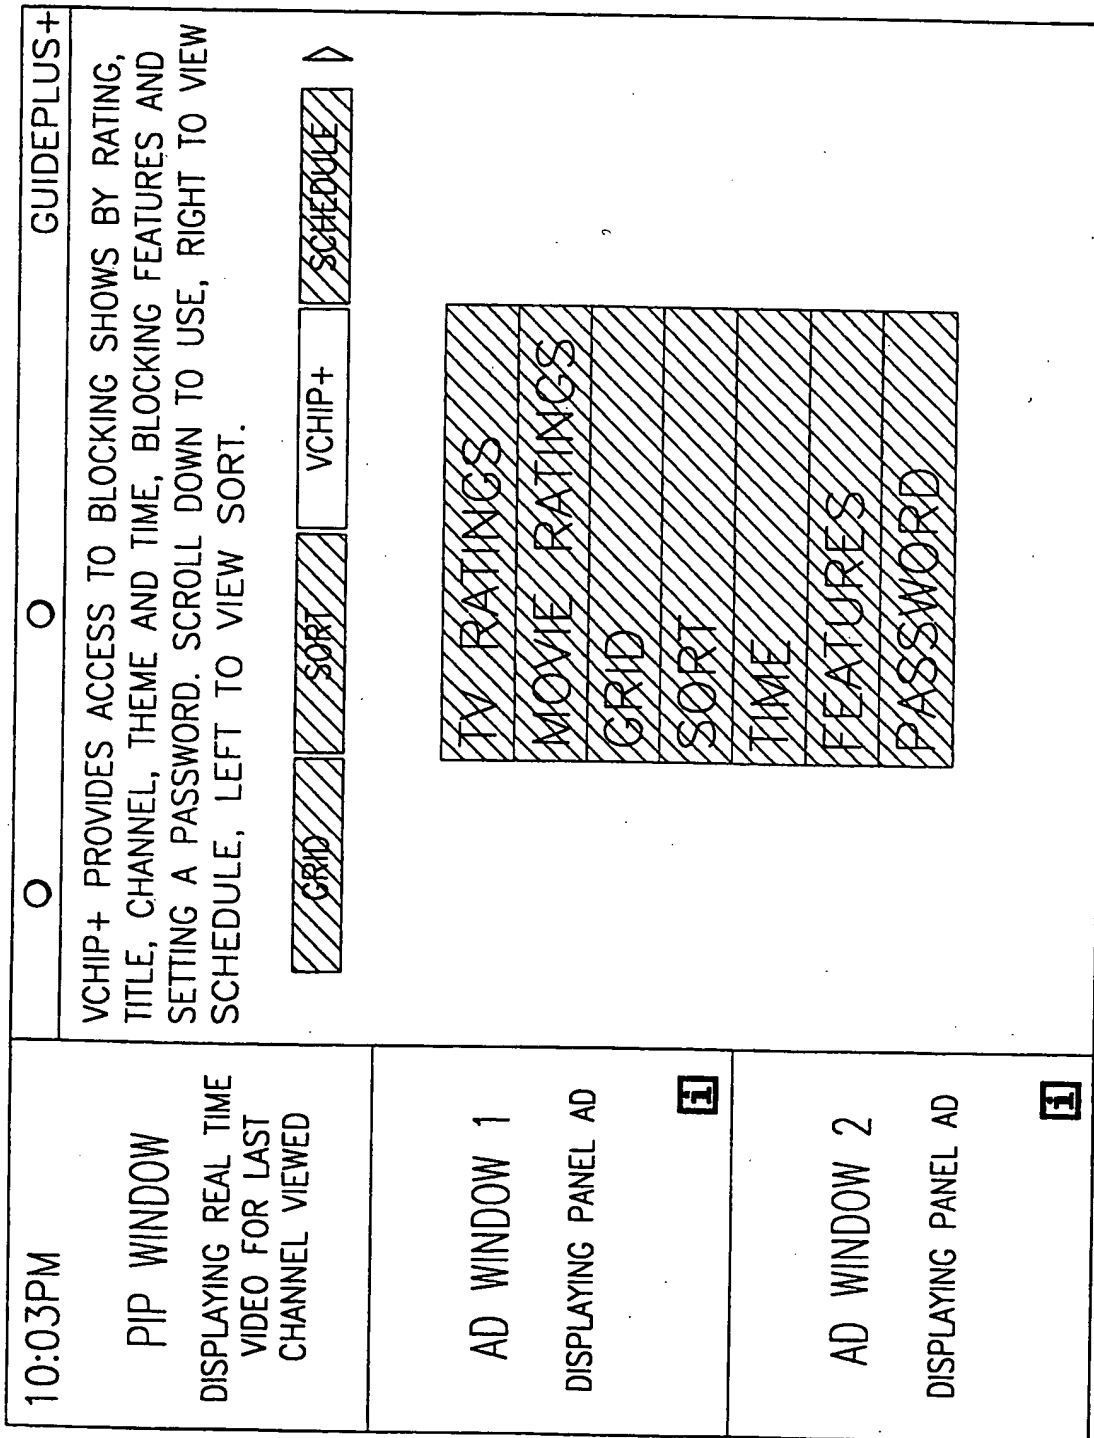


FIG. 57

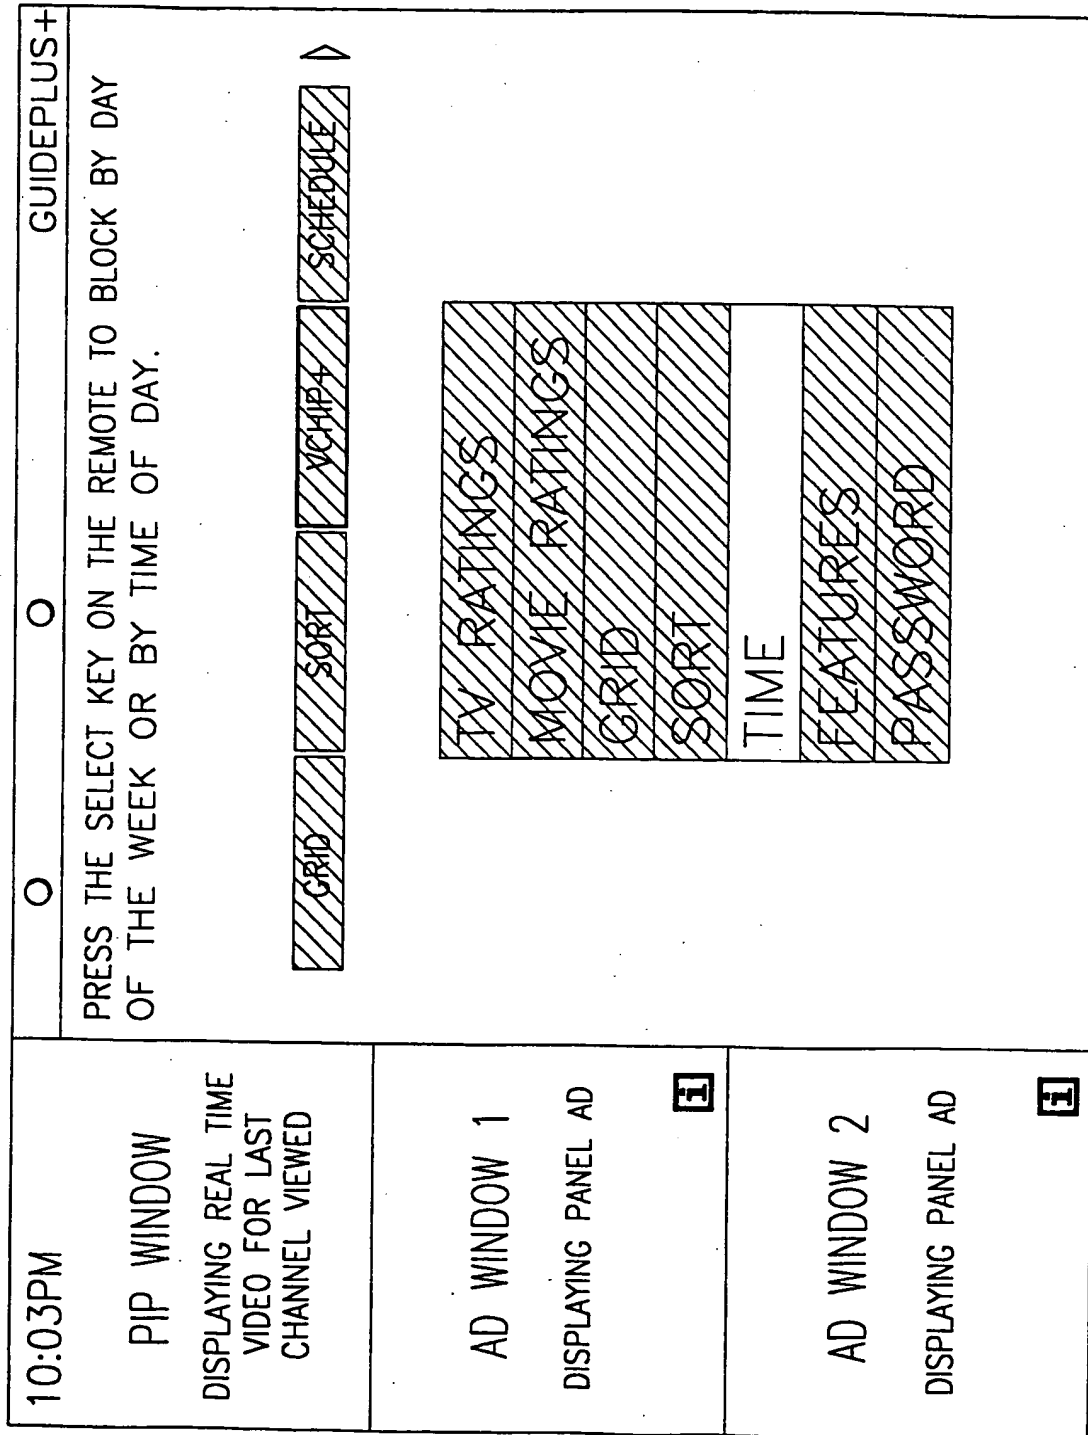


FIG. 58


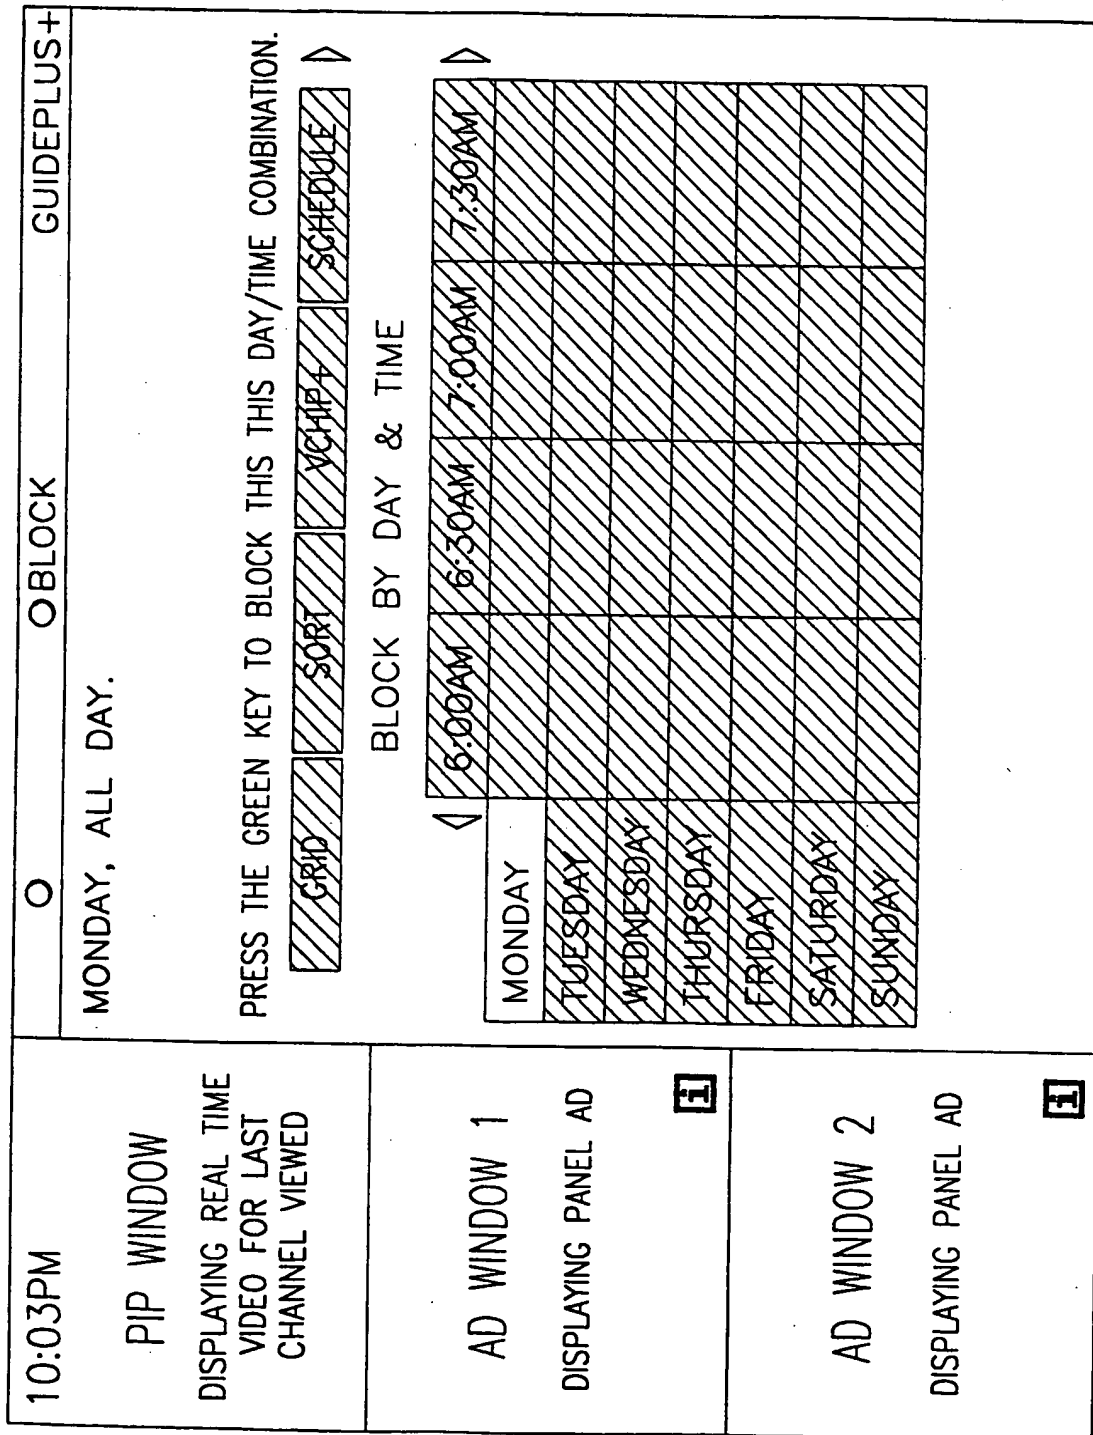


FIG. 59

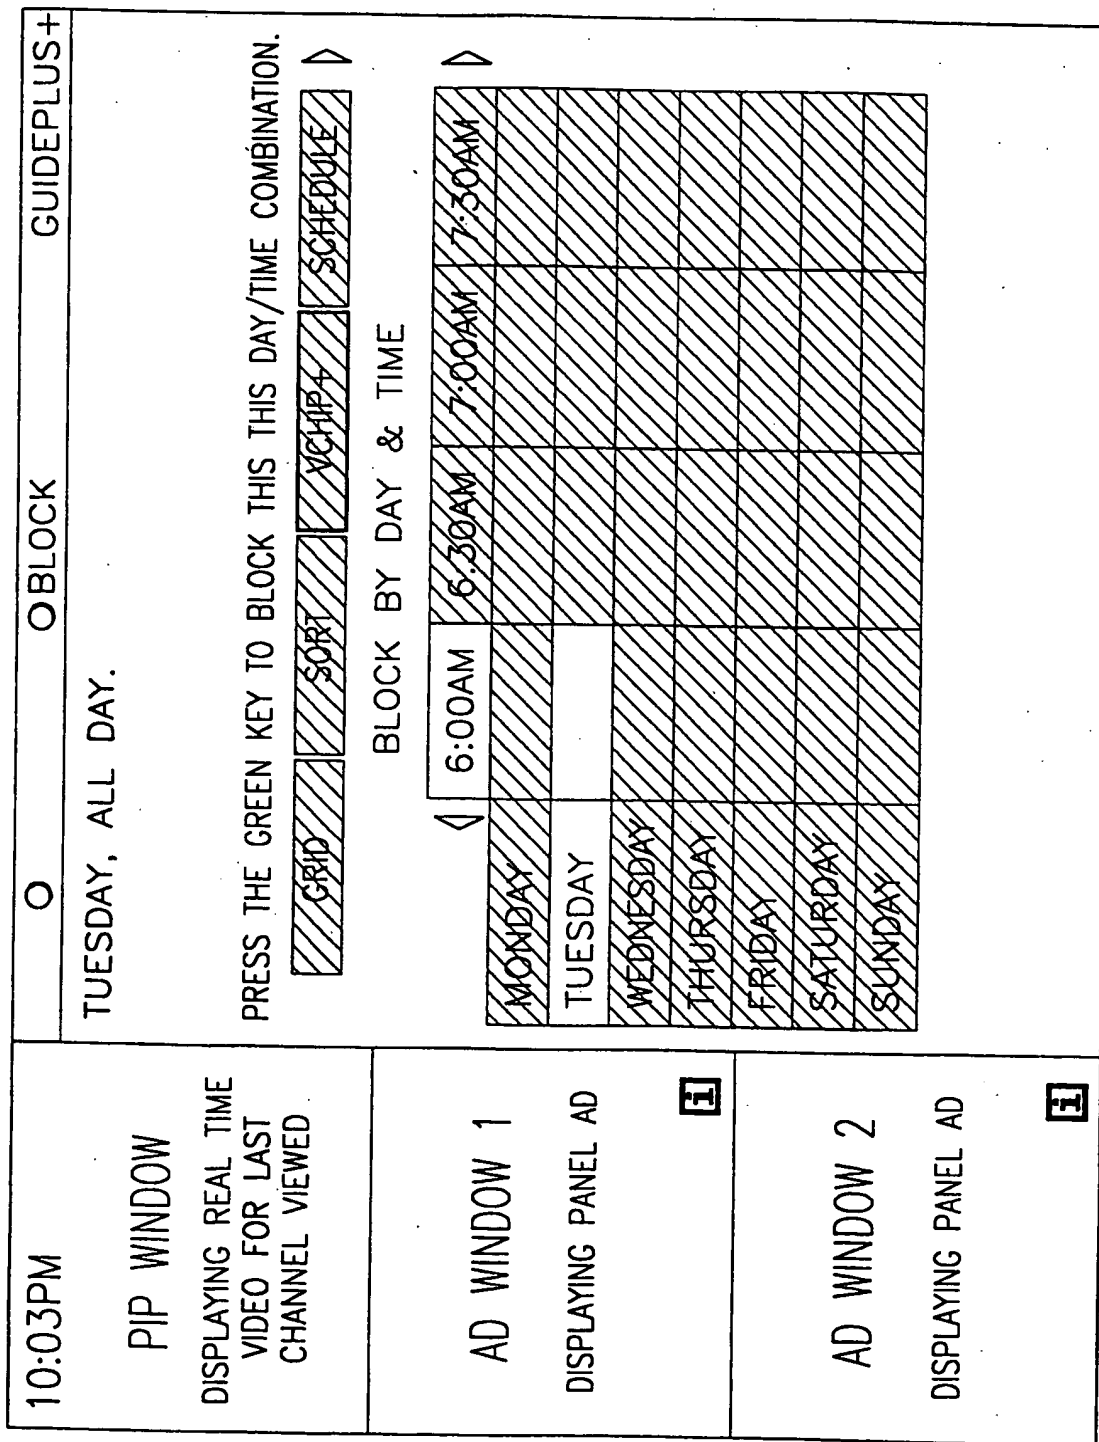

60/69

FIG. 60

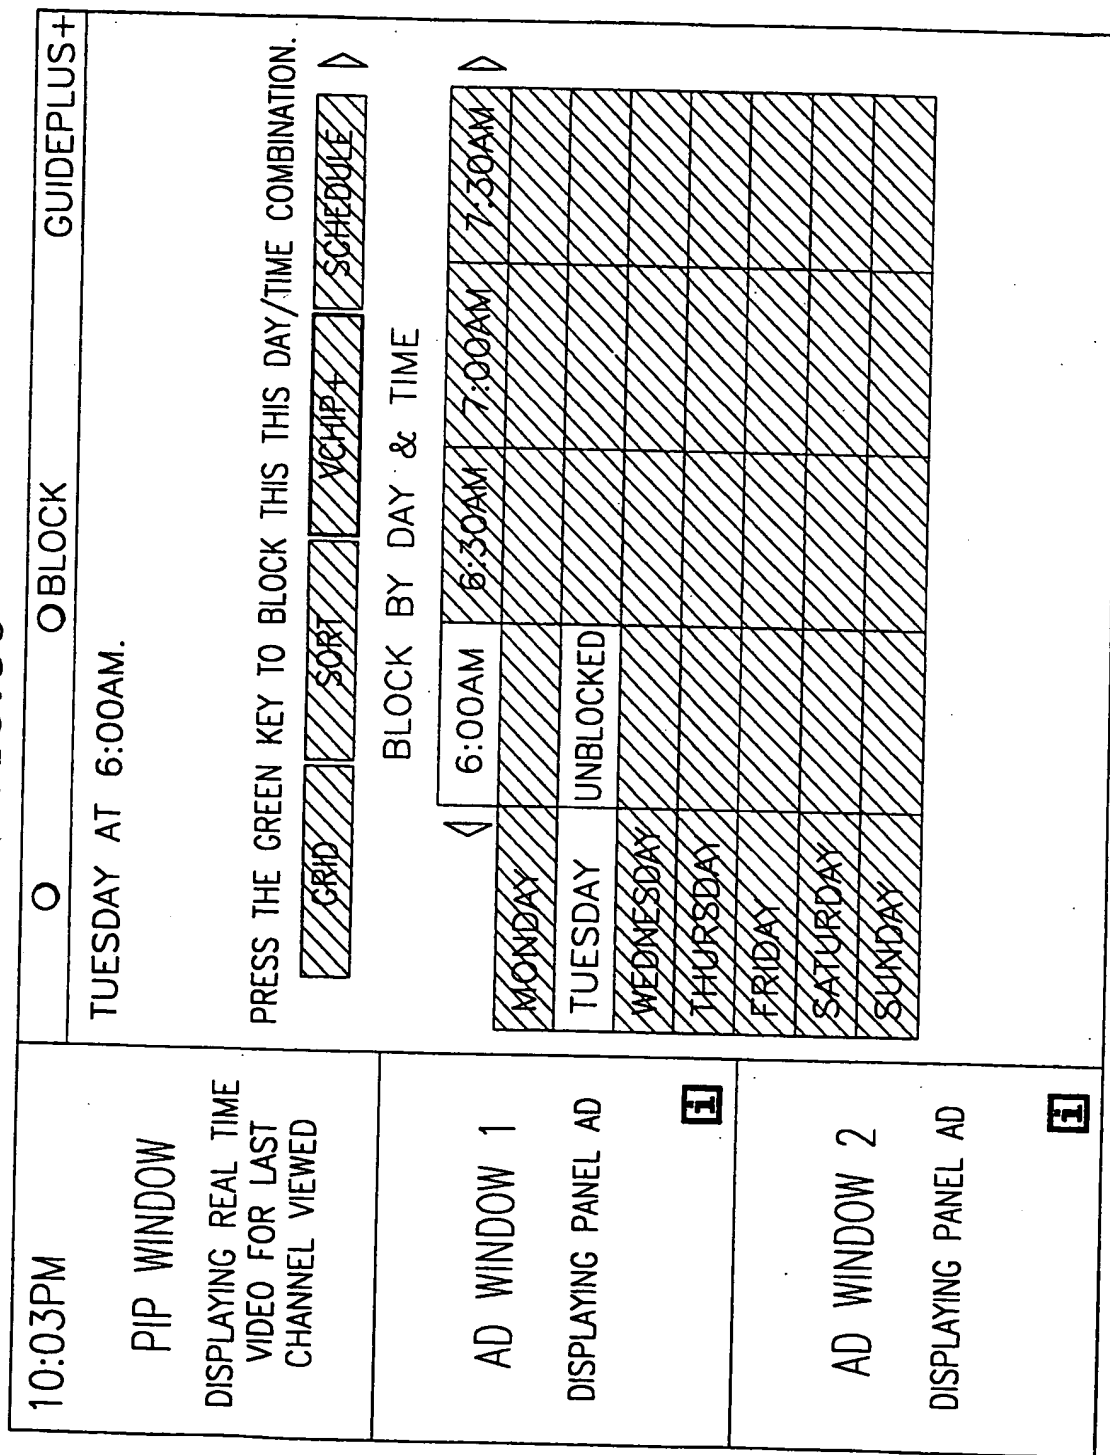


FIG. 61

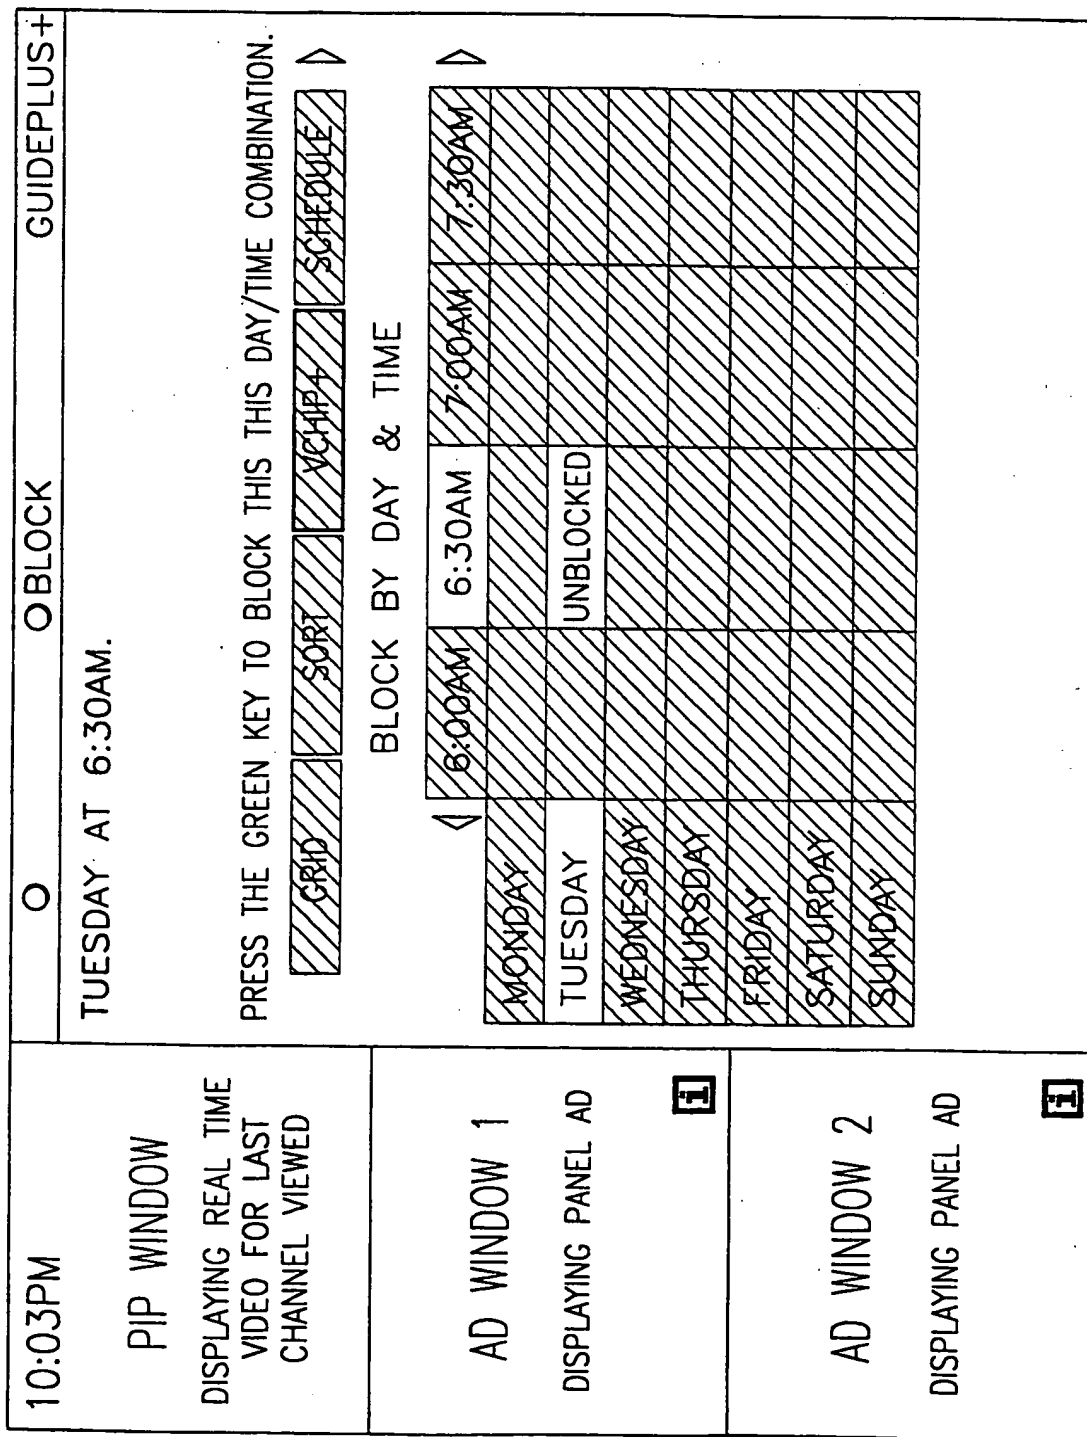


FIG. 62

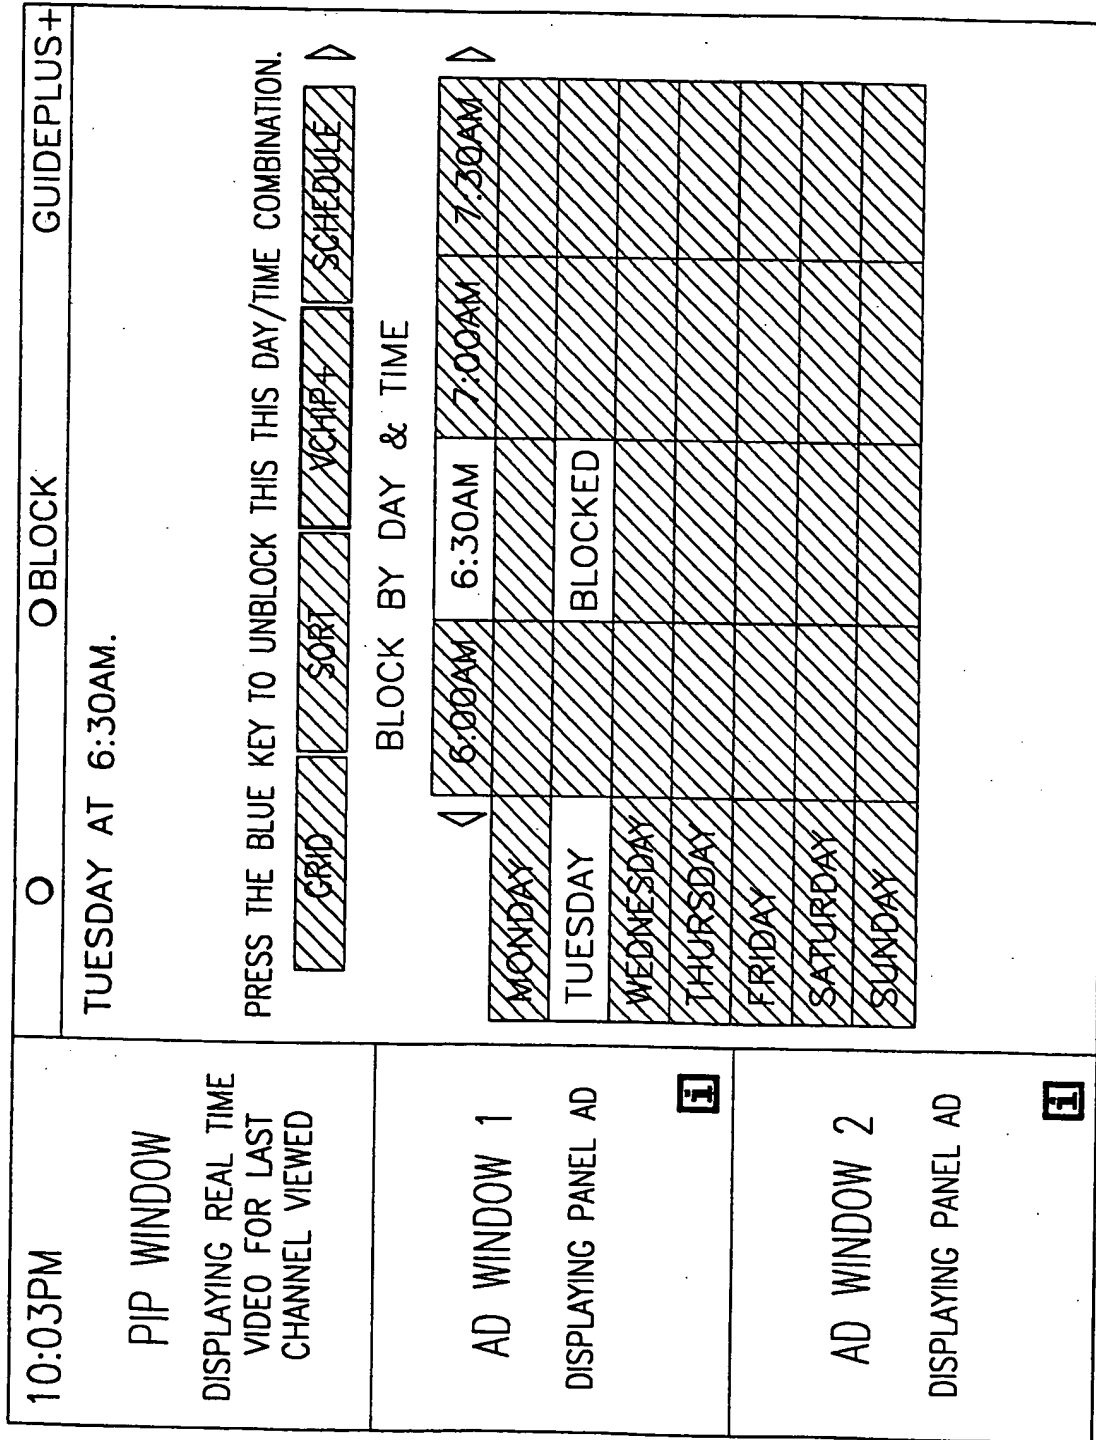


FIG. 63

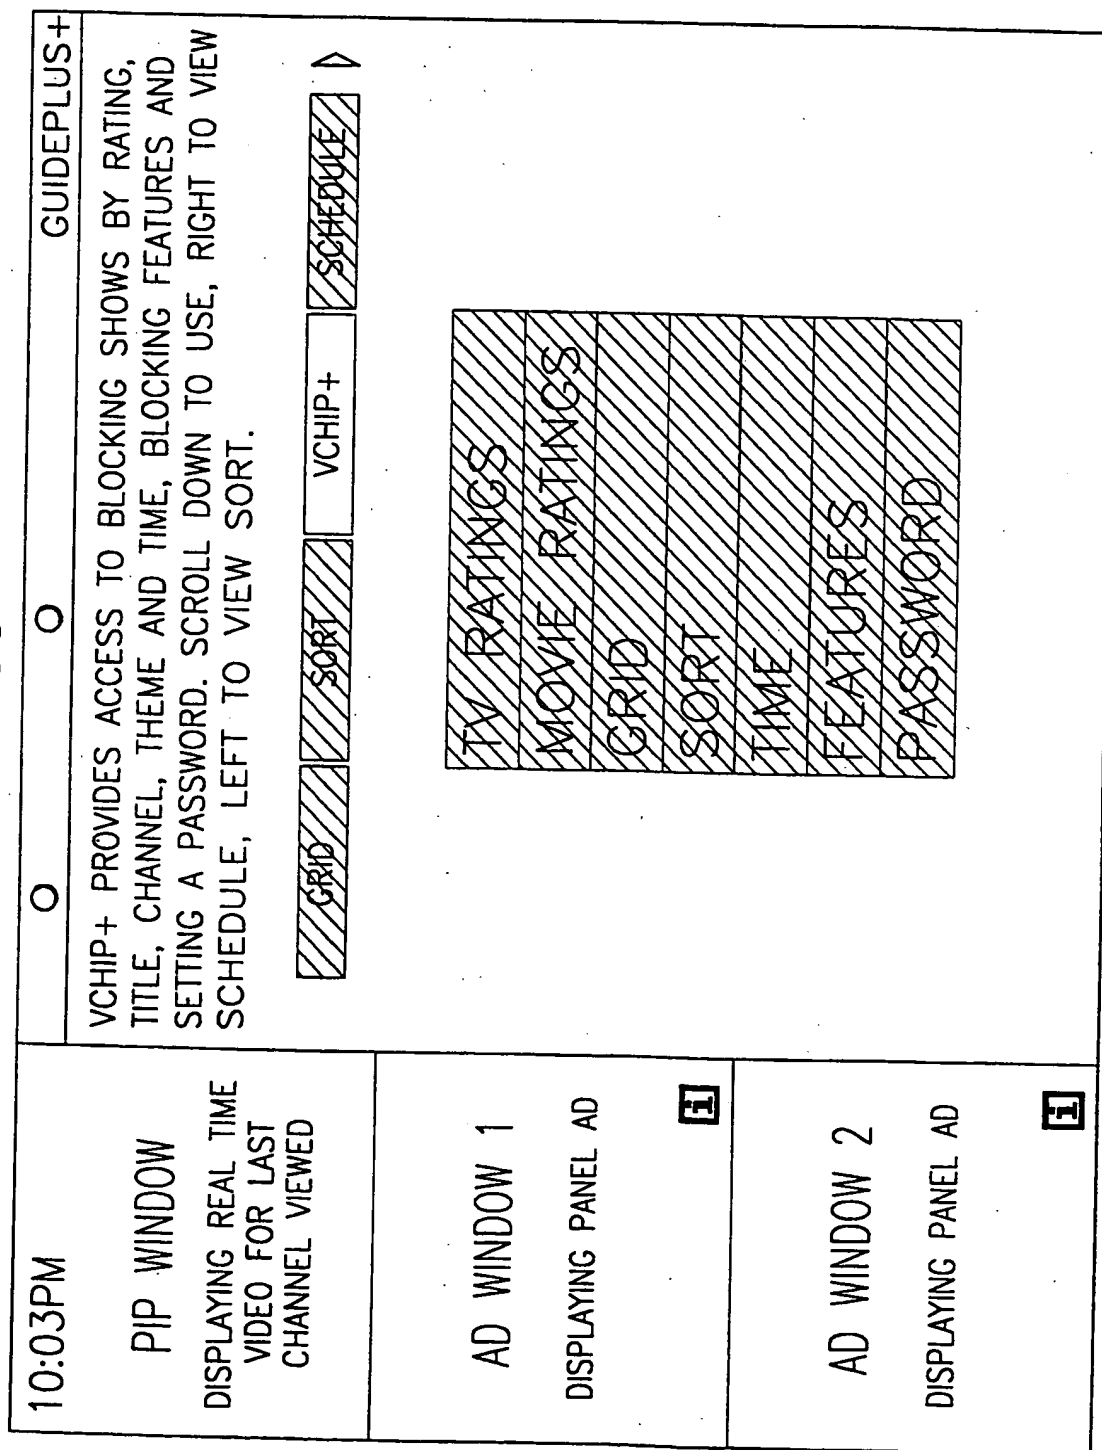
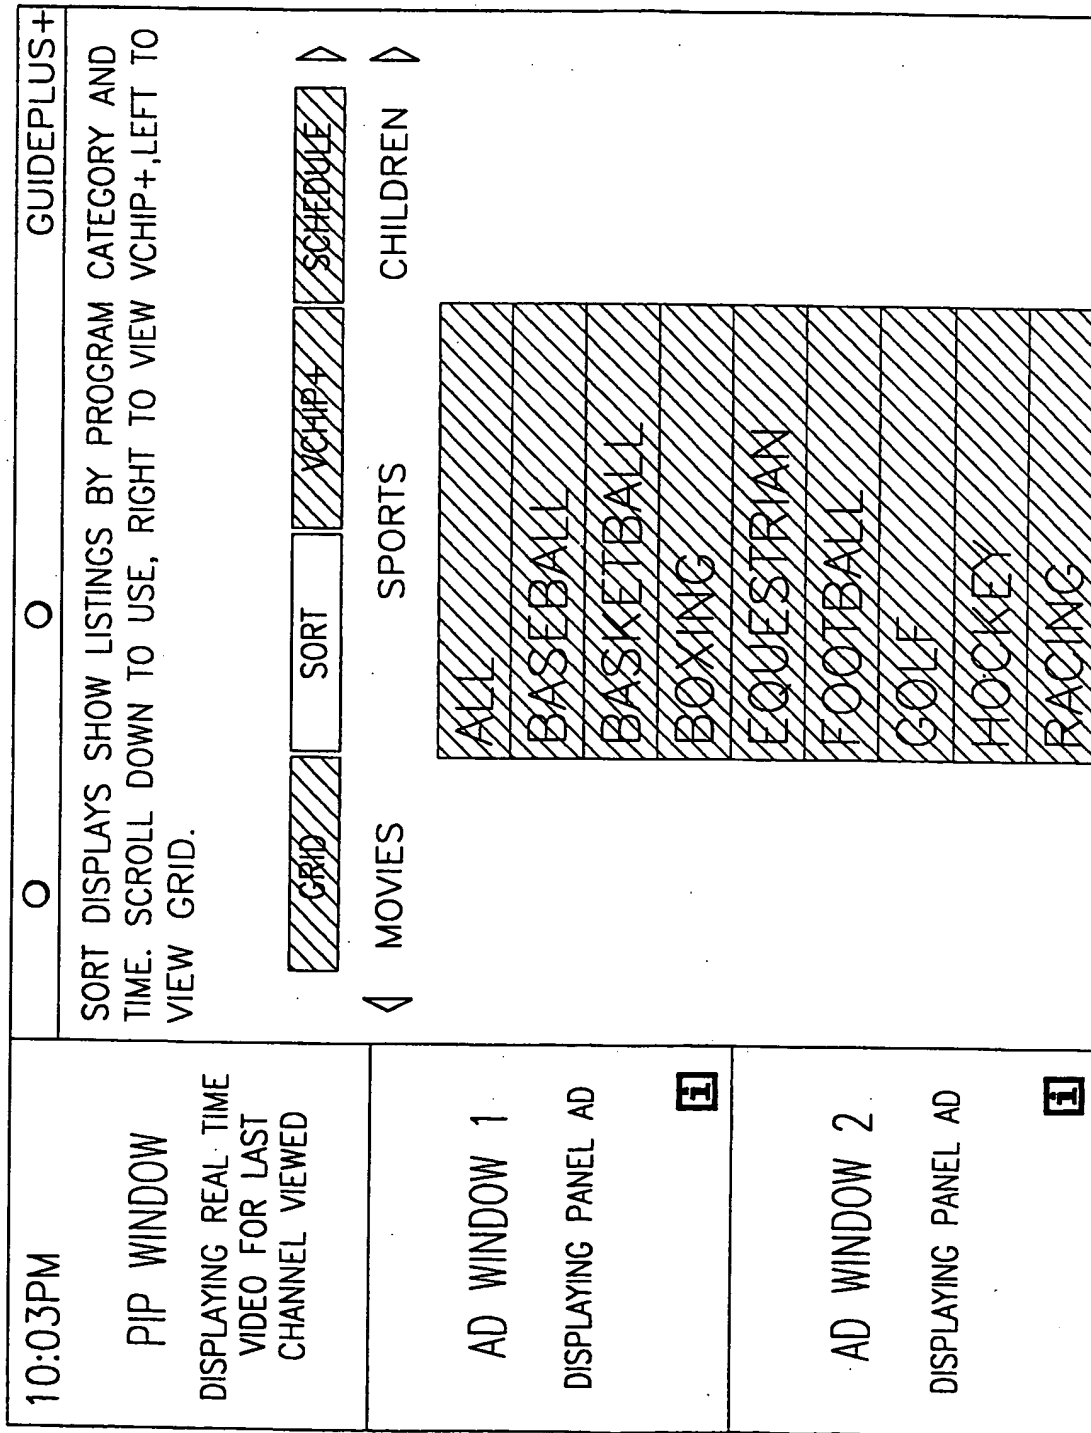











FIG. 64



65/69

FIG. 65

<p>10:03PM</p> <p>PIP WINDOW</p> <p>DISPLAYING REAL TIME VIDEO FOR LAST CHANNEL VIEWED</p>	<p>OWATCH ORECORD GUIDEPLUS+</p> <p>GRID DISPLAYS SHOW LISTINGS BY CHANNEL AND TIME SCROLL DOWN TO USE, RIGHT TO VIEW SORT.</p> <p>CBS[4] 10:00PM(1HR) CC  </p> <p>  GRID  SORT  VCHIP+  SCHEDULE  </p>																		
<p>AD WINDOW 1</p> <p>DISPLAYING PANEL AD</p> <p></p>	<p>SAT 10:00PM 10:30PM</p> <table border="1"> <tr> <td>LAST CHANNEL</td> <td>WALKER, TEXAS RANGER</td> </tr> <tr> <td>ABC</td> <td>PRIMETIME LIVE</td> </tr> <tr> <td>FOX</td> <td>1 COLUMBO THE SIMPSON'S</td> </tr> <tr> <td>CBS</td> <td>WALKER, TEXAS RANGER</td> </tr> <tr> <td>UPN</td> <td>1 WALKING TALL NEWS</td> </tr> <tr> <td>PBS</td> <td>1 ON GOLDEN P... JUST UP ROAD. 1</td> </tr> <tr> <td>CBC</td> <td>1 MOLSON HOCK... COMICS!</td> </tr> <tr> <td>AMC</td> <td>1 YOUNG PHILADELPHIANS 1</td> </tr> <tr> <td>ESPN</td> <td>1 COLLEGE FOOTBALL 1</td> </tr> </table>	LAST CHANNEL	WALKER, TEXAS RANGER	ABC	PRIMETIME LIVE	FOX	1 COLUMBO THE SIMPSON'S	CBS	WALKER, TEXAS RANGER	UPN	1 WALKING TALL NEWS	PBS	1 ON GOLDEN P... JUST UP ROAD. 1	CBC	1 MOLSON HOCK... COMICS!	AMC	1 YOUNG PHILADELPHIANS 1	ESPN	1 COLLEGE FOOTBALL 1
LAST CHANNEL	WALKER, TEXAS RANGER																		
ABC	PRIMETIME LIVE																		
FOX	1 COLUMBO THE SIMPSON'S																		
CBS	WALKER, TEXAS RANGER																		
UPN	1 WALKING TALL NEWS																		
PBS	1 ON GOLDEN P... JUST UP ROAD. 1																		
CBC	1 MOLSON HOCK... COMICS!																		
AMC	1 YOUNG PHILADELPHIANS 1																		
ESPN	1 COLLEGE FOOTBALL 1																		
<p>AD WINDOW 2</p> <p>DISPLAYING PANEL AD</p> <p></p>																			

66/69

Show Blocked by VChip Plus+

Please enter a password, then press the
<OK> key.

OR

Press the Guide key to enter GUIDE Plus+.

Press the Ch+ or Ch- key to go to the next
channel

Press <OK> to try again.

FIG. 66

Do you wish to establish a
VChip Plus+ Master Password?
This will enable you to block shows by
rating, time, channel and program title.

Yes
No

67/69

You may set up a VChip Plus+
Master Password at any time
by entering GUIDE Plus+ and
selecting the VChip Plus+
password screen.

FIG. 68

Password Creation
Please create a password by inputting
a 3 to 7 digit number using the
number keys on the remote.
Choose something that you will not forget.

— — — — —
Input only zeros if you wish create a
password later
Press <OK> when finished.

68/69

Password Confirmation
Please repeat your password using the
number keys on the remote.

Input only zeros if you wish create a
password later.
Press <OK> when finished.

FIG. 70

Password Accepted
Please be sure you do not forget your
password.

Press <OK> to exit.

FIG. 71

69/69

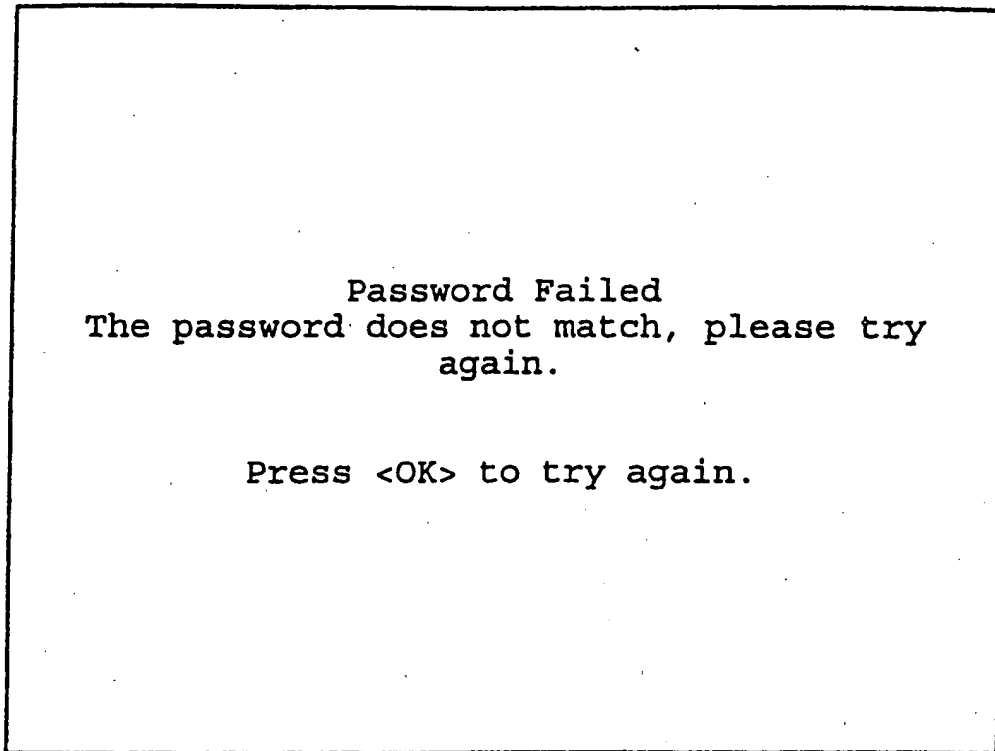


FIG. 72

INTERNATIONAL SEARCH REPORT

International application No.
PCT/US99/04133

A. CLASSIFICATION OF SUBJECT MATTER

IPC(6) :H04N 7/10

US CL :345/327; 348/5.5, 10, 906; 455/6.2

According to International Patent Classification (IPC) or to both national classification and IPC

B. FIELDS SEARCHED

Minimum documentation searched (classification system followed by classification symbols)

U.S. : 345/327; 348/5.5, 10, 13, 906; 455/4.2, 6.2, 6.3

Documentation searched other than minimum documentation to the extent that such documents are included in the fields searched

Electronic data base consulted during the international search (name of data base and, where practicable, search terms used)

C. DOCUMENTS CONSIDERED TO BE RELEVANT

Category*	Citation of document, with indication, where appropriate, of the relevant passages	Relevant to claim No.
Y	US 5,485,518 A (HUNTER et al) 16 January 1996, see whole document.	1-41
Y	US 5,550,575 A (WEST et al) 27 August 1996, see whole document.	1-41
Y	US 5,583,576 A (PERLMAN et al) 10 December 1996, see whole document.	1-41

☐ Further documents are listed in the continuation of Box C. ☐ See patent family annex.

Special categories of cited documents:	
A document defining the general state of the art which is not considered to be of particular relevance	*T* later document published after the international filing date or priority date and not in conflict with the application but cited to understand the principle or theory underlying the invention
B earlier document published on or after the international filing date	*X* document of particular relevance; the claimed invention cannot be considered novel or cannot be considered to involve an inventive step when the document is taken alone
L document which may throw doubts on priority claim(s) or which is cited to establish the publication date of another citation or other special reason (as specified)	*Y* document of particular relevance; the claimed invention cannot be considered to involve an inventive step when the document is combined with one or more other such documents, such combination being obvious to a person skilled in the art
O document referring to an oral disclosure, use, exhibition or other means	*A* document member of the same patent family
P document published prior to the international filing date but later than the priority date claimed	

Date of the actual completion of the international search

18 MAY 1999

Date of mailing of the international search report

08 JUN 1999

Name and mailing address of the ISA/US
Commissioner of Patents and Trademarks
Box PCT
Washington, D.C. 20231

Authorized officer

JOHN W. MILLER

Joni Hill

1 with no violence, no sexual content, no strong language and no sexual dialogue; "TV-Y7 Older
Children" for television programming with no violence, no sexual content, no strong language and
no sexual dialogue; and "TV-Y All Children" for television programming with no violence, no
5 sexual content, descent language and descent dialogue. The individual rating factors for each of
these V-Chip Plus+ system ratings can be independently controlled in the manner described above.
It will be appreciated by those skilled in the art that other V-Chip Plus+ system ratings could be
used and the individual rating factors could be different from the described embodiment depending
upon the needs of the manufacturer or consumer.

10 The viewer may exit the V-Chip Plus+ Setup Screen and return to the Channel Surf Menu
of FIG. 12 at any time by depressing the CHANNEL SURF key on the viewer input device. From
the Channel Surf Menu, normal viewing of the television picture can be selected by the viewer by
depressing the CHANNEL SURF key on the viewer input device a second time.

15 From the normal picture viewing mode, the VCR/V-Chip Plus+ Main Screen can be
accessed by selecting the V-CHIP PLUS+ key on the viewer input device. This causes the video
processor, under microprocessor control, to overlay the VCR/V-Chip Plus+ Main Screen, via the
video mixer, onto the television picture on the TV display as shown in FIG. 16. The viewer can
program the VCR Plus+ system and the V-Chip Plus+ system from the VCR/V-Chip Plus+ Main
Screen.

20 The format of the VCR/V-Chip Plus+ Main Screen includes an upper portion for viewer
entry of compressed codes, such as PlusCode™ numbers used by Gemstar Development
Corporation's VCRPlus+® systems that presently appear in published television schedules.
Specifically, the viewer highlights the top portion of the VCR/V-Chip Plus+ Main Screen
immediately to the right of the text "PLUSCODE" with a cursor 96 and enters the compressed
25 code that appears with the program listed in the published television schedule by using the
numerical keypad on the viewer input device. Once the compressed code is entered by the viewer,
the cursor 96 is then moved to the desired feature listed below the compressed code entry by
using the arrow keys on the viewer input device. Preferably, the left half of the VCR/V-Chip
Plus+ Main Screen is dedicated to the VCR Plus+ functions, and the right half of the VCR/V-Chip
30 Plus+ Main Screen is dedicated to the V-Chip Plus+ functions. The VCR Plus+ functions include
a RECORD option for programming the VCR to automatically record a television program, and
a VIEW option for automatically turning on the television receiver and tuning the selected
television program when aired. The V-Chip Plus+ functions include a BLOCK option for creating
the blocking override list, and an UNBLOCK option for creating the enable override list.

1 Once the viewer selects the desired option, the ENTER key on the viewer input device
is then depressed causing the CDTL information of the television program corresponding to the
compressed code entered by the viewer to be loaded in RAM by the microprocessor and
5 designated for the viewer selected option. For example, referring to FIG. 17, by depressing the
ENTER key on the viewer input device with the RECORD option highlighted by the cursor 96,
the VCR will automatically record the television program corresponding to the compressed code
"17893." A Confirmation Screen, as shown in FIG. 18, will be presented to the TV display by
the video processor as an overlay on the normal television picture, via the video mixer, when the
10 ENTER key on the viewer input device is depressed. The viewer will then have the option of
recording the selected television program once, daily or weekly by highlighting the appropriate
selection with a cursor 98 and depressing the ENTER key on the viewer input device. Once the
frequency of recordation is selected from the Confirmation Screen, the user can return to the
VCR/V-Chip Plus+ Main Screen by selecting V-CHIP PLUS+ key on the viewer input device.

15 The CDTL information entered from the VCR/V-Chip Plus+ Main Screen is formatted
in RAM for display on the VCR/V-Chip Plus+ Review List when accessed as a sub-menu from
the Channel Surf Menu (FIG. 10). In addition, the VCR/V-Chip Plus+ Review List can be
accessed directly from the VCR/V-Chip Plus+ Main Screen by highlighting the "Review List"
option with the cursor 96 and depressing the ENTER key on the viewer input device. The
20 VCR/V-Chip Plus+ Review List, which is presented to the TV display by the video processor as
an overlay on the normal television picture, via the video mixer, is edited in the same manner as
described with reference to FIG. 11. When the VCR/V-Chip Plus+ Review List is entered from
the VCR/V-Chip Plus+ Main Screen, the viewer must depress the V-CHIP PLUS+ key on the
viewer input device to exit and return to the VCR/V-Chip Plus+ Main Screen. The V-CHIP
25 PLUS+ key on the viewer input device is depressed a second time to exit the VCR/V-Chip Plus+
Main Screen and return to the normal television picture viewing mode.

30 From the normal television picture viewing mode, the TV Menu (not shown) may be
accessed by the viewer by depressing the MENU key on the viewer input device. The TV menu
allows the viewer to perform certain functions such as activating channels, activating closed
caption television and adjusting picture clarity (i.e., contrast, brightness, color). In addition, the
VCR/V-Chip Setup Screen, as shown in FIG. 19, may be accessed from the TV Menu.

35 The VCR/V-Chip Plus+ Setup Screen permits the viewer to define certain parameters
which allow automated channel mapping according to the television signal source and the
geographic location of the viewer. In the preferred embodiments without television signal source
detection (i.e., monitoring the channel allocations of the television stations) the video source, the

1 VCR brand and the cable box brand used by the viewer are entered directly into the VCR/V-Chip
Plus+ Setup Screen with the viewer input device. From the VCR/V-Chip Plus+ Setup Screen
shown in FIG. 18, the viewer, residing in the United States at zip code 91106, utilizes a Pioneer
5 cable box with a Phillips VCR. From the zip code information, the appropriate channel map can
be downloaded by the microprocessor from the VBI of the television signal to RAM as described
in co-pending U.S. application 08/694,864, which is hereby incorporated by reference as if set
forth in full herein. From the other information the proper IR codes for operating the VCR and
cable box are selected.

10 The information on the VCR/V-Chip Plus+ Setup Screen can be edited by the viewer by
moving a cursor 100 vertically between the on-screen prompts with the up and down arrow keys
on the viewer input device. For example, in the event that the viewer switches from cable box
service to direct cable, a new channel map may be required for VCR/V-Chip Plus + operation.
The new channel map can be downloaded into RAM with minimal viewer effort by accessing the
15 VCR/V-Chip Plus+ Setup Screen, highlighting the text "Cable Box" immediately to the right of
the "Video Source" prompt with the cursor 100, depressing the CHANGE key on the viewer
input device to enable a change in the video source, and then depressing the left and right arrow
keys on the viewer input device to select the appropriate video source. In this case, the viewer
will operate the arrow keys on the viewer input device until the text "Cable Direct" appears on
20 the VCR/V-Chip Plus+ Setup Screen next to the "Video Source" prompt. With this entry, the
"Cable Box" prompt is removed from the VCR/V-Chip Plus+ Setup Screen as shown in FIG. 20.

The VCR/V-Chip Plus+ Setup Screen also includes a "Next" on-screen prompt 102. If
a cable box service is entered into the VCR/V-Chip Plus+ Setup Screen by the viewer, or
automatically detected by the microprocessor, the proper cable box codes must be set to operate
25 the cable box. This is accomplished by positioning the cursor 100 on the "Next" on-screen
prompt 102 with the up and down arrow keys on the viewer input device, and then depressing
ENTER. This sequence causes the microprocessor to retrieve IR codes compatible with the
cable box from memory and store them in RAM. This step is necessary to give the
microprocessor control over the tuner in the cable box for VCR/V-Chip Plus+ system operation.

30 Those skilled in the art will readily recognize that the user interface described above is
merely an exemplary embodiment of the present invention and that numerous other user interfaces
may be utilized within the scope of the present invention. By way of example, an alternative
embodiment of the user interface will be described with reference to a user interface screen map
shown in FIG. 21. In this alternative embodiment, the viewer may enter the either a "V-Chip

1 Plus+ Features" screen 106 or a "Channel Surf" screen 108 from the normal television viewing mode 104.

5 The viewer may exit the VCR/V-Chip Setup Screen and enter the TV Menu at any time by depressing the MENU key on the viewer input device. The normal picture viewing mode can then be accessed from the TV Menu by depressing the MENU key on the viewer input device a second time.

10 The V-Chip Plus+ features screen 108 can be pulled up by selecting the V-CHIP PLUS+ key on the viewer input device. Upon activation of the V-CHIP PLUS+ key, the V-Chip Plus+ features screen is retrieved by the microprocessor from RAM and presented to the TV display by the video processor as an overlay on the television picture via the video mixer. Another exemplary V-Chip Plus+ features screen in accordance with the described embodiment is shown in FIG. 22. Referring to FIG. 22, four sub-menus can be accessed from the V-Chip Plus+. The four sub-menu selections include a BABYSITTER feature 110, a V-CHIP PLUS+ blocking feature 112, a V-CHIP set feature 114, and a RECORD/WATCH feature 116. From the V-Chip Plus+ features screen (see FIG. 22) any sub-menu can be selected by the viewer by positioning a cursor 118 on the desired sub-menu selection with the up and down arrow keys on the viewer input device and then depressing the ENTER key.

20 In the described embodiment illustrated in FIG. 22, the V-CHIP set feature 114' is highlighted by the cursor 118. As described above with reference to other embodiments of the present invention, the V-CHIP set feature allows the viewer to program his or her television system to exclude programs according to a selected rating criteria. From this sub-menu selection, the viewer can either review or edit the rating criteria by depressing the ENTER key on the viewer input device. As a result, the V-Chip set screen is retrieved by the microprocessor from RAM and presented to the TV display by the video processor as an overlay on the television picture via the video mixer. An exemplary V-Chip set screen is shown in FIG. 23. Initially, from the V-Chip set screen, the viewer has the option of deactivating the V-Chip system. This is accomplished by positioning a cursor 122 on the OFF prompt 120 with the arrow keys on the viewer input device and then depressing the ENTER key. In response, a message indicating that the V-Chip feature is disabled will appear on the message screen 124. As a result, the blocking circuit will be controlled by the microprocessor independently of the rating factors contained in the VBI.

30 To activate the V-Chip system, the viewer merely positions the cursor 122 over the ON prompt 126 with the arrow keys on the viewer input device and depresses the ENTER key. Once activated, the rating factors extracted from the VBI of the television signal will be compared with

1 the current rating factors stored in RAM and used to determine whether the blocking circuit, under microprocessor control, will allow television programs to pass to the TV display.

5 Once the V-Chip system is activated, the current rating set by the viewer will be displayed on the message screen 124. In the described embodiment, the V-Chip system can be programmed using movie ratings, such as those promulgated by the Motion Picture Association of America, as well as TV ratings. Preferably, the V-Chip system should be programmed with both TV and movie ratings to accommodate television programming utilizing different rating systems. Viewing and editing of either the TV or movie ratings is accomplished by selecting the appropriate prompt 128, 130 on the V-Chip set screen with the viewer input device.

10 Referring to FIG. 24, the current V-Chip rating for TV programs in RAM is "TV-PG Parental Guidance." In a preferred embodiment, the "TV-PG Parental Guidance" allows viewing of television programs with moderate violence, some sexual situations, some coarse language and suggestive dialogue. Each of these rating factors can be individually activated or deactivated by positioning the cursor 122 on the appropriate prompt, by way of example, "Violence" 132, and depressing the right or left arrow key on the user input device. As a result, the violent content of television programming will not be used to determine whether the current televised show should be blocked.

20 Alternatively, the overall V-Chip system rating programmed in RAM for either TV or movies can be altered by the viewer. This function is performed by positioning the cursor 122 on the message screen 124 with the up and down arrow keys on the viewer input device. Next, the right and left arrow key are used to peruse the different V-Chip system ratings until the desired rating appears on the message screen 124 at which time the viewer can select that rating by depressing the ENTER key on the viewer input device. The particular V-Chip system ratings for movies and TV programs may vary depending upon the needs of the manufacturer or consumer. Exemplary V-Chip system ratings for TV programs are described above with reference to other embodiments of the present invention.

25 The V-Chip Plus+ block list can be accessed from the V-Chip set screen by positioning the cursor 122 on the V-CHIP PLUS+/BLOCK prompt 134 with the up and down arrow keys on the viewer input device and depressing the ENTER key. The ability to directly access the V-Chip Plus+ block list from the V-Chip set screen is shown in FIG. 21 by path 136. Alternatively, the viewer can exit the system and return to normal television viewing 104 by depressing the V-CHIP PLUS+ key on the viewer input device. From the normal television screen 104, the viewer can depress the V-CHIP PLUS+ key on the viewer input device a second time to pull up the V-

35

1 Chip Plus+ features screen 106, and select the V-CHIP PLUS+ blocking feature 112 in the manner described above with reference to FIG. 22.

5 Once the V-CHIP PLUS+ blocking feature is selected by the viewer, the V-Chip Plus+ screen is retrieved by the microprocessor from RAM and presented to the TV display by the video processor as an overlay on the television picture via the video mixer. An exemplary V-Chip Plus+ screen is shown in FIG. 25. From the V-Chip Plus+ screen the viewer can both review and edit the V-Chip Plus+ blocking list. To edit the V-Chip Plus+ blocking list, the viewer positions a cursor 136 on the PlusCode entry line 138, enters the compressed code that appears with the program listed in the published television schedule by using the numeric keypad on the viewer input device, and depresses the ENTER key. As described above with reference to other
10 embodiments of the present invention, the use of PlusCodes to create the V-Chip Plus+ blocking list is a convenient method, although it will be understood by those skilled in the art that other methods could be used such as program title entries or selection from an electronic program guide.

15 Once the ENTER key is depressed, a sub-menu is retrieved by the microprocessor from RAM and presented to the TV display. The sub-menu, shown in FIG. 26, allows the user to block the selected television program once, or alternatively, on a daily or weekly basis. The blocking frequency is set by positioning a cursor 140 over the desired prompt. In FIG. 26, the ONCE prompt 142 is highlighted for illustrative purposes, and once entered into the system with the viewer input device, will produce the message shown in the message display 144. The V-Chip Plus+ blocking screen of FIG. 25 is then re-entered by depressing the V-CHIP PLUS+ key on the viewer input device.

25 To review the television programs that have been selectively blocked, a V-Chip Plus+ blocking list is consulted by depressing the REVIEW key on the viewer input device. As a result, the V-Chip Plus+ selections list is retrieved by the microprocessor from RAM and presented to the TV display by the video processor as an overlay on the television picture via the video mixer. An exemplary V-Chip Plus+ selections list is shown in FIG. 27. Next, the viewer positions a cursor 144 on the BLOCK prompt 146 and depresses the ENTER key on the viewer input device. A list of television programs selected by the viewer for blocking, that would otherwise be passed to the TV display by the V-Chip system, is presented to the screen. Each television program is displayed on the V-Chip Plus+ blocking list by its respective CDTL information. It will be appreciated by those skilled in the art that the titles of the television programs could be alternately displayed, or additionally displayed with the CDTL information, by accessing an EPG data base in memory with the microprocessor.
30 The V-Chip Plus+ selection screen also provides
35

1 limited editing features. For example, any television program may be deleted from the V-Chip
Plus+ blocking list by positioning the cursor 144 over the CDTL information corresponding to
the desired television program and depressing the ENTER key on the viewer input device to
5 delete the highlighted television program. In addition, the length of the blocking function
programmed in the microprocessor for the highlighted television program can be altered by first
depressing the CHANGE key on the viewer input device, and then incrementing or decrementing
the length with the right and left arrow keys, respectively, on the viewer input device.

To exit the V-Chip Plus+ selection screen, the viewer depresses the V-CHIP PLUS+ key
10 on the viewer input device. As shown in FIG. 21, the normal viewing television screen 104 is
entered from the V-Chip Plus+ selection screen 148. From the normal television screen 104, the
viewer can then depress the V-CHIP PLUS+ key on the viewer input device a second time to pull
up the V-Chip Plus+ features screen 106.

The V-Chip Plus+ features screen 106 includes a Record/Watch 116 option. The
15 "Record" option provides a means for programming the VCR to automatically record a television
program, and the "Watch" option allows the television receiver to be turned on automatically and
tuned to a selected television program when aired.

The Record/Watch Option 116 can be accessed from the V-Chip Plus+ features screen
106 by positioning the cursor 118 on the RECORD/WATCH prompt 116' with the arrow keys
20 on the viewer input device and depressing the ENTER key (see FIG. 22). Once the
RECORD/WATCH feature is selected by the viewer, the Record/Watch screen is retrieved by the
microprocessor from RAM and presented to the TV display by the video processor as an overlay
on the television picture via the video mixer. An exemplary Record/Watch screen is shown in
FIG. 28. From the Record/Watch screen, the viewer can review and edit the television programs
he or she wishes to record or view. To edit the Record list, the viewer first positions a cursor 148
25 over the RECORD prompt 150 and depresses the ENTER key on the viewer input device. Next,
the cursor 148 is positioned on the PlusCode entry line 152 and the compressed code from the
published television schedule is entered with the numeric keypad on the viewer input device much
in the same way the V-Chip Plus+ blocking list is created. Once the PlusCode is keyed in, the
30 ENTER key is depressed on the viewer input device. The Watch list can also be edited in the
same manner except that the WATCH prompt 154 is highlighted with the cursor 148 prior to
entering the PlusCode.

Once a new television program is entered for either recording or watching, a sub-menu
similar to the one used to edit the V-Chip Plus+ blocking list is retrieved by the microprocessor
35 from RAM and presented to the TV display. The sub-menu, shown in FIG. 29, allows the user

1 to record or watch, whatever the case may be, the selected television program once, or
alternatively, on a daily or weekly basis. The blocking frequency of the selected television
program is set by positioning a cursor 156 over the desired prompt. In FIG. 29, the ONCE
5 prompt 158 is highlighted for illustrative purposes, and once entered into the system with the
viewer input device, will produce the message for recording the selected television program
shown in the message display 158. FIG. 30 is an example of a sub-menu screen for editing the
watch list. Upon completion of editing the record or watch list, the Record/Watch screen of FIG.
28 is then re-entered by depressing the V-CHIP PLUS+ key on the viewer input device.

10 To review the television programs selected for recordation or watching, the V-Chip Plus+
selection screen (see FIG. 27) is retrieved from the microprocessor and presented to the TV
display by depressing the REVIEW key on the viewer input device. To review the record list, the
viewer positions the cursor 144 on the RECORD prompt 160 and depresses the ENTER key on
the viewer input device. A list of television programs selected by the viewer for recordation is
15 presented to the screen in a CDTL format as shown in FIG. 31. Conversely, the watch list can
be viewed by positioning the cursor 144 on the WATCH prompt 162 (see FIG. 27) and depresses
the ENTER key on the viewer input device. A list of television programs selected by the viewer
for watching is presented to the screen in a CDTL format as shown in FIG. 32. Preferably, the
same limited editing features described with reference to the V-Chip Plus+ blocking list is also
20 available for the record and watch lists.

As described above, to exit the V-Chip Plus+ selection screen, the viewer depresses the
V-CHIP PLUS+ key on the viewer input device. As shown in FIG. 21, the normal viewing
television screen 104 is entered from the V-Chip Plus+ selection screen 148. From the normal
television screen 104, the viewer can then depress the V-CHIP PLUS+ key on the viewer input
25 device a second time to pull up the V-Chip Plus+ features screen 106.

The V-Chip Plus+ features screen also provides a BABYSITTER function to control the
unsupervised television viewing of children. The BABYSITTER operates independently of the
V-Chip Plus+ system and blocks all television programs from the TV display except for those
shows placed on a BABYSITTER list.

30 To enter the BABYSITTER function from the V-Chip Plus+ features screen (see FIG.
22), the viewer positions the cursor 118 on the BABYSITTER prompt 110' with the arrow keys
on the viewer input device and then depresses the ENTER key. As a result, the Babysitter screen
is retrieved by the microprocessor from RAM and presented to the TV display by the video
processor as an overlay on the television picture via the video mixer. An exemplary Babysitter
35 screen is shown in FIG. 33.

1 To activate the BABYSITTING feature, the viewer positions a cursor 160 on the ON
prompt 162 with the arrow keys on the viewer input device and then depresses the ENTER key.
In response, the television picture background to the overlaid Babysitter screen will be blacked
5 out, unless a television program contained in the Babysitter list is currently being televised.
Conversely, to deactivate the Babysitting feature, the cursor 160 is positioned over the OFF
prompt 164 and the ENTER key is then depressed, causing the television picture to reappear in
the background portion of the babysitting screen overlay.

10 From the Babysitter screen the viewer can edit and review the Babysitting list. To edit the
Babysitting list, the viewer positions the cursor 160 on the PlusCode entry line 166 and enters the
compressed code that appears with the program listed in the published television schedule by
using the numeric keypad on the viewer input device. Then the viewer selects the frequency in
which the television show is allowed to be watched (i.e., once, daily, or weekly) by positioning
the cursor 160 over the appropriate prompt, and depresses the ENTER key. As described above
15 with reference to other embodiments of the present invention, the use of PlusCodes to create the
V-Chip Plus+ blocking list is a convenient method, although it will be understood by those skilled
in the art that other methods could be used such as program title entries or selection from an
electronic program guide.

20 To review the television programs that have been selected for viewing by the babysitter,
a Babysitter Program Review list is consulted by depressing the REVIEW key on the viewer input
device. As a result, the Babysitter Program Review list is retrieved by the microprocessor from
RAM and presented to the TV display by the video processor as an overlay on the television
picture via the video mixer. An exemplary Babysitter Program Review list is shown in FIG. 34.
The Babysitter Program Review list comprises a list of television programs that have been
25 selected for viewing by the Babysitter. Any television program not contained on the Babysitter
Program Review list will be blocked by the microprocessor from the TV display when the
Babysitting feature is activated regardless of the V-Chip Plus+ rating factors programmed into
RAM. Similar to the other television lists described above, the Babysitting Program Review list
displays the selected television programs by their respective CDTL information. It will be
30 appreciated by those skilled in the art that the titles of the television programs could be alternately
displayed, or additionally displayed with the CDTL information, by accessing an EPG data base
in memory with the microprocessor.

35 The Babysitting Program Review screen also provides limited editing features. For
example, any television program may be deleted from the Babysitter Program Review list by
positioning a cursor 168 over the desired CDTL information corresponding to the desired

1 television program and depressing the ENTER key on the viewer input device to delete the
highlighted television program. Alternatively, the length of the viewing time for the highlighted
television program can be altered by first depressing the CHANGE key on the viewer input
5 device, and then incrementing or decrementing the length with the right and left arrow keys,
respectively, on the viewer input device. Preferably, the Babysitting feature can be activated or
deactivated from this screen by positioning the cursor 168 over the appropriate prompt and
depressing the ENTER key on the viewer input device. The Babysitting feature can be also
activated or deactivated from VChip Plus+ menu by selecting an entry for the Babysitting feature
10 (not shown).

To exit the Babysitter Program Review screen, the viewer either depressed the
BABYSITTER key on the viewer input device to return to the Babysitter screen of FIG. 33, or
depresses the V-CHIP PLUS+ key on the viewer input device to return to the normal viewing
television screen.

15 In addition to accessing the V-Chip Plus+ features screen from the normal television
viewing mode 104, a channel surf option provides direct access to certain features. By way of
example, the viewer can access directly from the channel surf screen 108 the V-Chip Plus+
Program Review list 148 and the Babysitter Program Review list 170. The channel surf screen
is retrieved by the microprocessor from RAM and presented to the TV display by the video
20 processor as an overlay on the television picture via the video mixer by depressing the CHANNEL
SURF key on the viewer input device. An exemplary channel surf screen is shown in FIG. 35.
In a preferred embodiment, the channel surf screen is also presented to the TV display for a short
period of time every time a new channel is tuned.

Referring to FIG. 35, the tuned channel is presented to the TV display for viewer
25 information. In a preferred embodiment, three on-screen sub-menu prompts are displayed
horizontally below the channel indicator, and may be accessed by moving a cursor 174 with the
right and left arrow keys on the viewer input device. A description of the on-screen sub-menu
prompt selected by the viewer with the cursor 174 is displayed immediately below. In the
embodiment illustrated in FIG. 35, the viewer has selected the Babysitter feature, and the message
30 "Go to Babysitter Screen" appears below the sub-menus. This approach allows the viewer to
directly access the Babysitter function without having to first go through the V-Chip Plus+
features screen. The viewer merely depressed the ENTER key on the viewer input device and the
Babysitter screen shown in FIG. 33 is retrieved by the microprocessor from RAM and presented
to the TV display as an overlay. From this screen, the viewer may either pull up the Babysitter
35

1 Program Review list (see FIG. 34) or return to the normal television viewing mode in the same manner described above with reference to the V-Chip Plus+ features screen.

5 The channel surf screen also provides the capability to block or unblock the channel tuned by the microprocessor. This is achieved by positioning the cursor 174 over the BLOCK CH prompt 176 as shown in FIG. 36. In response, a message "To Block this Channel" appears in the message display 178. The ENTER key on the viewer input device is then depressed to block the entire channel. This approach allows, by way of example, KCOP to be blocked with a single touch of the viewer input device. The channel block command from the viewer input device is stored in RAM by the microprocessor for controlling the blocking circuit. A new message, "To Unblock this Channel," is retrieved by the microprocessor and presented to the TV display in the message screen 178 as shown in FIG. 37. The channel can now be unblocked by simply depressing the ENTER key on the viewer input device a second time.

10 The V-Chip Plus+ Program list can also be accessed directly by the viewer from the channel surf screen by positioning the cursor 174 on the "Review" on-screen sub-menu prompt causing a message, "Review V-Chip Plus+ Selections," on the message display 178 as shown in FIG. 38. The ENTER key on the viewer input device is then depressed to call up the V-Chip Plus+ Program Review list on the TV display. Once the V-Chip Plus+ Program Review list is retrieved, the list can be edited and reviewed in the same manner described above. To exit the V-Chip Plus+ Program Review list and return to the normal television viewing mode, the viewer depresses the V-CHIP PLUS+ key on the viewer input device.

GUIDE MODE

25 Referring to FIG. 43, the several VChip Plus+ screens are accessed from the Menu bar; the user highlights the "VChip Plus+" button on the menu bar, and then scrolls down to select from the menu of VChip Plus+ functions. Throughout the VChip Plus+ screens, an (blue) action button is used to unblock and a different (green) action button is used to block shows, times, channels, etc. As shown in FIGS 51 and 52, when the highlighted tile is currently unblocked, the blue action button label is blank and the green action button is labeled "Block." When the highlighted tile is blocked, the blue action button is labeled "Unblock" and the green action button label is blank, except if the highlighted tile is a show title. If a blocked show title tile is highlighted, the green action button is labeled "Schedule," providing access to the Schedule screen to modify the blocking frequency from the default of once to daily or weekly.

30 Once a show is blocked, an info. box displays a message of:

1 "<Show title> has been Blocked on <day, date>. Press the <key> to enter the Schedule to block
<Show title> Daily or Weekly."

5 Pressing the VCR Plus+ key on the remote displays the VCR Plus+ interface in the Guide's
Schedule screen. The user may input a Plus Code and then select the action they wish to take on
the program: record (the default), watch, or block. These options will appear as tiles in the Plus
Code entry area.

10 Similar to the watch and record features, a blocked show may be set to be blocked once,
daily or weekly. This is accomplished by placing any individual show (this does not apply to all
shows set to be blocked by channel, time or rating) that is set to be blocked into the Schedule
queue. These blocked shows will be mixed in with the shows set to record or watch in
chronological order. By entering the Schedule, either by pressing the green action button while
highlighting a blocked show in the VChip Plus+ or the GUIDE Plus+ screens or from the
Schedule button on the menu bar, the user may modify the frequency of the block in the same way
15 they may do so for shows set to record or watch, by pressing an action button labeled "Change."
This will cycle through the frequency choices. Modifying the frequency can only be done while
the guide is in Master Mode.

20 Scheduled events (shows scheduled to record, watch or blocked) can be stored in a non-
volatile memory such as an EEPROM. Thus, if a power outage occurs, the Scheduled events will
be saved.

25 VChip Plus+ in GUIDE mode uses two data sources in combination to determine whether
a show should be blocked: data downloaded and stored in the guide (channel lineups, show
schedules, show ratings), and rating data transmitted over the VBI. Ordinary V-Chip devices use
the data transmitted over the VBI to determine whether or not to block a show by rating. These
ratings are sent a minimum of every 15 seconds. Thus, a show a parent may wish blocked, may
be seen for up to 15 seconds before the blocking takes effect. VChip Plus+ in GUIDE mode will
use show rating data already stored in the Guide to determine whether a show should be blocked
as soon as it begins, and use the VBI data to confirm if the show was properly blocked. If it was
blocked in error, then the block will be removed. In the event the Guide does not have rating data
30 stored on a given show, the show will be accessible, until the VBI data is obtained and a blocking
decision made.

35 Shows of participating networks, except news and sports programming, will be rated with
either a TV Parental Guideline rating or an MPAA rating (for movies that have not been modified
for TV). Networks using the ratings will also transmit the ratings during network commercials.
Local commercials will most likely not carry the ratings of the contiguous show. VChip Plus+

1 will provide the ability for the user to block unrated programming. The intent is to give parents
control over whether they wish their children to watch the potentially objectionable content of
some news and sports programs. As a side effect, local ads which do not carry ratings will be
5 blocked. In the circumstance where a local ad is surrounded by a rated show and unrated shows
have been blocked, the user may find they are able to watch the show. However, the ad is
blocked within about 15 seconds of appearing. The show will be re-displayed after the rating has
been interpreted by VChip Plus+, potentially up to about 15 seconds after the show
recommenced. Ads linked to shows that have been blocked by the blocking of the individual
10 show, show channel, show theme, show rating, or show time slot will be denied access to (as with
any blocked show) until the Master Password is input. When an ad linked to a show is
highlighted, the blocking message will appear in the PIP.

Additionally, turning a channel off in the Editor does not result in blocking all access to
that channel. Specifically, if an ad with a show linked to a channel turned off in the Editor is
15 displayed, the user can still schedule that show for recording or watching, or tune to its related
channel by pressing the OK button. Additionally, the PIP will tune to the channel related to the
ad when the ad is highlighted, even though that channel has been turned off.

The EPG requests that the user provide certain profile information, including but not
limited to: the user's zip code; television, cable, and satellite services to which the user subscribes;
20 the length of said subscriptions; the type of television; the age of the television; where the
television was purchased; the user's top favorite channels; the user's favorite types of programs;
and the times during which the user is most likely to watch television. If the user declines to
provide this information, the EPG will attempt to "learn" the information as described in a co-
pending Patent Application Serial No. 09/120,488 ("SYSTEMS AND METHODS FOR
25 DISPLAYING AND RECORDING CONTROL INTERFACE WITH TELEVISION
PROGRAMS, VIDEO, ADVERTISING INFORMATION AND PROGRAM SCHEDULING
INFORMATION"), filed July 21, 1998, the disclosures of which is incorporated herein by
reference, as if fully stated here, for all purposes.

When the TV is powered on, the display will depend upon whether Auto-Guide-On is
30 activated, the entry show has been blocked, or the TV remote or front panel was used to turn on
the TV. If Auto-Guide-On is activated, the Guide will always appear when the TV is turned on
using the remote. If a Master Password has been set, the user will have access to shows, features
and screens provided by the User Profile. If the entry show has not been blocked, the show video
will appear in the PIP. All shows, channels, times, etc. that are blocked will be so marked within
35 the Guide. The user will have access to all unrestricted shows and features and screens of the

1 Guide without the need to enter a password. Upon attempting to access a restricted show (by
pressing the OK or Guide key), feature (recording via action buttons, any enabled buttons on the
remote - likely the record button - and via the VCRPlus+ key) or screen (scrolling into or pressing
5 OK from menu bar), a password dialog box will appear in the info. box (see FIG. 66). If the user
correctly inputs the Master Password, they obtain access to all shows, areas of the guide and
features. If the user does not input the Master Password, they will maintain access as defined by
the User Profile. If the entry show has been blocked, the PIG will be black and contain the
following message: "Show Blocked by VChip Plus+."

10 If Auto-Guide-On is not activated, the Guide will not appear when the TV is turned on
using the remote. If a Master Password has been set, the user will have access to shows, features
and screens provided by the User Profile. If the entry show has not been blocked, the show video
will appear on screen. If the entry show has been blocked, the TV video will be covered with a
password dialog box (see FIG. 66). Again, if the users correctly inputs the Master Password, they
15 obtain access to all shows, areas of the guide and features. If the users do not input the Master
Password, they will maintain access as defined by the User Profile.

In the event that the TV is turned on from the front panel of the TV, Auto-Guide-on is
not active. VChip Plus+ in-Guide will operate as restricted by the User Profile, until the Master
Password is input via the remote. There is no way to enter the Master Password without the
remote control.

20 A user, intending on circumventing the VChip Plus+ blocking, may attempt to remove
power from the TV with the hope that the blocking settings will be lost. Due to limitations in
available EE ROM, not all settings can be stored in EE ROM. Following is a desired set of setting
to be stored, in order of priority if EE ROM space permitting:

- 25 1. Master Password
2. blocking by ratings
3. blocking by channel
4. blocking by time
5. blocking by individual show in the Schedule (the next several items in the Schedule
30 will be saved. This will be a combination of shows scheduled to record, watch or block.)
6. blocking features (recording, watch).

In the event of a power failure that exceeds the supercap power capabilities, the user will
have the choice of two power outage settings (the default is number 1 below, the Master will
select a setting in the VChip Plus+ Feature screen):

1 1. deny all access to the TV until the Master Password is input. Access to the Guide will be permitted with access denied to Setup, Editor and VChip Plus+ screens.

 2. allow access to everything not saved in EE ROM.

5 In setting, a power failure notice will present itself on screen every time the TV is powered on by the remote or by the front panel until the Master Password is input. This will inform the users of the power outage.

 A VChip Plus+ Menu, with different features selected, is shown in FIGS. 43, 44, 46, 48, 49, 53, 56, 57, and 63. The VChip Plus+ Menu screen provides access to all the VChip Plus+ screens. These screens can only be accessed in Master Password Mode. The user scrolls down
10 off the menu bar to highlight the tile of the desired feature. FIG. 44 shows the selection of TV Ratings. The user presses the OK/Select key to enter the screens related to the highlighted VChip Plus+ feature. Any user attempting to access these screens when not in Master Password mode will be prompted to enter the Master Password. If not in Master Mode, these menu tiles would
15 be dark and inaccessible.

 FIG. 45 shows the VChip Plus+ TV Parental Guidelines Ratings. From this screen the user may block all instances of shows with any given TV Parental Guideline Ratings, block an entire content rating or a combination of TV Parental Guidelines and content ratings. Blocking unrated programs is executed from this screen as well. The screen is divided into 3 areas: 1.
20 Programs for children, 2. Programs for the entire audience, and 3. Unrated programs. The green action key is used to block and the blue action key is used to unblock the ratings. When a rating is blocked, that rating and all higher ratings in the same group are blocked. When a rating is unblocked, only that rating is unblocked.

 VChip Plus+ MPAA Ratings is selected from the feature menu of FIG. 46 by highlighting
25 Movie Ratings feature. FIG. 47 shows the movie Ratings screen responsive to the selection of the Movie Ratings feature in Fig. 46. From this screen the user may block all instances of shows with any given MPAA Ratings. When a rating is blocked, that rating and all higher ratings are blocked. When a rating is unblocked, only that rating is unblocked. In this example, all the movies with rating G are unblocked.

30 After the VChip Plus+ Grid feature is selected as shown in FIG. 49, the screen of FIG. 50 is displayed. The VChip Plus+ Grid is in gray tones except for the PIG, ads, logos and the action bar. This is intended for differentiating it from the Guide's Grid Screen. This screen displays ALL channels, whether or not they are turned off in the Editor. Individual shows or entire channels may be blocked from this screen as shown in FIGS. 51-52. All blocked shows or
35 channels are in dark gray. However, channel ads do not appear in this grid. When blocked show

1 title is highlighted in Master mode, the blue and green action buttons are labeled "Remove" and
"Change" respectively. When not in Master mode, the action button labels are blank.

After the VChip Plus+ Sort feature is selected as shown in FIG. 53, the screens of FIGS.
5 54 and 55 are displayed. From the Sort screen the user may block all shows in a category, e.g.
Movies, Sports or Children's programs. From the first level Sort screen of FIG. 54, the user may
block all shows in a subcategory, e.g. Horror, Mystery, Baseball, Basketball, etc. From the
second level Sort screen of FIG. 55, the user may block any individual show in a subcategory.
VChip Plus+ Time Settings

10 After the VChip Plus+ Time feature is selected as shown in FIG. 57, the screens of FIGS.
58-62 are displayed. From these Time Settings screens, the user may block viewing by times of
the day and/or days of the week. The user may highlight a day or time tile and block that entire
day or that time for all days. Alternatively the user may block certain hours on any individual day.

After the VChip Plus+ Features function is selected, a features screen is displayed. From
15 this Features screen, the user may block access to the record and/or watch functions.
Additionally, the user may select a Power Outage setting from this screen. After the VChip Plus+
Password feature is selected a Password screen is displayed. From this Password screen the user
may set up the Master Password for the first time (if not done during initial setup) or may modify
the current Master Password.

20 When a show, channel, time-slot, etc. is blocked, the title(s) identifying the show, channel,
time slot, etc. are modified to have different background colors as shown in FIG. 65. In this
screen, *The Simpsons*, *Young Philadelphians* and the 10:00 p.m. time slot are indicated as
blocked by the dark gray background.

25 MASTER PASSWORD CONTROL

In one embodiment of the present invention, a 4 digit numeric Master Password scheme
is used to enable the establishment of a User Profile and provide unlimited (unprotected) access
to the Guide screens and shows once a Master Password is established. Only one Master
Password can be established. It is established either during initial setup (see FIG. 67) or later by
30 entering the Password screen from the Guide menu (see FIG. 43) or the TV mode. Once a
Master Password is established, the Master Password must be entered to execute blocking or
unblocking. The Master Password must also be entered to access the Setup, Editor, and VChip
Plus+ screens. Once entered, the TV is in Master Password (unprotected) mode until the TV is
turned off, the user exits VChip Plus+ mode, or a certain time delay, which starts from the time
35 when the user correctly enters the password, has expired.

1 An user interface (UI) allows the users (parents) to pick their own passwords, and to
disable the lockout when the passwords are lost. The functions of this UI include, but not limited
to, the following:

5 (1) Fixed Overriding Password - This is hardwired in the equipment, and can always be
used in case the user-defined password is lost.

(2) Repeating entry X times establishes new password - If the password is lost, the new
password can be made by repeatedly entering the same password X number of times, and at the
end of the process informing the user that the new password has been established.

10 (3) Power interruption after certain length of time allows new password to be entered -
This allows the parent to "pull the plug" of the equipment and regain control after the password
has been lost.

(4) Password review/re-entry through special service mode - By restricting that only the
parents can access the special service mode, the password can be viewed safely in this way.

15 The above approaches of password handling can be further enhanced by recording the last
time that the password was used or changed.

FIG. 39 is a flow chart of the master password operation. Obviously not all operations
would require a password. As shown in block 391, the following operations have password
protection: changing the password, changing the V-Chip ratings, deleting a "blocked" program
or deleting a "blocked" channel, changing the "Babysitter" function, unblocking a program or a
20 channel within the "Babysitter" function, changing the clock (this is because a different clock will
cause VChip Plus+ to block a different program), and changing the channel map (this is because
a different channel map will cause VChip Plus+ to block a different channel).

A Master password user can establish specific viewing (blocking) parameters for the User
25 Profile, establish specific feature use limits (disable Recording or Watch) for the User Profile,
modify the Master password, or enter all Guide screens and view, record or schedule to watch
all shows. But, it is not necessary to input the Master Password to access unrestricted shows,
channels, time slots, features and Guide screens. Whenever access to a blocked show (tuning to
it in TV mode or pressing OK or Guide keys from the Guide) or a restricted screen (scrolling into
or pressing OK from menu bar) or feature (recording via action buttons, any enabled buttons on
30 the remote - likely the record button - and via the VCRPlus+ key) of the guide is attempted, a
dialog box appears on screen requesting the password (see FIG. 66).

If the password is correctly input, access will be granted. If the password is incorrectly
input, an error screen will be displayed. Once the password is correctly input, access to all shows
and areas of the guide will be enabled until the TV is turned off, the user exits VChip Plus+ mode,
35

1 or a certain time delay, which starts from the time when the user correctly enters the password,
has expired. Additionally, once the password is correctly entered, it can be changed by the user
as shown in block 396. However, repeating the entry of a consistently incorrect password for a
5 certain number of times can establish a new password. The new password is established by
repeatedly entering the same incorrect password a certain number of times, and at the end of the
process confirming the newly established password (block 395). The date and time of the last
time that the password was used is recorded and, as shown in block 397, that date and time for
the previous login is then displayed.

10 Once a Master Password is created, restrictions on access to certain Guide screens is
automatically established as modifications to these screens may defeat blocking effectiveness.
Only the Master may establish blocks. Access-blocking may be established on: individual shows;
channels; themes (entire themes such as Movies, Sports, Children's or sub-themes such as
Adventure, Drama, Baseball, Basketball, etc.); TV Parental Guideline or MPAA rating (including
15 un-rated shows); time slot or day; and/or access to the Recording and Watch features.

When a show is blocked either by the blocking of the individual show, show channel, show
theme, show rating, or show time slot, and a user without entering the Master Password tries to
access a blocked element, access to the blocked element will be denied and a dialog box
requesting the Master Password will be displayed (see FIG. 66). Failure to input the Master
20 Password will result in maintaining the block and the function of the Guide will be as follows:

- No viewing of a blocked show in TV mode,
- No viewing of a blocked show in the PIP in TV mode,
- No viewing of the blocked show in the PIG in Guide mode (the PIG will contain a
message indicating the show is blocked),
- 25 • No scheduling of the blocked show to record (via the Guide or VCR Plus+), and
- No scheduling the blocked show to watch (via the Guide or VCR Plus+)

However, the descriptions for blocked shows will be available. Also, blocked shows may
still be scheduled to record or watch once the Master Password is input. Any show scheduled to
record or watch will be recorded or watched even if it is blocked previously or subsequently
30 blocked.

The record and watch features may be blocked also. If a user attempts to schedule a show
to record or watch when the feature is blocked and the guide is not in Master Mode, the action
will be denied and the Master Password dialog box will appear. If the Master Password is not
input, the function of the Guide will be modified as follows:

- 35 • If the Record feature is blocked:

1 - the user may not schedule any show to record via the Guide or VCR Plus+
 - all shows scheduled to record will be marked as blocked in the Schedule so the
user may not remove it or modify its frequency.

5 • If the Watch feature is blocked:

 - the user may not schedule any show to watch via the Guide or VCR Plus+
 - all shows scheduled to watch will be marked as blocked in the Schedule so the
user may not remove it or modify its frequency.

10 However, any show scheduled to record or watch by the Master will still be executed even
if these features are blocked. If these features are not blocked, a user without the Master
Password may enter the Record/Watch Schedule and make changes to any shows in the queue.

15 When a Master Password is set, and a user without the Master Password is using the TV
or the Guide, access to the Setup, Editor, and VChip Plus+ screens will be denied. A VChip
Plus+ Dialog box appears whenever access has been denied to a show, channel, time screen,
feature, etc. via a VChip Plus+ block. This dialog box provides for input of the Master Password
for access as shown in FIG. 66. Additional dialog boxes appear if the input is not the correct
password.

20 The GUIDE Plus+ system supports semi-automatic setup with minimal user intervention.
The basic data required from the user includes, Country, Zip Code/Postal Code, whether the
service is Over-the-Air (OTA) or cable, Cable Box, chosen from on-screen list of brand names,
VCR Brand, chosen from on-screen list of brand names, cable Box output RF channel (if
applicable). However, VChip Plus+ includes additional setup screens directly following the Cable
Box output questions. These screens will appear only the first time the user goes through setup,
thereafter, the user will use the VChip Plus+ password screen to set a Master Password or change
it.

25 FIG. 67 depicts the Master Password Setup. The user is asked if he/she wishes to set up
a Master Password now. If No, then a screen appears communicating that the user may set up
a Master Password later by entering the VChip Plus+ Password screen within GUIDE Plus+ (see
FIG. 68). If Yes, then the user is presented with a password creation screen as indicated by FIG.
30 69. Once a password is input, a confirmation screen is displayed (see FIG. 70). If the user
correctly inputs the password a second time, the acceptance screen is displayed (see FIG. 71).
If the user incorrectly inputs the password a second time, the failure screen shown in FIG. 72 is
displayed. When the user presses the <OK> button, the Master Password Setup Screen of FIG.
67, is displayed. The user may try again now or input NO and try later.

1 It is apparent from the foregoing that the present invention satisfies an immediate need for
a parental control apparatus which can be used with the V-Chip system. This parental control
apparatus may be embodied in other specific forms and used with a variety of communications
5 equipment without departing from the spirit or essential attributes of the present invention. It is
therefore desired that the present embodiment be considered in all respects as illustrative and not
restrictive, reference being made to the appended claims rather than the foregoing description to
indicate the scope of the invention.

1
CLAIMS:

5 1. A method of exercising access control over a television using a parental control user interface having different functions that are available to a user in a master mode of operation, said method comprising the steps of:

inputting a password for entering into the master mode for obtaining access to the functions of the parental control user interface;

10 entering a criterion for blocking a television program from being viewed or recorded and overriding a blocked television program to be viewed or recorded;

selecting a plurality of programs for viewing or recording;

prompting the user not in the master mode to enter the password if the selected plurality of programs meet the blocking criterion and do not meet the overriding criterion; and

15 unblocking the selected plurality of programs that meet the blocking criterion and do not meet the overriding criterion so they can be viewed or recorded, if the user enters the password responsive to the prompt.

2. An apparatus for parental control of a television receiver comprising:

a television display;

20 a tuner for receiving a plurality of television programs and passing one of said television programs;

a memory for storing a blocking override list comprising information relating to at least one television program, and an enable override list comprising information relating to at least one television program;

25 a microprocessor selectively operable in a blocking mode and an unblocking mode, said microprocessor generating a blocking command in said unblocking mode only when the television program passed by the tuner corresponds to said information relating to one of the television program in said blocking override list, and generating a blocking command in said blocking mode only when the television program passed by the tuner does not correspond to said information relating to any one of the television programs in said enable override list; and

30 a blocking circuit for coupling the television program passed by the tuner to said television display, said blocking circuit having a control input which causes the television program passed by the tuner to be blocked from said television display in response to the blocking command.

1 3. The apparatus of claim 2 wherein the television program passed by the tuner
includes rating information, and further comprising a vertical blanking decoder for extracting said
rating information from the television program, said microprocessor being selectively operated
5 in one of said blocking mode and unblocking mode based on said extracted rating information.

 4. The apparatus of claim 3 wherein said memory comprises rating information stored
therein, and said microprocessor is selectively operated in one of said blocking mode and
unblocking mode based on a comparison between the extracted rating information from the
10 television program and the rating information stored in memory.

 5. The apparatus of claim 2 wherein the blocking override list information comprises
channel, date, time and length for each of its respective television programs, and the enable
override list information comprises channel, date, time and length for each of its respective
15 television programs.

 6. A method for exercising parental control over a television receiver, comprising the
steps of:

 creating an enable override list comprising information relating to at least one television
20 program to be watched or recorded in a blocking mode;

 creating a blocking override list comprising information relating to at least one television
program to be blocked in an unblocking mode;

 selecting the blocking mode or the unblocking mode;

 permitting only television programs relating to said information in the enable override list
25 to be watched or recorded when the blocking mode is selected; and

 blocking only television programs relating to said information in the blocking override list
from being watched or recorded when the unblocking mode is selected.

 7. The method of claim 6 wherein the selecting step further comprises the steps of
30 programming the television receiver with rating information, extracting rating information
broadcast with a television program tuned by the television receiver, comparing the programmed
rating information with the broadcast rating information, and selecting the blocking mode or
unblocking mode as a function of said comparison.

1 8. The method of claim 6 wherein the step of creating the enable override list
comprises entering information relating to channel, date, time and length of the television
programs to be watched or recorded in the blocking mode, and the step of creating the blocking
5 override list comprises entering information relating to channel, date, time and length of the
television programs to be blocked in the unblocking.

 9. A method for exercising parental control, comprising the steps of:
receiving a television signal carrying a television program and a rating for the television
program;

10 inputting a rating level;
extracting the television program rating from the received television signal;
comparing the extracted television program rating with the inputted rating level;
displaying the television program carried by the received television signal if the extracted
television program rating is below the inputted rating level;

15 blocking the television program carried by the received television signal if the extracted
television program rating is above the inputted rating level;

 selecting a specific television program which, when carried by the received television
signal, will override the comparing step; and

20 displaying the specific television program, when carried by the received television signal,
if its rating is above the inputted rating level, or blocking the specific television program, when
carried by the received television signal, if its rating is below the inputted rating level.

 10. The method of claim 1 wherein the required password is established by a first-time
user.

25 11. The method of claim 1 wherein the established password can be changed by a user
when in the master mode.

30 12. The method of claim 1 wherein the established password can be changed by
repeatedly entering an incorrect password for a predetermined number of times and confirming
the repeatedly entered password at the end of the entering step.

35 13. The method of claim 1 wherein the master mode of operation remains in effect
until the television is turned off, the user exits the master mode, or a time delay expires.

1 14. The method of claim 1 wherein the parental control functions include a power-outage function to deny access to the television until the password is properly entered, after a power outage.

5 15. The method of claim 1 wherein the criterion is entered in a normal television picture viewing mode using an on-screen menu.

 16. The method of claim 1 wherein the criterion is entered in a guide mode using an on-screen menu activated from a program schedule guide.

10 17. The method of claim 1 wherein the step of entering a criterion comprises:
 selecting a set of television programs to be watched or recorded in a babysitting mode; and
 permitting only the selected set to be watched or recorded in the babysitting mode without
 inputting the password, to the exclusion of all other programs being telecast.

15 18. The method of claim 1 wherein the step of entering a criterion comprises:
 selecting a television program to be watched or recorded;
 activating a first on-screen button to block the selected program if the selected program
 is unblocked; and
20 activating a second on-screen button to unblock the selected program if the selected
 program is blocked.

 19. The method of claim 1 wherein the step of entering a criterion comprises:
 tuning to a television program;
25 activating a first on-screen button to block the television program if the program is
 unblocked; and
 activating a second on-screen button to unblock the television program if the program is
 blocked.

30 20. The method of claim 1 wherein the step of entering a criterion comprises inputting
 a parental control level and the prompting step comprises extracting a parental control rating from
 a television signal carrying the selected program, comparing the rating with the parental control
 level, and blocking the selected program if its rating falls below the parental control level.

1 21. The method of claim 1 wherein the criterion is blocking or overriding a blocked television channel or television program.

5 22. The method of claim 21 wherein the blocked or overridden television channel or program is marked in a parental control review list.

 23. The method of claim 22 wherein the step of entering a criterion comprises editing the parental control review list with respect to channel, date, time and length.

10 24. The method of claim 16 wherein the on-screen menu includes a grid feature for blocking or overriding all television channels whether or not the channels are already blocked or overridden, a sort feature for blocking or overriding all television programs in a category, and a time feature for blocking or overriding by a time of a day or a day of a week.

15 25. The method of claim 1 wherein the established password can be changed by entering a second password that is hardwired in the system.

 26. The method of claim 1, further comprising providing access to a predetermined set of functions specified in a user profile if the user does not enter the password.

20 27. The method of claim 1, further comprising restoring the criterion after the user is no longer in the master mode.

25 28. An apparatus for parental control of a television comprising:
 a microprocessor;
 a display screen;
 a parental control user interface displayed on the screen having different functions, for activating the microprocessor;
 means for inputting a password for entering into a master mode of operation to obtain
30 access to the functions of the parental control user interface;
 means for entering a criterion for blocking a television program from being viewed or recorded and overriding a blocked television program;
 means for selecting a plurality of programs for viewing or recording;
 means for prompting a user not in the master mode to enter the password if the selected
35 plurality of programs meet the blocking criterion and do not meet the overriding criterion;

1 means for unblocking the selected plurality of programs that meet the blocking criterion and do not meet the overriding criterion so they can be viewed, if the user enters the password responsive to the prompt; and

5 means for restoring the criterion after the user is no longer in the master mode.

29. The apparatus of claim 28 wherein the master mode of operation remains in effect until the television is turned off, the user exits the master mode, or a time delay expires.

10 30. A method of exercising access control over a television using a parental control user interface having different functions that are available to a user in a master mode of operation, said method comprising the steps of:

inputting a password for entering into the master mode for obtaining access to the functions of the parental control user interface;

15 entering a first criterion for blocking television programs from being viewed or recorded, or overriding blocked television programs to be viewed or recorded;

entering a second criterion for blocking television programs from being viewed or recorded, or overriding blocked television programs to be viewed or recorded;

selecting a program for viewing or recording;

20 prompting the user not in the master mode to enter the password if the selected program meets the blocking criteria and does not meet the overriding criteria; and

unblocking the selected program that meets the blocking criterion and does not meet the overriding criteria so it can be viewed, if the user enters the password responsive to the prompt.

25 31. The method of claim 30, further comprising entering a third criterion for blocking television programs from being viewed or recorded.

32. A method of exercising access control over a television using a parental control user interface having different functions that are available to a user in a master mode of operation, said method comprising the steps of:

30 inputting a password for entering into the master mode for obtaining access to the functions of the parental control user interface;

entering a criterion for blocking a television program from being viewed or recorded and overriding a blocked television program to be viewed or recorded;

35 selecting a program for viewing or recording;

1 prompting the user not in the master mode to enter the password if the selected program
meets the blocking criterion and does not meet the overriding criterion; and

 unblocking the selected program that meets the blocking criterion and does not meet the
overriding criterion so it can be viewed, if the user enters the password responsive to the prompt,
5 wherein the master mode of operation remains in effect until the television is turned off, the user
exits the master mode, or a time delay expires.

33. The method of claim 32, further comprising entering a second criterion for
blocking television programs from being viewed or recorded.

10 34. A method of exercising access control over a television using a parental control
user interface having different functions that are available to a user in a master mode of operation,
said method comprising the steps of:

 inputting a password for entering into the master mode for obtaining access to the
15 functions of the parental control user interface;

 entering a criterion for blocking a television program from being viewed or recorded;

 selecting a plurality of programs for viewing or recording;

 prompting the user not in the master mode to enter the password if the selected plurality
of programs meet the blocking criterion; and

20 unblocking the selected plurality of programs that meet the blocking criterion, if the user
enters the password responsive to the prompt.

35 35. A method of exercising access control over a television using a parental control
user interface having different functions that are available to a user in a master mode of operation,
said method comprising the steps of:

 inputting a password for entering into the master mode for obtaining access to the
functions of the parental control user interface;

 entering a first criterion for blocking television programs from being viewed or recorded;

 entering a second criterion for blocking television programs from being viewed or
30 recorded;

 selecting a program for viewing or recording;

 prompting the user not in the master mode to enter the password if the selected program
meets the blocking criteria; and

35 unblocking the selected program that meets the blocking criterion so it can be viewed, if
the user enters the password responsive to the prompt.

1 36. The method of claim 35, further comprising entering a third criterion for blocking television programs from being viewed or recorded.

5 37. A method of exercising access control over a television using a parental control user interface having different functions that are available to a user in a master mode of operation, said method comprising the steps of:

 inputting a password for entering into the master mode for obtaining access to the functions of the parental control user interface;

 entering a first criterion for blocking television programs from being viewed or recorded;

10 entering a second criterion for blocking television programs from being viewed or recorded;

 selecting a program for viewing or recording;

 prompting the user not in the master mode to enter the password if the selected program meets the blocking criteria; and

15 unblocking the selected program that meets the blocking criterion so it can be viewed, if the user enters the password responsive to the prompt, wherein the master mode of operation remains in effect until the television is turned off, the user exits the master mode, or a time delay expires.

20 38. The method of claim 36, further comprising entering a third criterion for blocking television programs from being viewed or recorded.

 39. An apparatus for parental control of a television receiver, comprising:

 a television display;

25 a tuner for receiving a plurality of television programs and passing one of the television programs;

 a memory for storing a blocking override list comprising information relating to at least one television program, and an enable override list comprising information relating to at least one television program;

30 a microprocessor selectively operable in a blocking mode and an unblocking mode, the microprocessor generating a blocking command in the unblocking mode only when the television program passed by the tuner corresponds to the information relating to one of the television program in the blocking override list, and generating a blocking command in the blocking mode only when the television program passed by the tuner does not correspond to the information relating to any one of the television programs in the enable override list; and

35

1 a blocking circuit for decoupling the television program from the television display in
response to the blocking command.

5 40. An apparatus for parental control of a television comprising:
a microprocessor;
a display screen;
a parental control user interface displayed on the screen having different functions, for
activating the microprocessor;
means for inputting a password for entering into the master mode for obtaining access to
10 the functions of the parental control user interface;
means for entering a first criterion for blocking television programs from being viewed or
recorded, or overriding blocked television programs to be viewed or recorded;
means for entering a second criterion for blocking television programs from being viewed
or recorded, or overriding blocked television programs to be viewed or recorded;
15 means for selecting a program for viewing or recording;
means for prompting the user not in the master mode to enter the password if the selected
program meets the blocking criteria and does not meet the overriding criteria; and
means for unblocking the selected program that meets the blocking criterion and does not
meet the overriding criteria so it can be viewed, if the user enters the password responsive to the
20 prompt.

41. An apparatus for parental control of a television comprising:
a microprocessor;
a display screen;
25 a parental control user interface displayed on the screen having different functions, for
activating the microprocessor;
means for inputting a password for entering into the master mode for obtaining access to
the functions of the parental control user interface;
means for entering a first criterion for blocking television programs from being viewed or
30 recorded;
means for entering a second criterion for blocking television programs from being viewed
or recorded;
means for selecting a program for viewing or recording;
means for prompting the user not in the master mode to enter the password if the selected
35 program meets the blocking criteria; and

1 means for unblocking the selected program that meets the blocking criterion, if the user
enters the password responsive to the prompt.

5

10


15

20

25

30

35

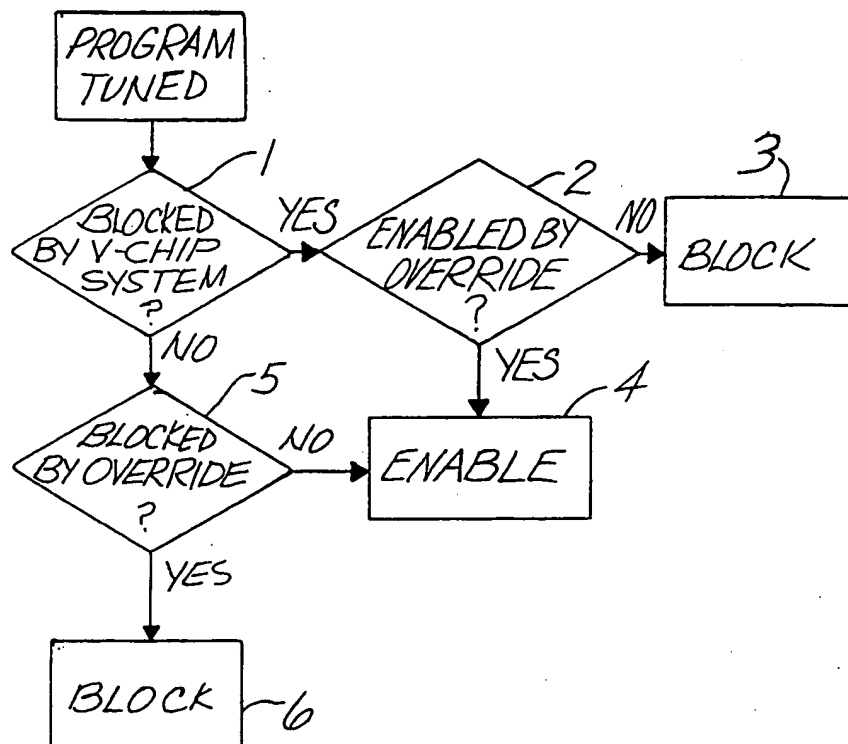*Fig. 1*

2/69



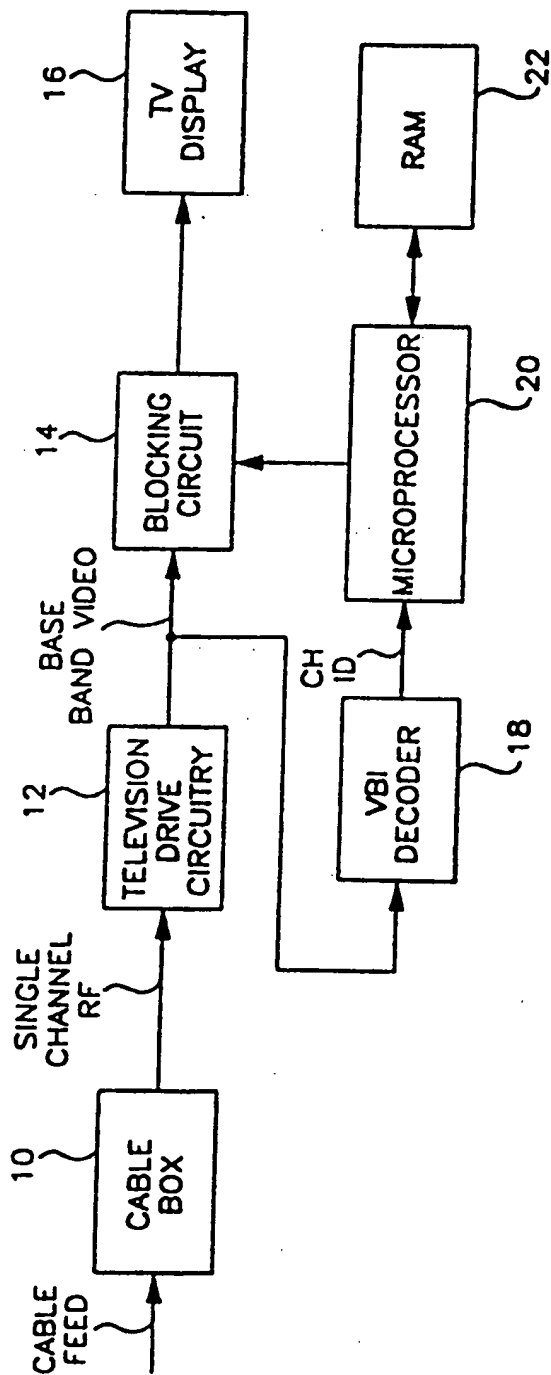
Fig. 2

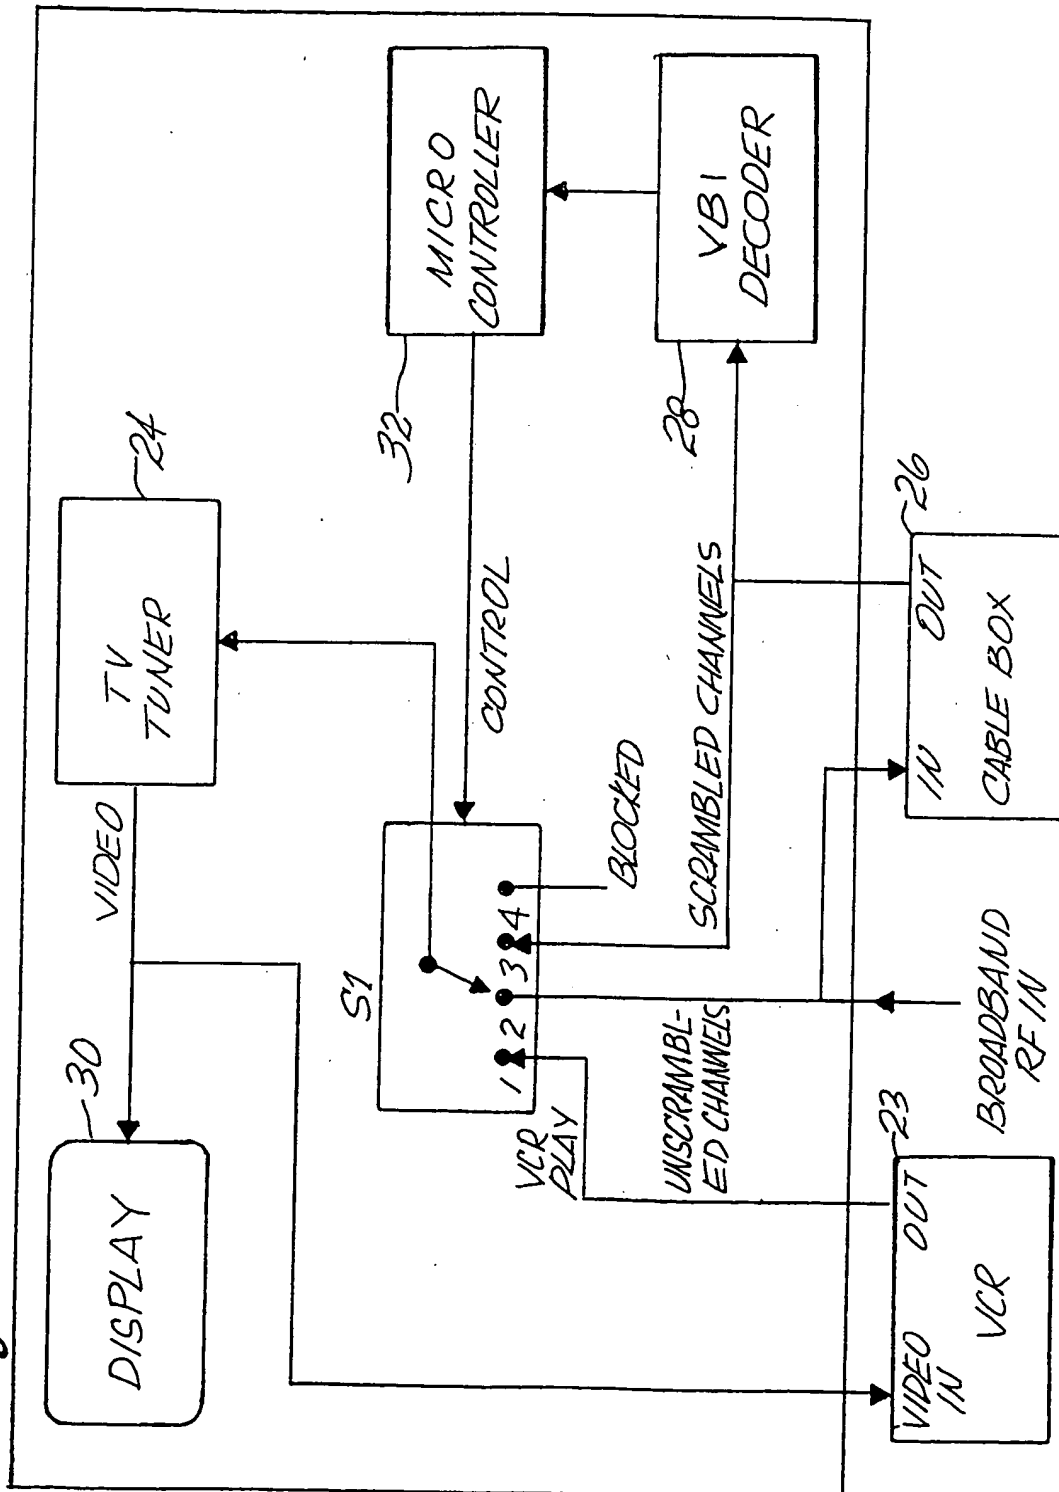Fig. 3



4/69

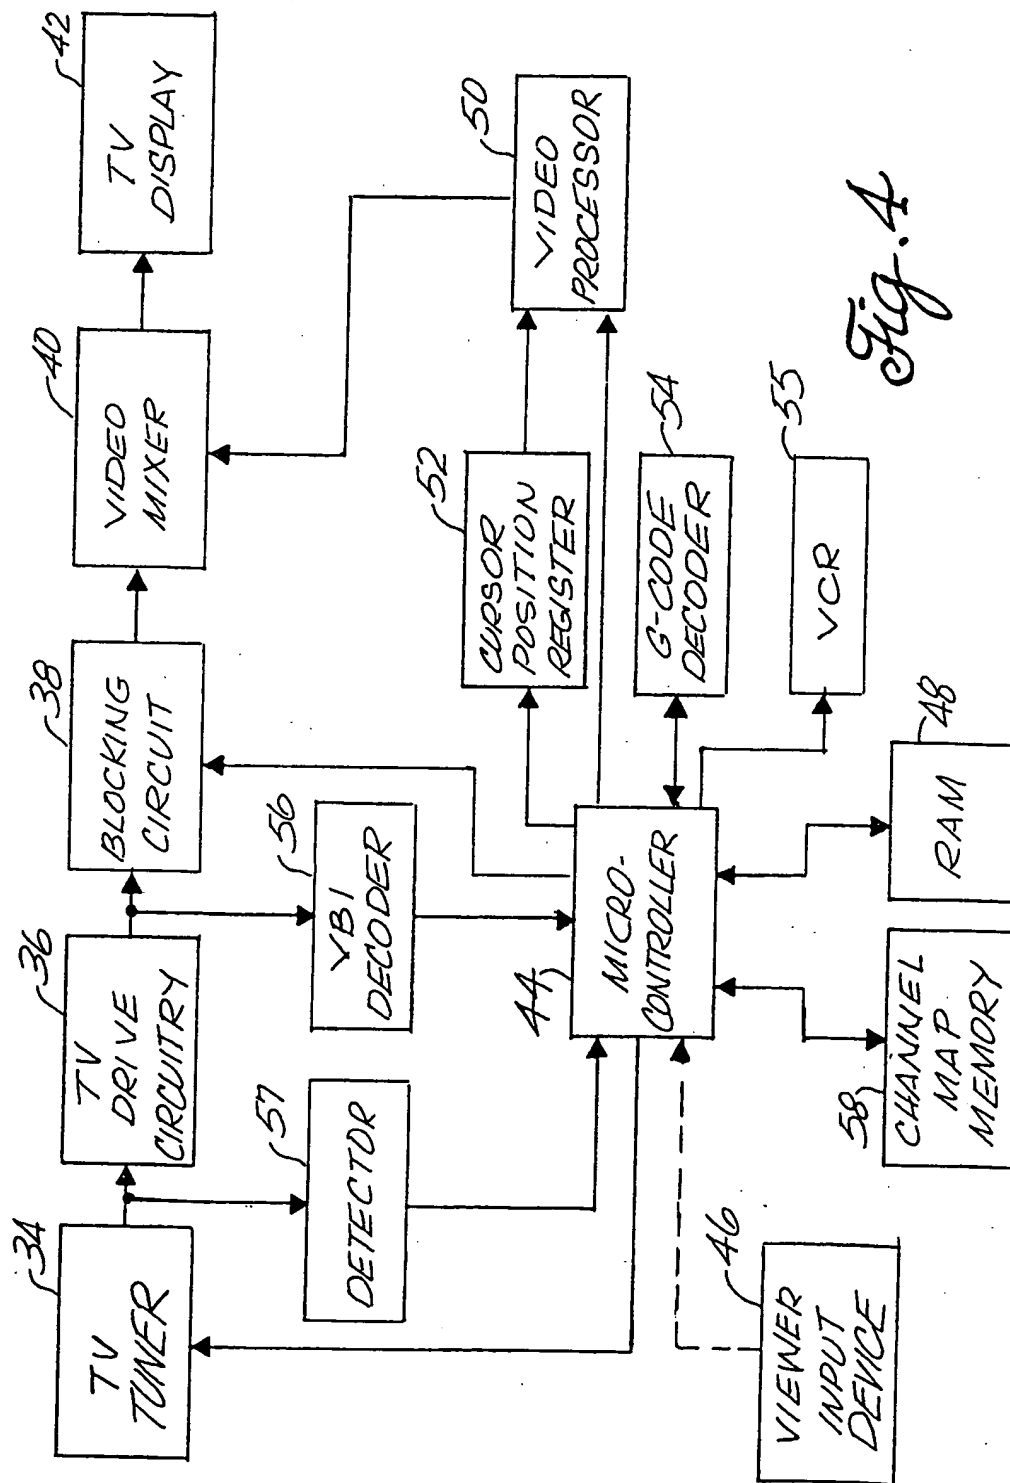

5/69

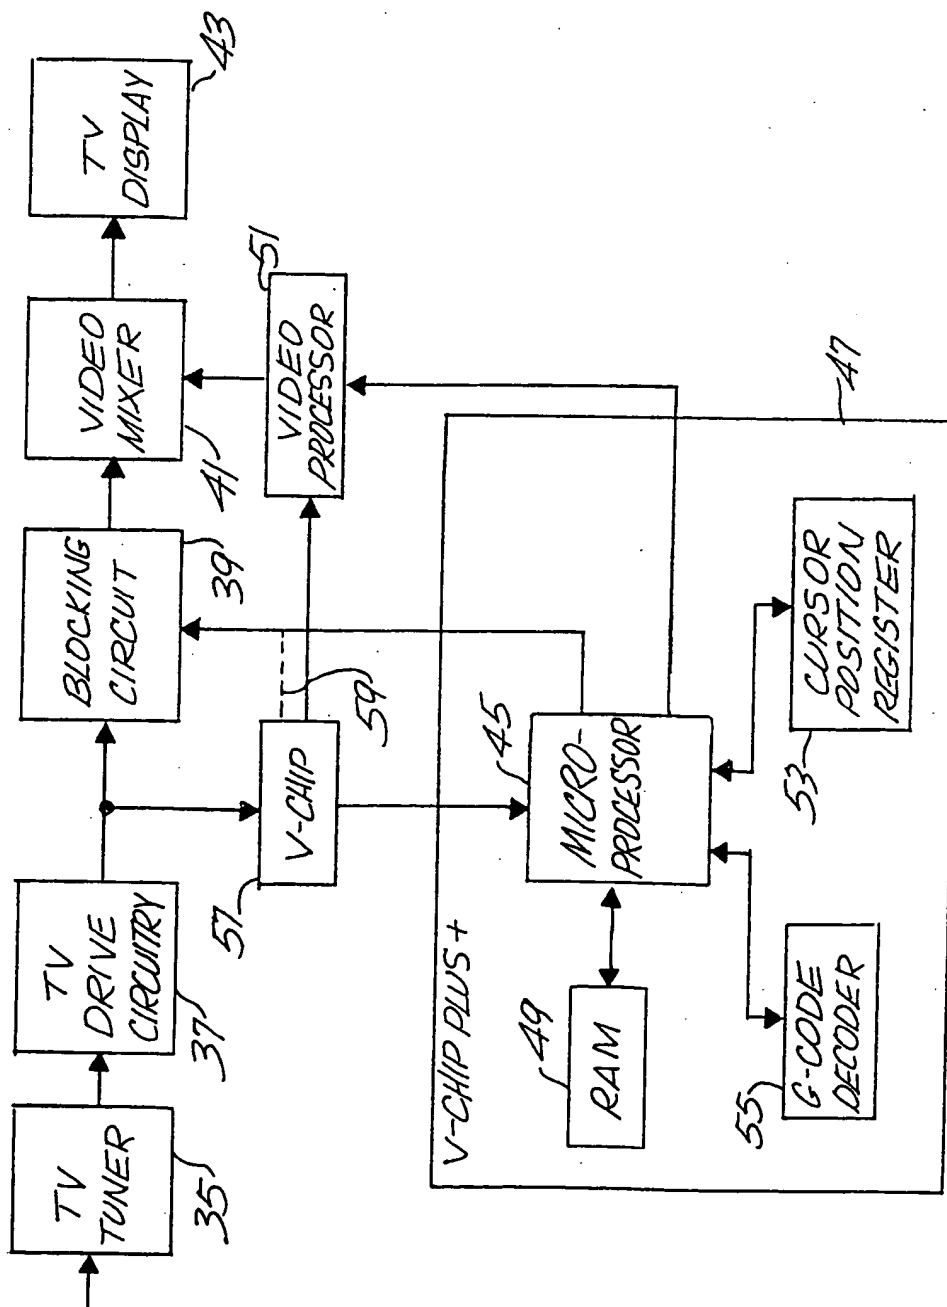


Fig. 5

7/69

Fig. 7

The diagram shows a table with two columns. Callout 76 points to the first column, 78 points to the second column, 74 points to the table structure, and 80 points to the row containing 'KCAL'.

KCBS	2
KEYT	3
KNBC	4
KTLA	5
CH	6
KABC	7
KCAL	9
FOX	X
KCOP	13
KSCI	18
KWHY	22
KVCR	24
KCET	28
KMEX	X

8/69

Fig. 8

80

KCBS	2			
KEYT	3			
KNBC	4			
KTLA	5			
CH	6			
KABC	7	X	REVIEW	V-CHIP PLUS+
KCAL	9	BLOCK THIS CHANNEL		
FOX	X			
KCOP	13			
KSCI	18			
KWHY	22			
KVCR	24			
KCET	28			
KMEX	X			

82

9/69

Fig. 9

82

KCBS	2			
KEYT	3			
KNBC	4			
KTLA	5			
CH	6			
KABC	X	✓	REVIEW	V-CHIP PLUS+
KCAL	9			
FOX	X			
KCOP	13			
KSCI	18			
KWHY	22			
KVCR	24			
KCET	28			
KMEX	X			

80

10/69

Fig. 10

80	KCBS	2			
	KEYT	3			
	KNBC	4			
	KTLA	5			
	CH	6			
	KABC	X	✓	REVIEW	V-CHIP PLUS+
	KCAL	9	VCR/V-CHIP PLUS+ REVIEW LIST		
	FOX	X			
	KCOP	13			
	KSCI	18			
	KWHY	22			
	KVCR	24			
	KCET	28			
	KMEX	X			

82

11/69

Fig. 11

VCR/V-CHIP PLUS+REVIEW LIST

84	07 SAT 01/10	11:15p	1h55m+15m
	11 M-F	07:30p	1h40m-15m
	28 M-F	04:00p	1h00m
86	35 WED 1/21	02:00p	2h10m+15m
88	28 SAT WKLY	11:00a	1h55m+30m
	09 M-F	10:00p	1h00m
90	02 SUN 01/18	10:00p	3h50m

△▽ MOVE

ENTER DELETE

CHANGE <◇> REDUCE PROGRAM LENGTH

CHANNEL
SURF EXIT

12/69

Fig. 12

	KCBS	2			
	KEYT	3			
	KNBC	4			
	KTLA	5			
	CH	6			
80	KABC	X	✓	REVIEW	V-CHIP PLUS+
	KCAL	9	GO TO V-CHIP PLUS+ SETUP SCREEN		
	FOX	X			
	KCOP	13			
	KSCI	18			
	KWHY	22			
	KVCR	24			
	KCET	28			
	KMEX	X			

13/69

Fig. 13

<i>V-CHIP PLUS+ SETUP SCREEN</i>	
<i>HIGHEST ACCEPTABLE RATING:</i>	
<i>TV-PG PARENTAL GUIDANCE</i>	
<i>**</i>	<i>MODERATE VIOLENCE</i>
<i>*** *</i>	<i>INTENSE SEXUAL</i>
<i>**</i>	<i>COARSE LANGUAGE</i>
<i>**</i>	<i>SUGGESTIVE DIALOGUE</i>
<i>Δ ▽</i>	<i>MOVE</i>
<i>CHANGE</i>	<i>◀▶ CHANGE</i>
<i>CHANNEL SURF</i>	<i>SAVE & EXIT</i>

14/69

Fig. 14

V-CHIP PLUS+ SETUP SCREEN

94 HIGHEST ACCEPTABLE RATING:
TV-PG PARENTAL GUIDANCE

	NO VIOLENCE
****	INTENSE SEXUAL
**	COARSE LANGUAGE
**	SUGGESTIVE DIALOGUE

△▽ MOVE CHANGE ◁▷ CHANGE

CHANNEL SURF SAVE & EXIT


95

15/69

Fig. 15


V-CHIP PLUS+ SETUP SCREEN	
HIGHEST ACCEPTABLE RATING:	
TV-PG PARENTAL GUIDANCE	
	GRAPHIC VIOLENCE
*****	EXPLICIT SEXUAL
*****	CRUDE LANGUAGE
*****	INDECENT DIALOGUE
△▽	MOVE
CHANNEL SURF	CHANGE ◀▶ CHANGE
SAVE & EXIT	

16/69

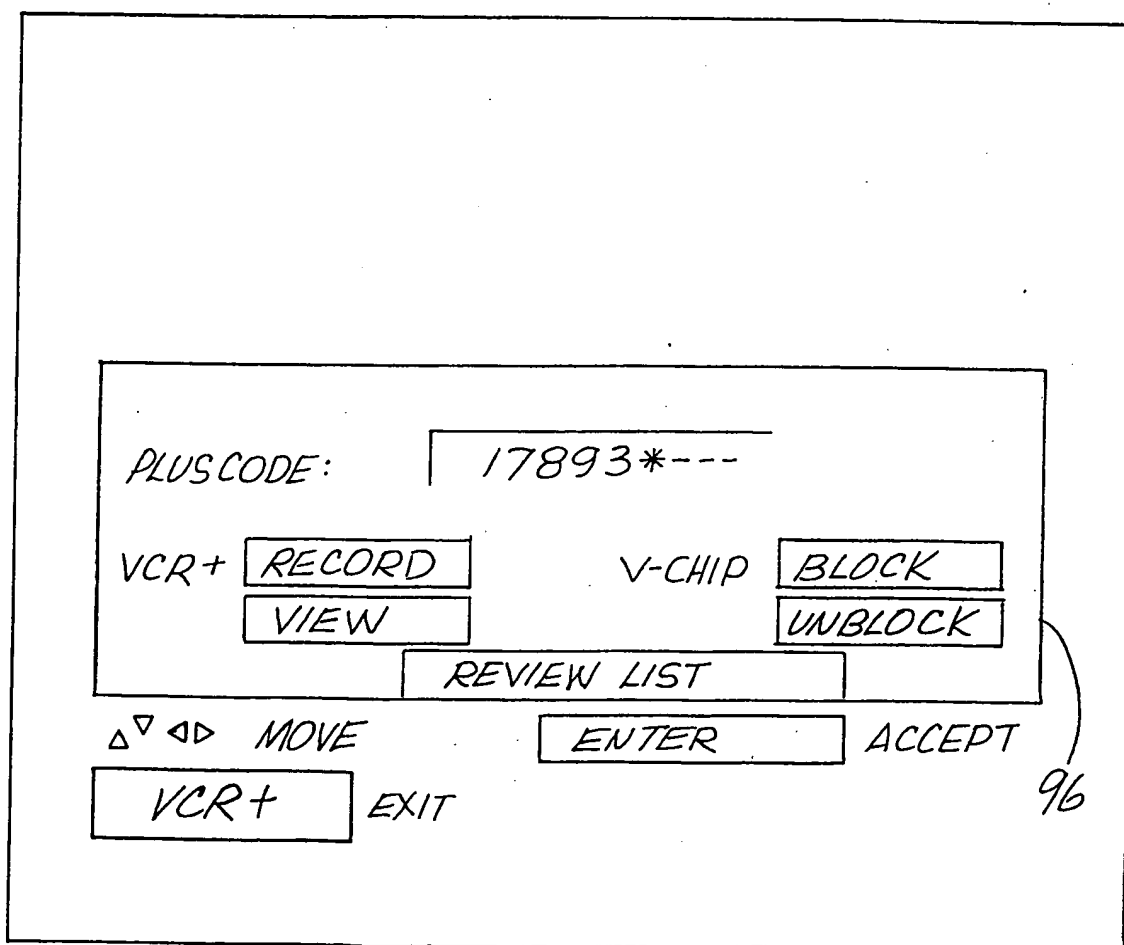Fig. 16

17/69

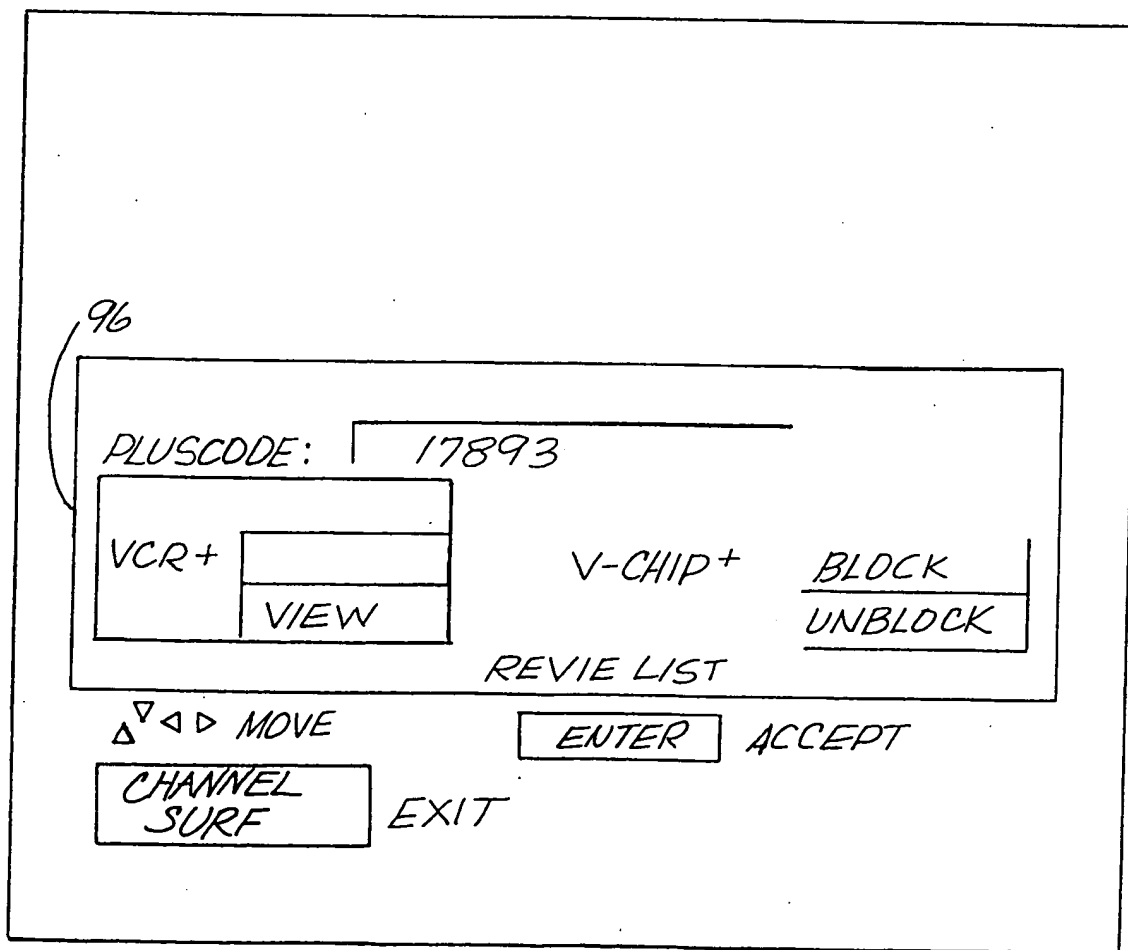Fig. 17



18/69

Fig. 18

TO RECORD THE SHOW:	
KCAL 9 THU 2/12 10:00p - 11:00p	
98- _____	<u>DAILY</u> <u>WEEKLY</u>
◀▶ MOVE	<u>ENTER</u> ACCEPT
<u>CHANNEL</u> <u>SURF</u>	EXIT

19/69

Fig. 19

VCR/V-CHIP PLUS + SETUP SCREEN	
COUNTRY	USA
ZIPCODE	91106
VIDEO SOURCE	CABLE BOX <i>100</i>
VER BRAND	PHILLIPS
CABLE BOX	PIONEER
NEXT	
▽△ HOME	ENTER ACCEPT
MENU EXIT	CHANGE ◀▶ CHANGE

20/69

Fig. 20

VCR/V-CHIP PLUS + SETUP SCREEN	
COUNTRY	USA
ZIPCODE	91106
VIDEO SOURCE	DIRECT CABLE 100
VCR BRAND	PHILLIPS
CABLE BOX	PIONEER
	NEXT 102
▽△ HOME	ENTER ACCEPT
MENU EXIT	CHANGE ◀▶ CHANGE